


| APPLICATION             | LENGTH | MODEL YR  | PART #    |
|-------------------------|--------|-----------|-----------|
| Ford F150 Regular Cab * | 55"    | 2004-2008 | 75105-01A |
| Ford F150 SuperCab *    | 72"    | 2004-2008 | 75105-01A |
| Ford F150 SuperCrew     | 79"    | 2004-2008 | 75105-01A |

\*Modification required to running board assembly. See Item 1 on page 3.

## INSTALLATION GUIDE

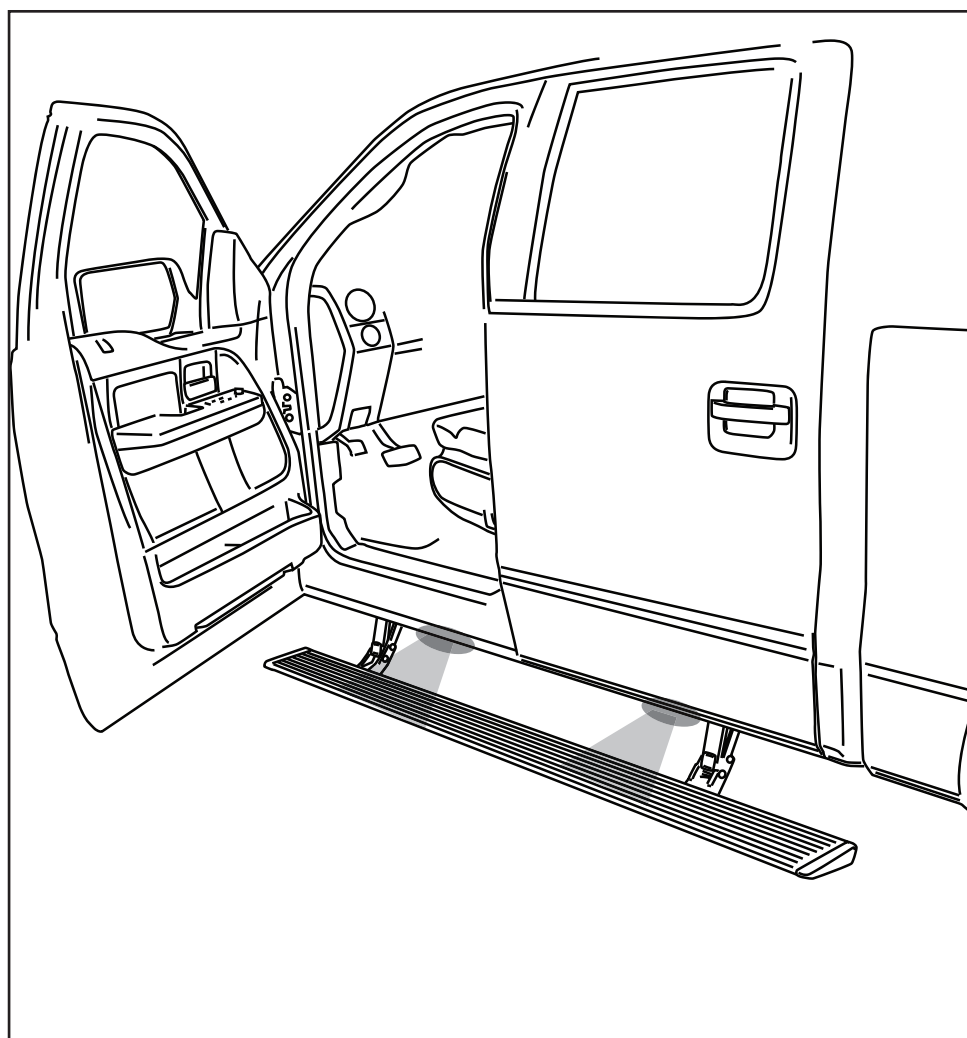

### INSTALLATION TIME

**3-5 Hours**

Professional installation recommended

### SKILL LEVEL



4= Experienced

### TOOLS REQUIRED

- ☐ Safety goggles
- ☐ Measuring tape
- ☐ Flat blade screwdriver
- ☐ Phillips head screwdriver
- ☐ 8 mm socket
- ☐ 10 mm socket
- ☐ 13 mm socket
- ☐ 13 mm end wrench
- ☐ Ratchet wrench and extension
- ☐ Wire crimpers
- ☐ Wire stripper
- ☐ Corrosion inhibitor
- ☐ 3/16" hex key wrench (allen wrench)
- ☐ 4mm hex key wrench (allen wrench)
- ☐ Electrical tape
- ☐ Weather proof caulking (silicone sealer)

### WARRANTY

**5-Year Limited Warranty**


REALTRUCK TECH SUPPORT 1-888-983-2204 (Press 2) Monday - Friday, 8:00 AM - 5:00 PM EST

Designed and manufactured by RealTruck AMP Research® • Made in Mexico  
 Patent Protected. Please see our product site for applicable patents. [www.realtruck.com/b/amp-research/](http://www.realtruck.com/b/amp-research/)  
 © RealTruck Group, Inc., 2024 • Three-year limited warranty. • Professional installation is recommended.

## INSTALLATION GUIDE

### Attaching motor to linkage assembly

The motors must be attached to the linkage assemblies before continuing the installation process.

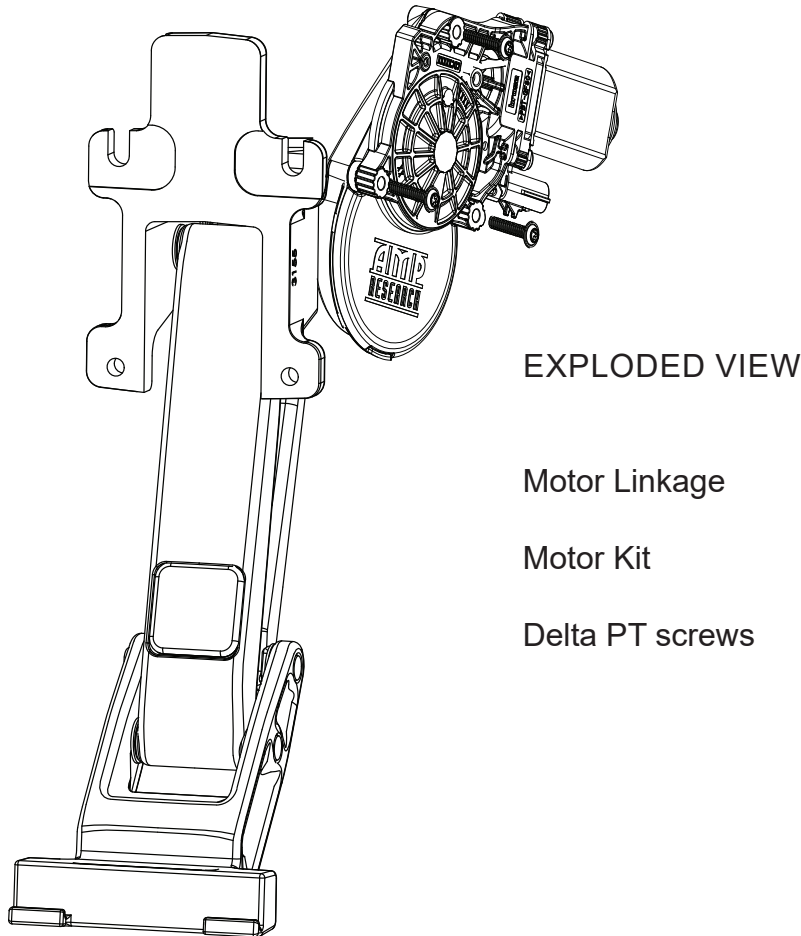

### CAUTION: HANDLE WITH CARE.

To ensure our customers receive all components with full integrity, we pack the motors separate from their linkage assemblies. This requires that the installer position and fasten the motor before continuing with the install. Please follow the instructions below and handle the assembly carefully.

CAUTION: Dropping the assembly or any excessive impact MAY cause damage to the motor.

#### Instructions:


1. Position the gear cover in place as shown if not already in place.
2. Seat motor into position on the three mounting bosses. This may require an adjustment of the gear by moving the swing arms.
3. After seating into place, fasten the motor with the three motor mount screws with 4mm Hex Head. Tighten screws to 36 in-lbs (4N-m). **Do not over torque.**

**Note: Some Applications require modification.**


| Application | Cut Length                     |
|-------------|--------------------------------|
| Super Crew  | 79" (No Modification Required) |
| Super Cab   | 72" (Trim 7")                  |
| Regular Cab | 55" (Trim 24")                 |

## PARTS LIST AND HARDWARE IDENTIFICATION


**1** x2  
Running Board assembly

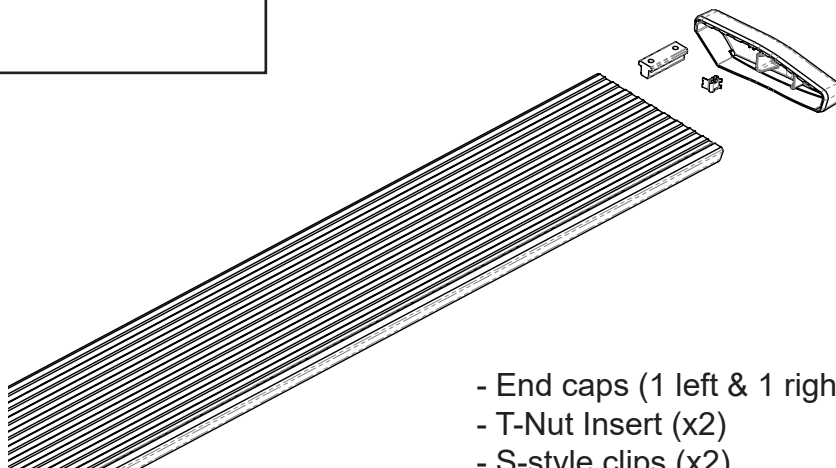


**2** x2  
Idler linkage assembly

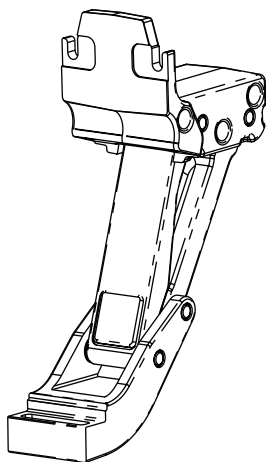


**3** x2  
Motor linkage assembly

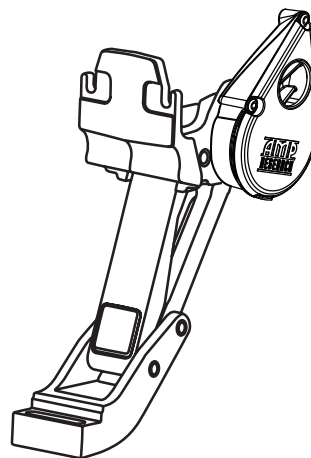

**4**  
Wire harness

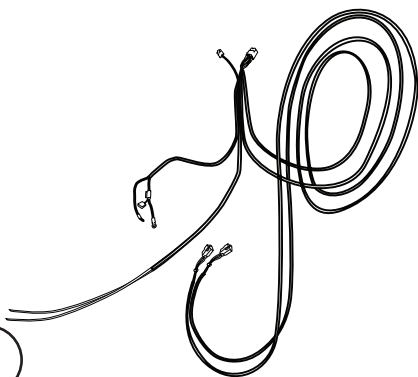


**5**  
Controller STA

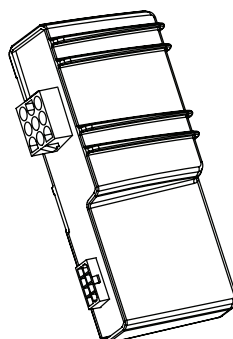


**6** x4  
Posi-Tap™ (Red/Grey)




## PARTS LIST AND HARDWARE IDENTIFICATION

 


**7** x8  
Hex bolt

 


**8** x9  
Hex Bolt

 

**9** x8  
Socket cap screw

 


**10**  
Nylock Nut

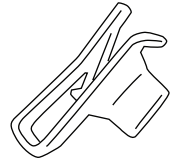


**11** x8  
U-nut




**12** x16  
Washer Black

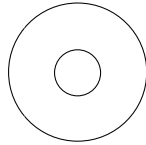


**13**  
Washer

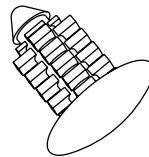


**14** x2  
Rivet

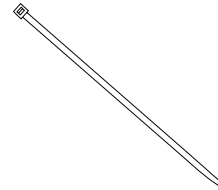


**15** x20  
Cable Ties 7"

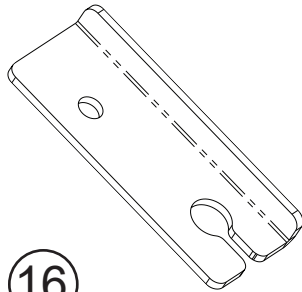


**16**  
Bracket

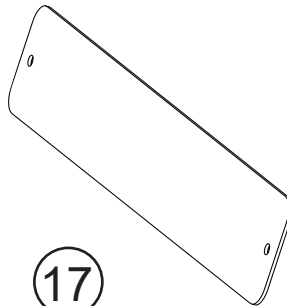


**17**  
Plug Shield

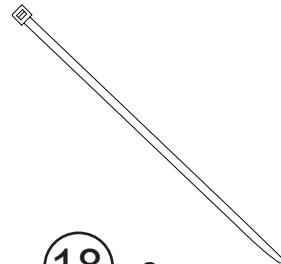


**18** x2  
Cable Ties 11"

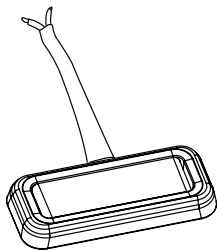

**19** x4  
LED Lamp

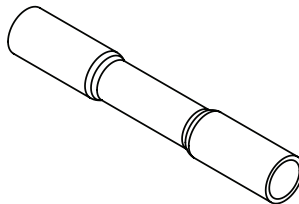


**20** x8  
Butt Connector

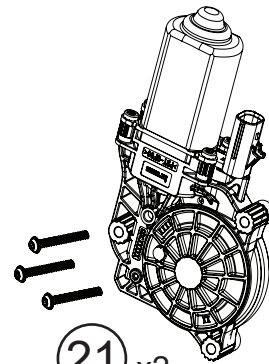


**21** x2  
Motor kit

Find wire harness cover on the frame under the driver's door. Remove both tree clips and remove wire cover.

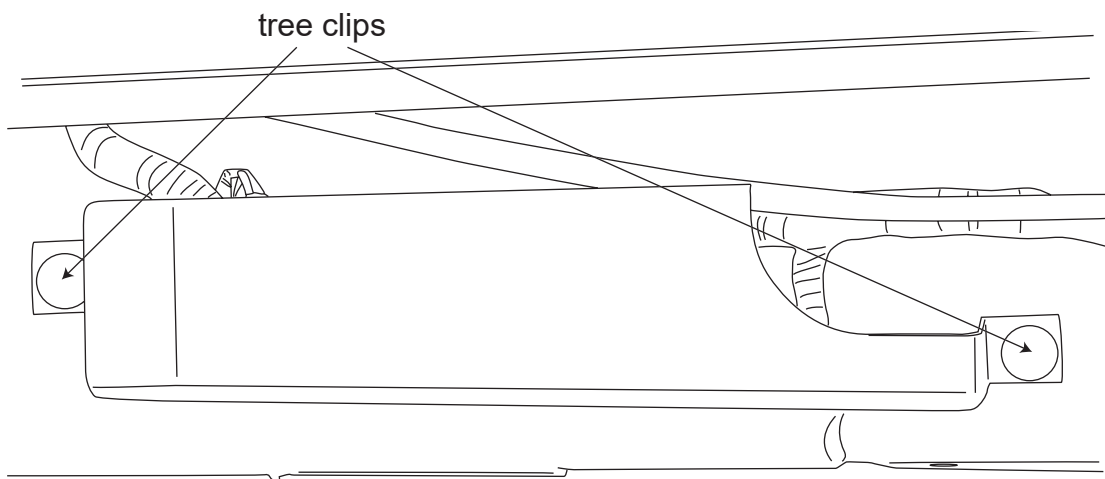


Bend new cover into position and attach with the large tree clips supplied with hardware.

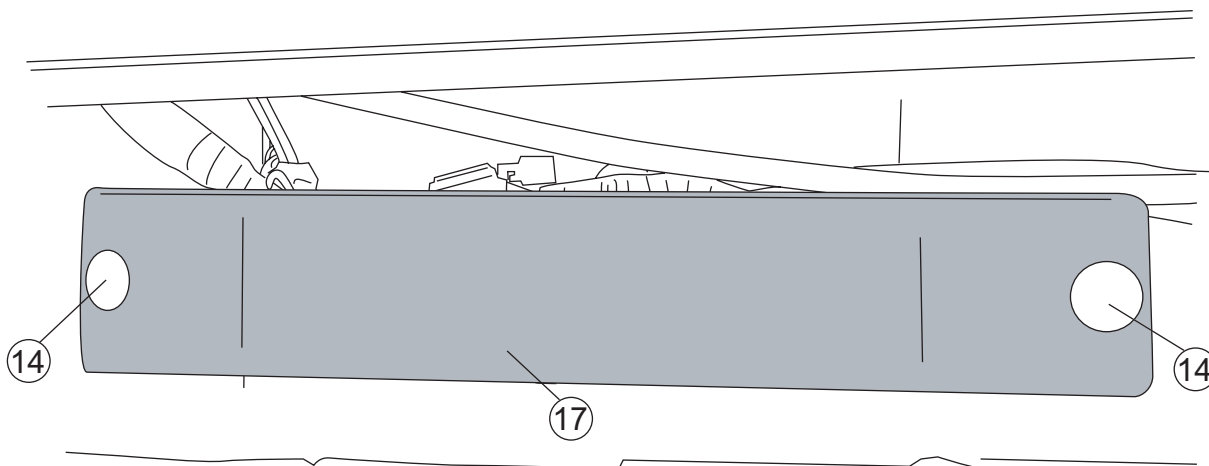


Mount brake cable bracket extension and then raise brake cable into position.

Note: First pull brake cable downward to create slack before raising into position.

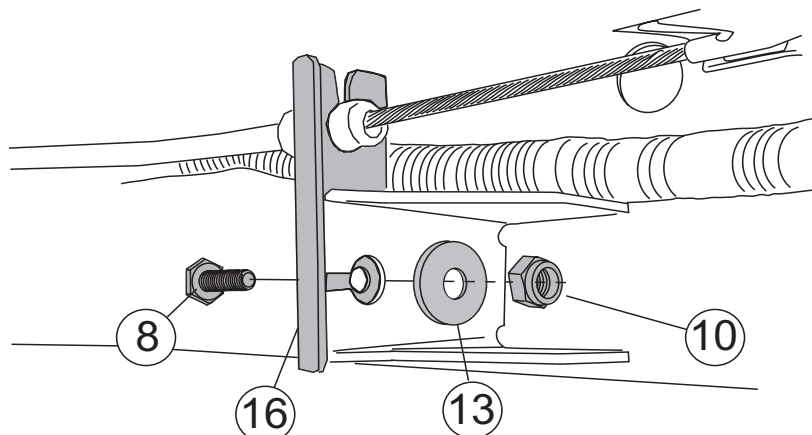

Locate mounting points; first and last set of holes on the inner sill.


Motor Linkage mounts toward the rear of the truck, with the exception of the passenger side of SuperCab. With the SuperCab, mount the motor linkage in front on the passenger side. Extra wire on passenger side can be tied up with supplied wire ties. **Light wires will need to be pulled out of the harness to allow lights to be installed in proper position.**

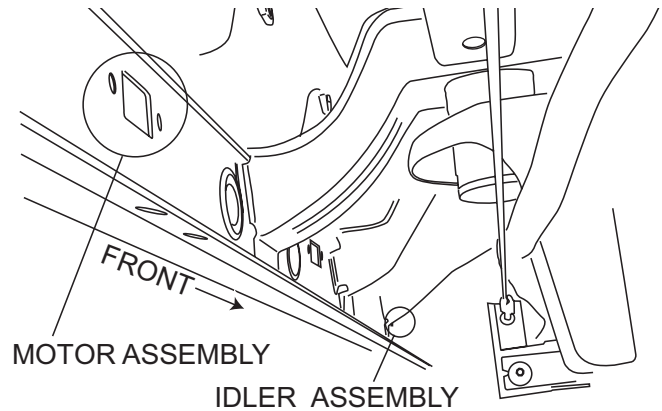

4

Drivers side pictured here.


Install J-clips and start bolts with washers installed.

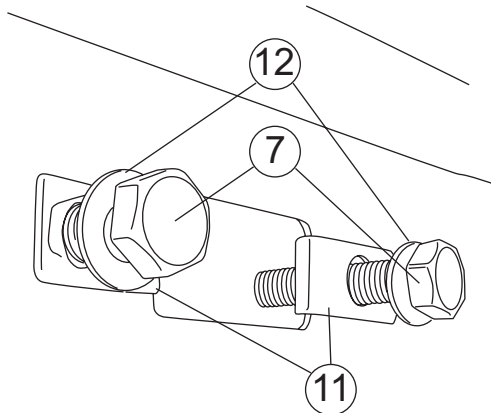

5

Mount idler assembly and motor assembly.

**Note: Filing of sheet metal edge may be required if the sheet metal holes are misaligned.**

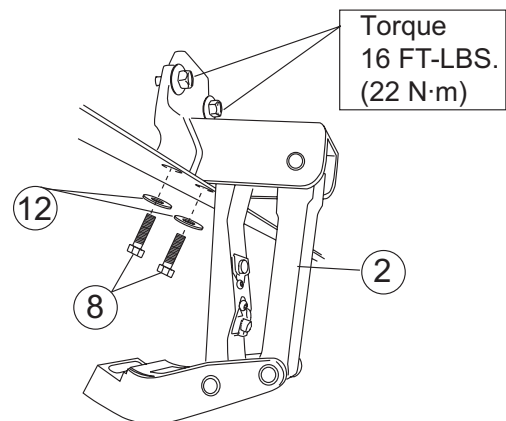


6

Remove fan shroud to allow for wire routing. Shroud will be reinstalled in a later step.



7


Mount controller with the two 11" tie wraps to factory conduit. Route wire harness under core support and down toward controller. Attach harness to controller (make sure connector locking tabs fully engage).

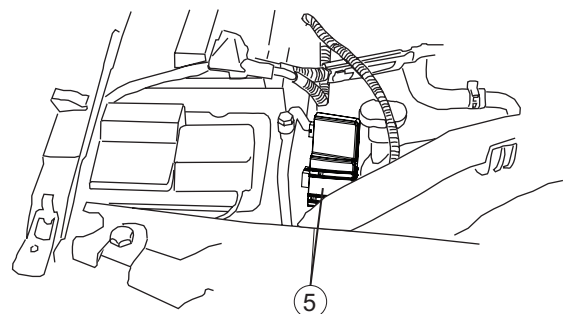


8

Secure harness with tie wraps.

Remove fuse.

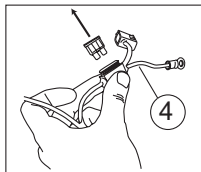


Connect red and black power leads to battery. Red lead goes to positive. Route shorter leg of harness down passenger-side wheel well.

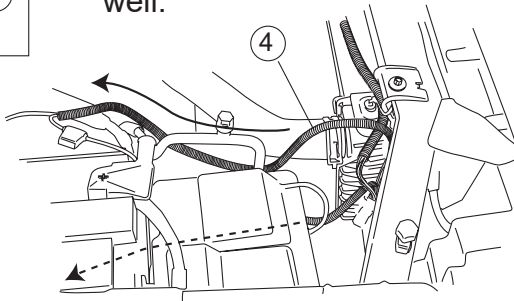


9

Route longer leg of harness across front and down under driver side. Secure harness with tie wraps and reinstall shroud.

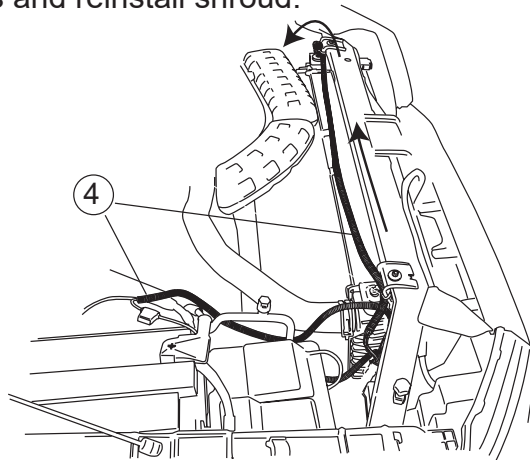


10

Route longer leg of harness down along driver-side wheel well and along frame of vehicle. Secure with tie wraps.

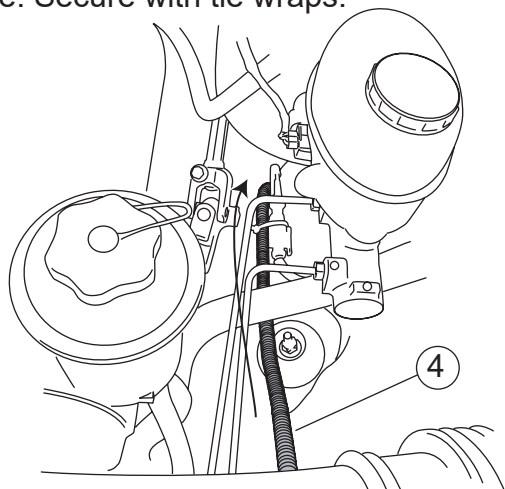


11

Puncture grommet and thread all four trigger wires up into the cabin of vehicle. The grommet is located on driver-side behind forward linkage assembly.

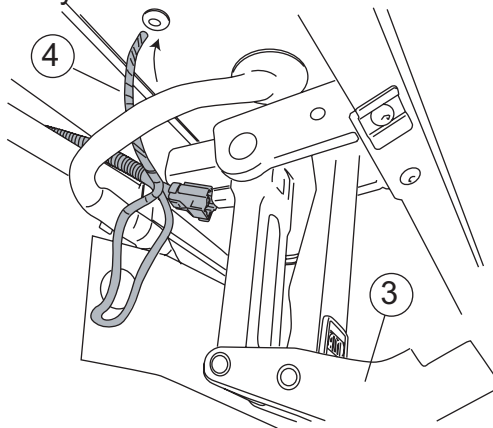


12

Remove drivers-door sill plate and pull back carpet to reveal trigger wires threaded through grommet.

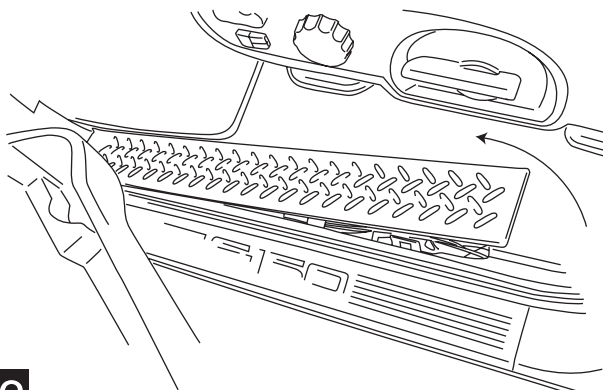

13


Pull wires from grommet and route back along factory wire harness to back door sill plate.

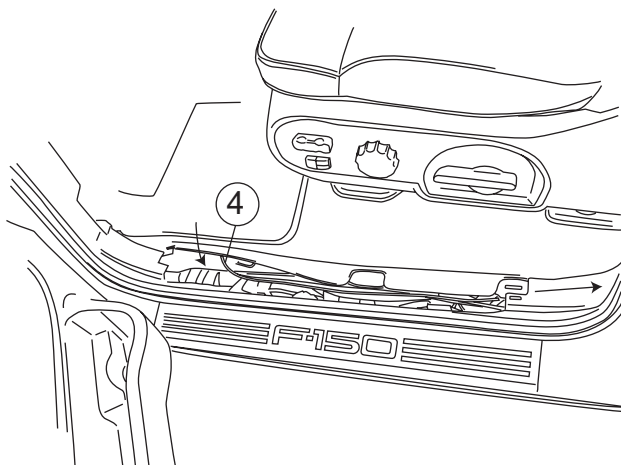

14




Remove rear door step plate and open wire bundle. Route trigger wires to rear door sill plate.

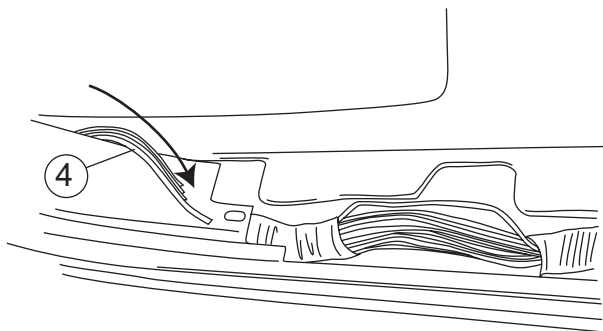

15


Locate the appropriate signal wires as noted below. Note: There may be up to five Black with Blue Stripe wires; use the one that looks unique (ie. different blue stripe... weight and shade).

|              | SuperCrew      | SuperCab       | Regular Cab    |
|--------------|----------------|----------------|----------------|
| Driver Front | Black / Yellow | Black / Yellow | Black / Yellow |
| Pass. Front  | Black / Pink   | Black / Pink   | Black / Pink   |
| Driver Rear  | Black / Blue   |                |                |
| Pass. Rear   | Black / White  |                |                |

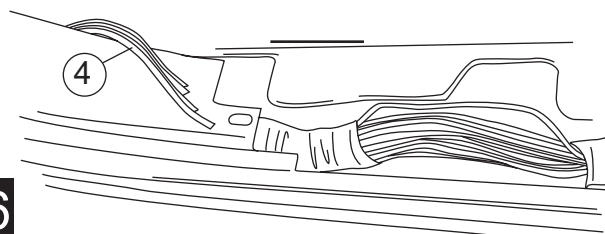


16

Using supplied Posi-Taps™, splice Power Step trigger wires into the corresponding door ajar wires. The SuperCrew (having 4 independent doors) is the only application that will use all four wires; tape off the two unused trigger wires on the SuperCab and Regular Cab.

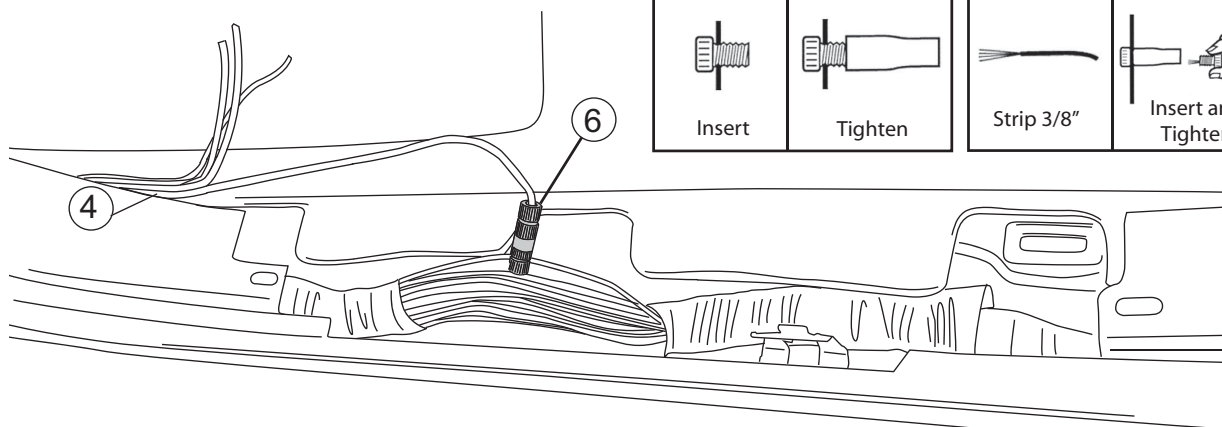


17

Attach step, sliding the mounting T-nut into position.

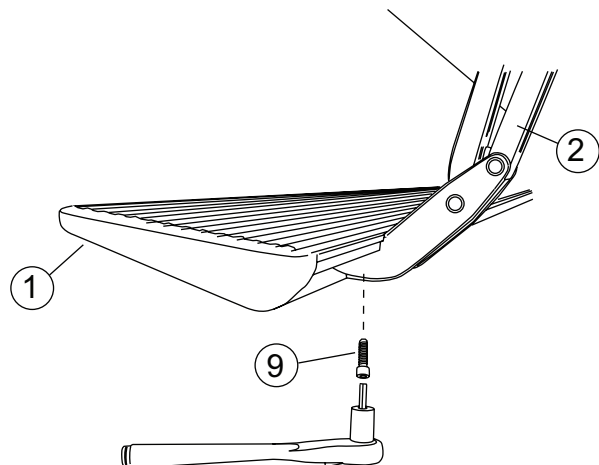


18

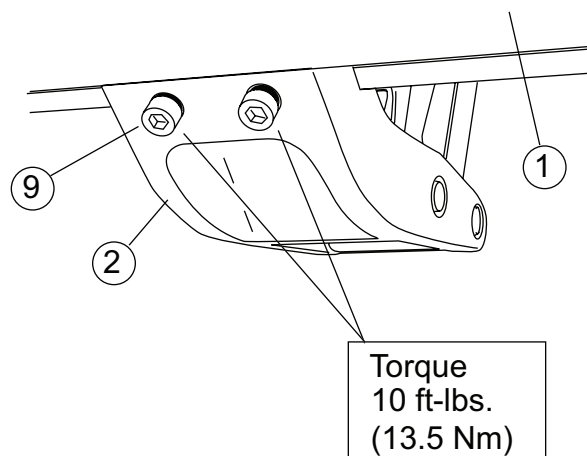

19




Route wire harness towards rear of vehicle inside body support gussets. Secure using supplied cable ties. Run wire harness to rear motor assembly and insert plug onto motor.

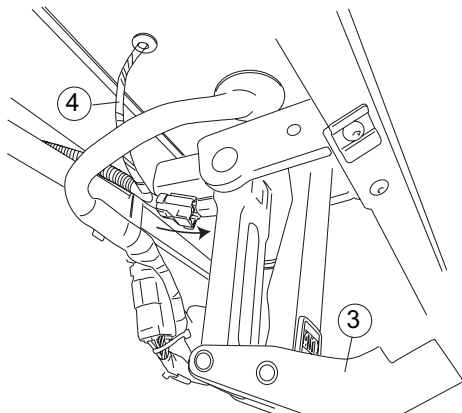

20


On each side of the vehicle measure from the front edge of door line on the pinch weld to the specified lengths below. Measure at 24" for front LED Light and 65" for rear LED Light.

NOTE: On regular cab models rear light will be mounted at 50"

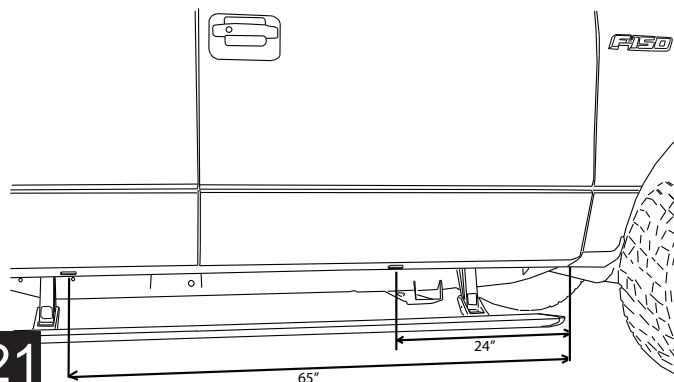


21

Affix lamps to rocker panel surface. Make sure the lamp is affixed to a clean, flat surface. There is a step down midway across the surface. Affix lamp just outside of step down.

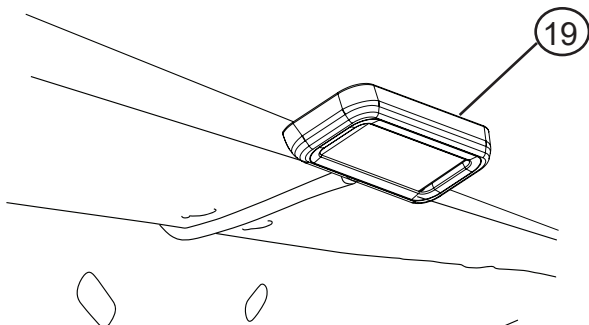


22

Using supplied butt connectors, connect the lamp wires. Red to Red, Black to Black. Once Crimped use heat gun to shrink tube.

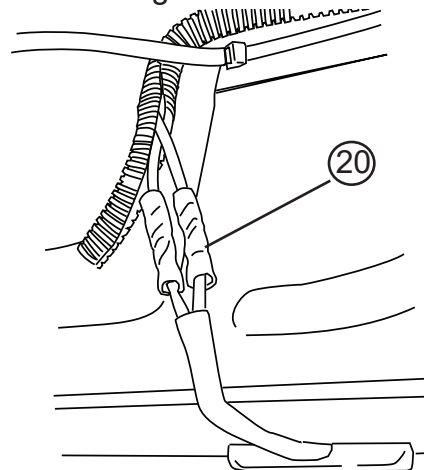


23

Close and wrap with conduit and electrical tape. Secure all loose wires with cable ties, with lamp wires pulled upward to avoid any wire snagging.

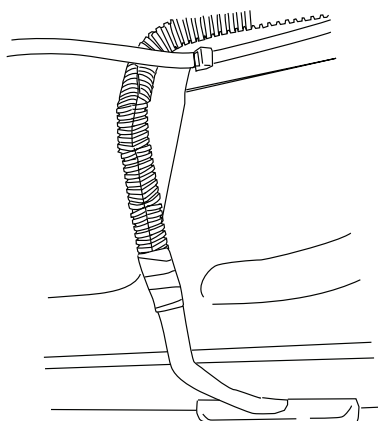


24

Replace fuse.

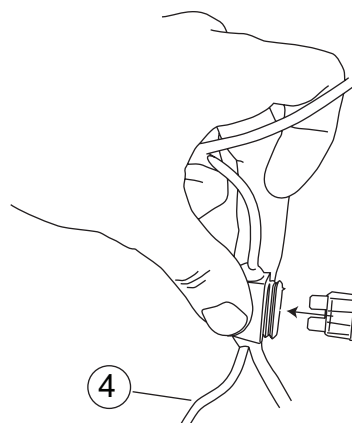

25

Check that all doors activate the Power Step and the LED Lights work when doors open and close. Reinstall any remaining trim panels.

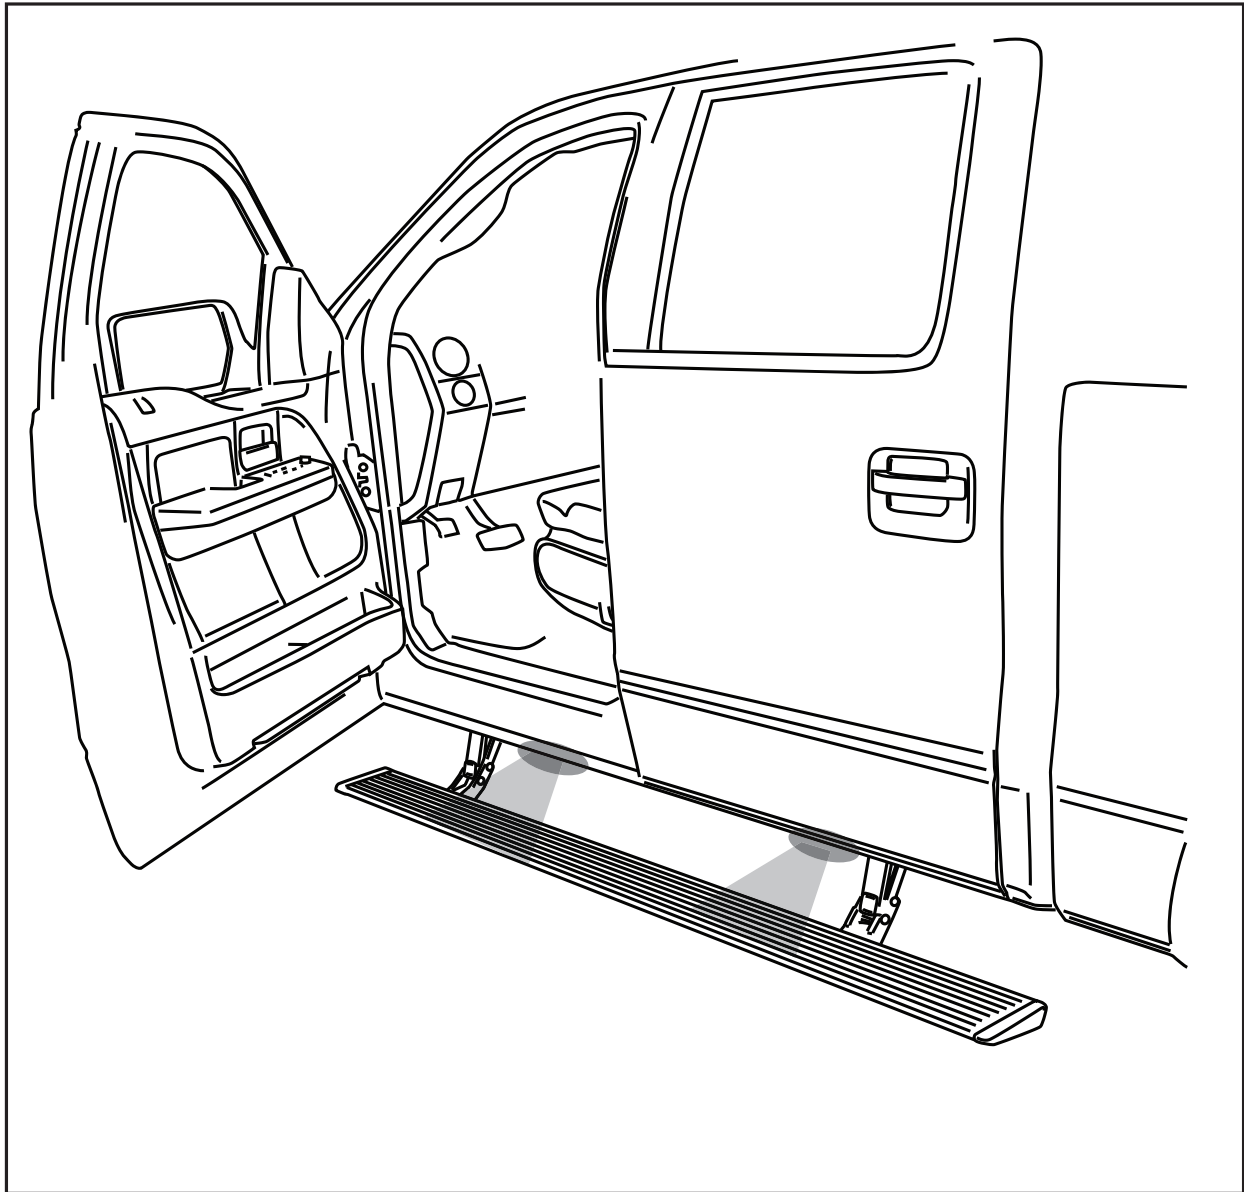

#### FINAL SYSTEM CHECK

Check that all doors activate the PowerStep and the LED lights work when doors open and close.

**NORMAL OPERATION:** When the doors open, PowerStep automatically deploys from under the vehicle. When the doors are closed, PowerStep will automatically return to the stowed/retracted position. ***Note that there is a 2-second delay before the PowerStep returns to the stowed/retracted position.***

**CORRECT OPERATION OF LIGHTS:** All four lamps will illuminate upon opening any door of vehicle. Lamps will stay on until restowing of both Power Steps or until 5 minutes has expired with the doors open. When the lights timeout after 5 minutes, they can be reilluminated by closing and opening any door of vehicle.



AMERICAN DESIGNED & ENGINEERED

Thank you for your recent RealTruck purchase.

## REGISTER YOUR PRODUCT TODAY FOR FASTER SERVICE & PRODUCT UPDATES

Please visit:

**<https://realtruck.com/warranty-registration/>**  
or scan the QR Code



### Product Registration Benefits:

- Ensure we have your purchase receipt and product info in our system which is required for warranty.
- Faster and easier access to customer service and tech support in the unlikely event you need warranty or product support.
- Registration helps us keep you up to date on product information and offers.

To view other RealTruck products that may be offered for your vehicle.

**Please visit: [www.realtruck.com](http://www.realtruck.com)**

Rev 05.30.24

## **Congratulations on your purchase of the genuine RealTruck / AMP Research PowerStep!**

### **Here's what you should know...**

**POWER-DEPLOYABLE RUNNING BOARDS OPERATION:** RealTruck / AMP Research PowerStep running boards automatically move when the doors are opened to assist entering and exiting the vehicle.



#### **Automatic power deploy:**

The running boards will extend down and out when the doors are opened.

#### **Automatic power stow:**

The running boards will return to the stowed position when the doors are closed. There will be a 2-second delay before the running boards move to the stowed position.


#### **Automatic stop:**

If an object is in the way of the moving running board, the running board will automatically stop. To reset, clear any obstruction, then simply open and close the door to resume normal operation.



#### **Manually set in the deployed (OUT) position for access to the roof:**

The running boards can be manually set in the deployed position by firmly holding the step down with your foot while at the same time closing the door. To resume normal operation, open and close the door.

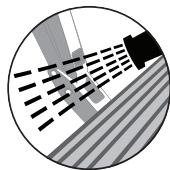

**Maintenance:** In adverse conditions, debris such as mud, dirt, and salt may become trapped in the running board mechanism, possibly leading to unwanted noise. If this occurs, manually set the running boards to the deployed position and flush the front and rear hinge arms with a high-pressure car wash wand. Avoid spraying the motors directly. After washing, apply silicone spray lubricant to the hinge pivot pins. Do not apply silicone, wax or protectants like Armor All® to the running board stepping surface.

**Caution!** Keep hands away when the running board is in motion.

## **5-YEAR LIMITED WARRANTY**

RealTruck / AMP RESEARCH warrants this product to be free from defects in material and workmanship for FIVE (5) YEARS FROM DATE OF PURCHASE, provided there has been normal use and proper maintenance. This warranty applies to the original purchaser only. All remedies under this warranty are limited to the repair replacement of the product itself, or the repair or replacement of any component part thereof, found by the factory to be defective within the time period specified. The decision to repair or replace is wholly within the discretion of the manufacturer.

This warranty specifically excludes labor. If you have a warranty claim, first you must call our factory at the number below for instructions. You must retain proof of purchase and submit a copy with any items returned for warranty work. Upon completion of warranty work, if any, we will return the repaired or replaced item or items to you freight prepaid. Damage to our products caused by accidents, fire, vandalism, negligence, misinstallation, misuse, acts by nature or by defective parts not manufactured by us, is not covered under this warranty.

ANY IMPLIED WARRANTIES OF MERCHANTABILITY AND/OR FITNESS FOR A PARTICULAR PURPOSE CREATED HEREBY ARE LIMITED IN DURATION TO THE SAME DURATION AND SCOPE AS THE EXPRESS WRITTEN WARRANTY. OUR COMPANY SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGE.

Some states do not allow limitations on how long an implied warranty lasts, or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights that vary from state to state.

**FOR WARRANTY ISSUES WITH THIS PRODUCT PLEASE CALL REALTRUCK TECH SUPPORT 1-888-983-2204**

## **WARNING**

Be sure to read and precisely follow the provided instructions when installing this product. Failure to do so could place the vehicle occupants in a potentially dangerous situation. After installing or reinstalling, re-check to insure that the product is properly installed.