

These instructions remain the property of Rhinorack Australia Pty Ltd and may not be used or changed for any other purpose than intended.

43101 - Rhino Pioneer Jack Holder Bracket



2

Insert Plate Nuts into Alloy Tray

Insert the plate nuts into the slot at the front of the Alloy Tray and slide each nut to the desired mount location.

Note: Jack must be fitted to the **Rear Left** of tray (with base plate of jack at rear) or **Front Right** of tray (with base plate of jack at front). This provides the correct orientation for the jack to be transported in a safe and secure manner.



Fit Jack Holder Brackets to Alloy Tray

Fit the jack holder brackets to alloy tray using the hardware shown below. Repeat this process for both the bolt type and clamp type brackets. Fasten securely using the allen key provided in the kit (tighten to 6-8Nm).



3 Fit Jack to Jack Holder Brackets

Place the high lifting jack on the jack holder brackets and allow the swing clamp to rotate down over the jack as shown. Tighten the swing clamp bolt with your fingers to retain the jack while you fix the other end. Insert the bolt hardware through the jack and fasten to the jack holder bracket as shown below right. Tighten both bolts securely with a 16mm spanner (tighten to 17-19 Nm)

