

Installation Guide for Jeep Gladiator PN 60698



******* Please compare the parts in the box with the bill of materials provided *****
to ensure that you have all the parts necessary for this installation.**

These instructions have been written to help you with the installation of your Borla Performance exhaust system. Please read this document completely before beginning the installation of your system.

To ensure this part number fits your specific model year, please visit our website for the latest model year listings at www.BORLA.com

Thank you for purchasing a Borla Performance exhaust component.

This Borla Performance exhaust component (PN 60698) is designed for the Jeep Wrangler **and** Gladiator, equipped with a 3.6L V6 engine and 4X4 automatic or manual transmission.

Borla Performance Industries recommends that an exhaust shop or professional after market parts installer, who has all the necessary equipment, tools and experienced personnel needed for proper installation, should perform the installation of this system. However, if you decide to perform the installation, we recommend someone should help you. Ensure the installer uses all under car safety precautions including eye protection.

Please take time to read and understand the following...

By installing your Borla Performance exhaust system, you indicate that you have read this document and you agree with the terms stated below.

It is the responsibility of the purchaser to follow all installation instruction guidelines and safety procedures supplied with your Borla Performance exhaust system.

Borla Performance Industries assumes no responsibility for damages occurring from misuse, abuse, improper installation, improper operation, lack of responsible care, or all previously stated reasons resulting from incompatibility with other manufacturer's products and/or systems.

Included with your Borla Performance exhaust system is a warranty card. Please read it carefully before you begin any work on your vehicle. If you should have any questions regarding our warranty policy, installation, or any other matter pertaining to your new Borla Performance exhaust system, please give us a call at the number provided on the warranty card.

Minimum Required Tool List:


TOOLS:

1. 3/8" drive ratchet
2. 3/8" drive extension 3"
3. 3/8" drive extension 6"
4. 13mm socket
5. 15mm socket
6. 18mm socket
7. 7/8" wrench
8. Reciprocating saw w/ metal-cutting blade

SHOP SUPPLIES:

1. Spray lubricant

Borla Performance - Bill of Materials

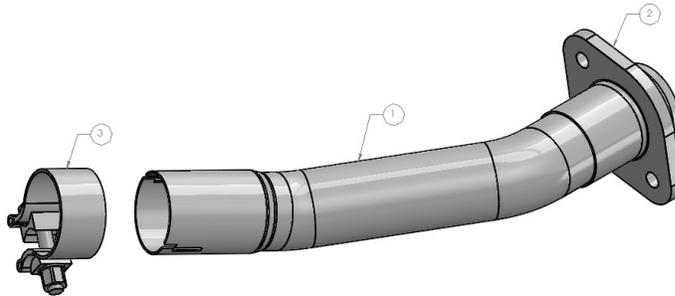

ITEM NO.	QTY.	PART NUMBER	DESCRIPTION
1	1	57217	LOOP DELETE ASSEMBLY
2	1	46830	2-BOLT FLANGE: DIA 2.258 PORT, DIA .44 BOLT HOLES
3	1	90115	S/S ACCUSEAL CLAMP Ø2.00

Caution!!! *Never work on a hot exhaust system. Serious injury in the form of burns can result if the vehicle has been in use and the exhaust system is hot, allow vehicle to cool for at least 1 hour. Always wear eye protection when working under any vehicle.*

Note: *It is our recommendation that you use a hoist or hydraulic lift to facilitate the installation of your new Borla Performance Exhaust System.*



Note: *Taking all under car safety precautions, lift the vehicle using a hoist or hydraulic lift. Once this has been done, you may begin the removal of your old exhaust system from your vehicle.*

Note: *Before removing the original exhaust system from your vehicle, please compare the parts you have received with the bill of materials provided on the previous page to assure that you have all the parts necessary for the installation of your new Borla Performance Exhaust System.*


Note: *With a used vehicle, we suggest a penetrating spray lubricant to be applied liberally to all exhaust fasteners and allowing a significant period of time for the chemical to lubricate the threads before attempting to disassemble.*

Original Exhaust System Removal


1. Lubricate all hangers, rubber isolators, bolts and nuts.
2. Remove the indicated bolts on the cross-member (fig. 1).
3. Carefully remove the cross-member from the vehicle (fig. 2).
4. Measure and mark a line 5.75" from the catalytic converter.
5. Using a reciprocating saw with a metal-cutting blade, make a cut on the line (fig. 3).
6. Deburr the cut.
7. Loosen the bolts on the flange after the exhaust loop. Be sure to keep the hardware for later reassembly.
8. Exhaust loop removed (fig. 4).

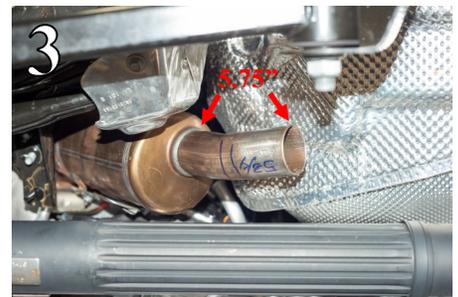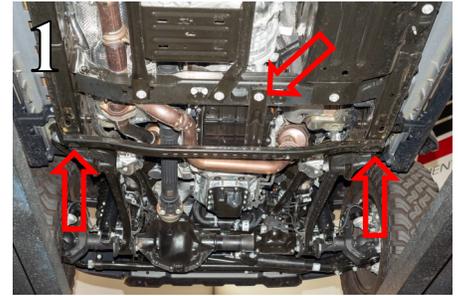

Borla Performance Cat-Back™ Exhaust System Installation Cont'd

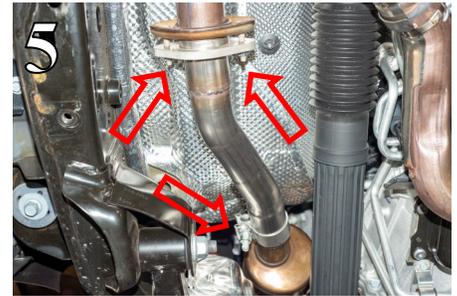

9. Slide a clamp over the inlet of the loop delete assembly.
10. Slide the inlet of the loop delete assembly onto the outlet of the stock cat pipe.
11. Align the loop delete flange with the stock front flange (fig. 5).
12. Reinstall the cross-member (fig. 6).
13. Check your exhaust system for proper clearance under the vehicle and also for tip alignment. Starting at the front flange and moving to the rear of vehicle, tighten the flange hardware/bolts. Orient the position of bolt (on supplied clamps) between (not over) pipe notches and tighten to 35 ft. lbs. torque.
14. Tighten hardware. Loosen clamps to rotate or slide pipe for better alignment.
15. Before starting your vehicle, make sure to check all wires, hoses, brake lines, body parts and tires for safe clearance from the exhaust system.
16. Start the vehicle and check for any leaks. If any leaks are found, determine cause (such as loose or incorrectly positioned clamp) and repair as necessary.
17. Reinstall the cross-member.

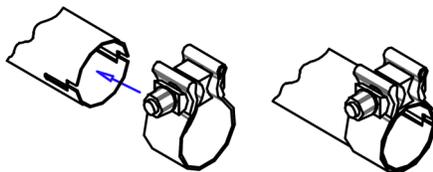

WARNING: Use extreme caution during installation. Torque all fasteners according to manufacturer's torque values and tightening sequence. **DO NOT** use air impact tools to tighten fasteners on Borla Performance Exhaust Systems. Use of such tools may result in bent flanges or gasket contact areas leading to exhaust leaks.

NOTE: When you first start your vehicle after the installation of your new Borla Performance Exhaust System, there may be some smoke and fumes coming from the system. This is a protective oil based coating used in the manufacturing of mandrel bent performance exhaust tubing. This is not a problem and will disappear within a very short period of time after the exhaust has reached normal operating temperatures.