INSTALLATION GUIDE

# RESEARCH POUCSEP

APPLICATION	LENGTH	MODEL YR	PART #
Chevrolet Colorado / GMC Canyon - Crew Cab	72"	2015-2020	76153-01A
Chevrolet Colorado / GMC Canyon - Extended Cab	65"	2015-2020	76153-01A
		INSTALLATI 3-5 H Professional installat	ours
,		SKILL L	EVEL
		4= Exper	enced
	0	TOOLS RE	QUIRED
	<ul> <li>Measuring tape</li> <li>9/16 Wrench</li> </ul>		
		<ul> <li>I7/32" Drill bit</li> <li>I0 mm socket</li> <li>I0 mm ratchet wrend</li> </ul>	:h
		<ul> <li>13 mm ratchet wrend</li> <li>Ratchet wrench and</li> <li>Pliers</li> </ul>	
		<ul> <li>Wire crimpers</li> <li>Wire stripper / cutter</li> </ul>	
		<ul> <li>3/16" hex key wrench</li> <li>5mm allen wrench</li> <li>Electrical tape</li> </ul>	n (allen wrench)
		□ Weather proof caulki □ 1/8", 9/32" & 21/64" [ □ Drill □ Heat Gun	
		WARRA	NTY
		5-Year Limited Warranty	
AMP RESEARCH TECH SUPPORT 1-888-983-2204 (F	Press 2) Mond	ay - Friday, 7:00 AM	- 5:00 PM PST
Invented, engineered and manufactured exclusively by AMP Research in the 6,641,158; 6,830,257; 6,834,875; 6,938,909; 7,055,839; 7,380,807; 7,398,985 Printed in USA.	USA. May be cover ; 7,584,975 ©201	ed by one of the following 2 AMP Research. All righ	g patents: ts reserved.
1/19		IM7615	3 rev 11.14.19

 $\bigcirc$ 

0

INSTALLATION GUIDE Attaching motor to Linkage assembly

## The motors must be attached to the Linkage assemblies after step 28

## EXPLODED VIEW

- Motor
- Socket cap screw
- · Motor Linkage assembly

## CAUTION: HANDLE WITH CARE.

To ensure our customers receive all components with full integrity, we pack the motors separate from their Linkage assemblies. This requires that the installer position and fasten the motor before continuing with the install. Please follow the instructions below and handle the assembly carefully.

CAUTION: Dropping the assembly or any excessive impact MAY cause damage to the motor.

Instructions:

1. Position the gear cover in place as shown if not already in place.

2. Seat motor into position on the three mounting bosses. This may require an adjustment of the gear by moving the swing arms.

3. After seating into place, fasten the motor with the three motor mount screws with 4mm Hex Head. Tighten screws to 36 in-lbs (4N-m). **Do not over torque.** 











Snug the front linkage bracket (25) to the rivenut first. Note: bracket to be oriented closest to the frame.

Install front linkage (2) to the pinch weld using supplied M8 button head bolts (18) and M8 washers (21), snug bolts. Next, using the supplied Hex flange bolts (17) and Serrated nuts (16) tighten linkage upper mount to steel bracket assembled in step 4. Snug bolts to allow for adjustments at a later step.



Repeat Steps 1-5 on the passenger side of the vehicle.

# Rear Linkage (Idler Linkage)

**Crew Cab Models:** On the driver side measure **29.5**" back from the center of the rear linkage mounting hole to the forward hole of the drill template.

## Extended Cab Models: Measure 32".







Remove Fuse from harness. Plug harness to controller and ensure that locking tabs are engaged. Attach controller horizontally to driver side wire loom. Secure with 11" cable ties. Attach ground lead to the negative battery terminal. Open the power distribution block cover and connect the Power wire to the positive power battery cable terminal.



# 11

12

Route the two wire harness leads towards the firewall, the longer leg will run across to passenger side of vehicle. Secure harness with supplied tie wraps. Attach to hose at the back of the engine cover.





Route the passenger harness-leg down to the outside of the frame on the passenger side behind the inner fender liner, over the body mount bracket and to the motor on the front linkage. Secure with zip ties.

# 13

14

Route the driver's side leg of the harness down away from the exhaust, steering, and silver AC lines behind the inner fender liner to the outside of the frame.



IM76153 rev 11.14.19





**OBD II install:** Use Supplied Posi Twist connectors to attach the Plug and Play Module to the Harness. Attach matching colors on the harness to the wires on the module. Plug in module to OBD II port on the vehicle. Secure harness with supplied tie wraps. *Note: If the OBD II pass thru harness (76404-01A) was purchased see install sheet supplied in packaging. The pass through harness allows for an open port for other accessories. See below for a brief description.* 







www.4x4ok.com





# 28

Insert plug from wire harness (7) onto motor (4). Slide rubber grommet on wire harness into slot of motor cover (8). Insert motor cover onto motor. Use electrical tape to cover any exposed wire from the motor.





Insert plastic push pin rivets (13) in mounting holes

of motor cover (8). Use pliers to ease installation.

Next, mount step extrusion to linkage assemblies. Line up t-nuts in step assembly with slots in lower mounts of linkage assemblies. Tighten 4 socket cap screws (10) with 3/16" allen wrench. Fasten loosely to allow for adjustments.



## AMP RESEARCH POWERSTEP<sup>TM</sup> - COLORADO/CANYON

Line up the front edge of the board just behind the front fender trim. Repeat on passenger side. Torque the bolts to the step extrusions to 10 ft-lbs(13.5 N m). GOLORADO 32 Front & Rear Linkages on Driver and Passenger side: Torque fasteners to 16 ft-lbs. (22 N m).  $\frown$ 0 0 0 0 0 0  $\subset$  $\supset$ 33 Reinstall fuse. 34 18/19 IM76153 rev 11.14.19

Check that all doors activate the Power Step and the LED Lights work when doors open and close. Reinstall any remaining trim panels.



## **FINAL SYSTEM CHECK**

Check that all doors activate the PowerStep and the LED lights work when doors open and close. **NORMAL OPERATION:** When the doors open, PowerStep automatically deploys from under the vehicle. When the doors are closed, PowerStep will automatically return to the stowed/retracted position. *Note that there is a 2-second delay before the PowerStep returns to the stowed/retracted position.* 

**CORRECT OPERATION OF LIGHTS:** All four lamps will illuminate upon opening any door of vehicle. Lamps will stay on until restowing of both Power Steps or until 5 minutes has expired with the doors open. When the lights timeout after 5 minutes, they can be reillumintated by closing and opening any door of vehicle.

<b>റ</b>	L
J	C

# атар Research Power Step

## Congratulations on your purchase of the genuine AMP Research PowerStep! Here's what you should know...

**POWER-DEPLOYABLE RUNNING BOARDS OPERATION:** AMP Research PowerStep running boards automatically move when the doors are opened to assist entering and exiting the vehicle.



## Automatic power deploy:

The running boards will extend down and out when the doors are opened.

### Automatic power stow:

The running boards will return to the stowed position when the doors are closed. There will be a 2-second delay before the running boards move to the stowed position.

#### **Automatic stop:**

If an object is in the way of the moving running board, the running board will automatically stop. To reset, clear any obstruction, then simply open and close the door to resume normal operation.



#### Manually set in the deployed (OUT) position for access to the roof:

The running boards can be manually set in the deployed position by firmly holding the step down with your foot while at the same time closing the door. To resume normal operation, open and close the door.



**Maintenance:** In adverse conditions, debris such as mud, dirt, and salt may become trapped in the running board mechanism, possibly leading to unwanted noise. If this occurs, manually set the running boards to the deployed position and flush the front and rear hinge arms with a high-pressure car wash wand. <u>Avoid spraying the motors directly.</u> After washing, apply silicone spray lubricant to the hinge pivot pins. Do not apply silicone, wax or protectants like Armor All<sup>®</sup> to the running board stepping surface.

Caution! Keep hands away when the running board is in motion.

## **5-YEAR LIMITED WARRANTY**

AMP RESEARCH warrants this product to be free from defects in material and workmanship for FIVE (5) YEARS FROM DATE OF PURCHASE, provided there has been normal use and proper maintenance. This warranty applies to the original purchaser only. All remedies under this warranty are limited to the repair replacement of the product itself, or the repair or replacement of any component part thereof, found by the factory to be defective within the time period specified. The decision to repair or replace is wholly within the discretion of the manufacturer.

This warranty specifically excludes labor. If you have a warranty claim, first you must call our factory at the number below for instructions. You must retain proof of purchase and submit a copy with any items returned for warranty work. Upon completion of warranty work, if any, we will return the repaired or replaced item or items to you freight prepaid. Damage to our products caused by accidents, fire, vandalism, negligence, misinstallation, misuse, Acts of God, or by defective parts not manufactured by us, is not covered under this warranty.

ANY IMPLIED WARRANTIES OF MERCHANTABILITY AND/OR FITNESS FOR A PARTICULAR PURPOSE CREATED HEREBY ARE LIMITED IN DURATION TO THE SAME DURATION AND SCOPE AS THE EXPRESS WRITTEN WARRANTY. OUR COMPANY SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGE.

Some states do not allow limitations on how long an implied warranty lasts, or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights that vary from state to state.

FOR WARRANTY ISSUES WITH THIS PRODUCT PLEASE CALL AMP RESEARCH CUSTOMER SERVICE 1-888-983-2204

## WARNING

Be sure to read and precisely follow the provided instructions when installing this product. Failure to do so could place the vehicle occupants in a potentially dangerous situation. After installing or reinstalling, re-check to insure that the product is properly installed.