CONTROLLED

RHINO-RACK

Toyota Land Cruiser 200 Series Short Backbone - RTLB3



IMPORTANT INFORMATION

Maximum carrying capacity:

Suitable Pioneers	On Road Cargo Allowance	Off Road Cargo Allowance	Static Allowance	Roof Allowance	Rack Weight	
42100B	71kg / 157lb	51kg / 112lb	331kg / 730lb		29kg / 64lb	
45100B	69kg / 152lb	49kg / 108lb	329kg / 725lb		31kg / 68lb	
41100	66.5kg / 147lb	46.5kg / 103lb	326.5kg / 720lb	100kg /220lb	33.5kg / 74lb	
42101B	68kg / 150lb	48kg / 106lb	328kg / 723lb	100kg /22015	32kg / 71lb	
45101B	66kg / 146lb	46kg / 101lb	326kg / 719lb		34kg / 75lb	
41101	63.5kg / 140lb	43.5kg / 96lb	323.5kg / 713lb		36.5kg / 80lb	

Roof Allowance: Total permissible weight attached to the roof of the car. This is inclusive of the weight of the roof rack system Cargo Allowance: Total permissible weight allowed on top, and attached to roof racks whilst the vehicle is in motion Static Allowance:

Total permissible weight allowed on top, and attached to roof racks whilst the vehicle is stationary

Please refer to your vehicle manufacturers handbook for maximum carrying capacity. Always use the lower of the two figures. Load must be evenly distributed over the entire Pioneer. Weight of roof rack accessories is to be included in cargo allowance.

Torque settings

Unless stated otherwise in these instructions, all fasteners should be set to the following torque settings -

M6: 4-5Nm (3-4lbs/ft), M8: 8-10Nm (6-7.5lbs/ft) and M10: 16-18Nm (12-13lbs/ft).

Warning:

- Check Part No. and/ or Kit is correct for use with your vehicle
- Do not attempt to fit the rack system to your vehicle unless you fully understand these fitting instructions. Please direct any questions regarding fitting to the dealer from where the roof racks were purchased.

Use only non-stretch fastening ropes or straps.

- The handling characteristics of the vehicle changes when you transport a load on the roof. For safety reasons we recommend you exercise extreme care when transporting wind-resistant loads. Special consideration must be taken into account when cornering and braking.
- Although the system is tested and approved to AS1235-2000 / ISO 11154, off-road conditions can be much more rigorous. Extreme care must be taken in off road conditions

Recommendations:

It is essential that all bolt connections be checked after driving a short distance when you first install your roof racks. Bolt connections should be checked again at regular intervals (once a week is enough, depending on road conditions, usage, loads and distances travelled). You should also check the roof racks each time they are re-fitted. Always make sure to fasten your load securely. Please also ensure that all loads are evenly distributed and that the centre of gravity is kept as low as possible and must be entirely contained within the extents of the roof racks.

Note for Dealers and Fitters:

It is your responsibility to ensure these fitting instructions are given to the end user or client

Rhino-Rack, 3 Pike St, Rydalmere									
NSW 2116, Australia	Document No:	R1699							
(02) 8846 1900	Prepared By:	Kayle Everett	Issue No:	02					
rhinorack.com.au	Authorised By:	Chris Murty	Issue Date:	14/06/2018					
	These instructions remain the property of Rhino-Rack Australia Pty. Ltd. and may not be used or changed for any other purpose than intended.								











