
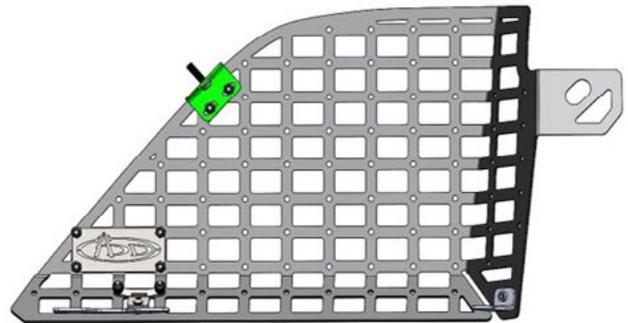


21+ / FORD BRONCO

REAR MSP
AC2302801NA

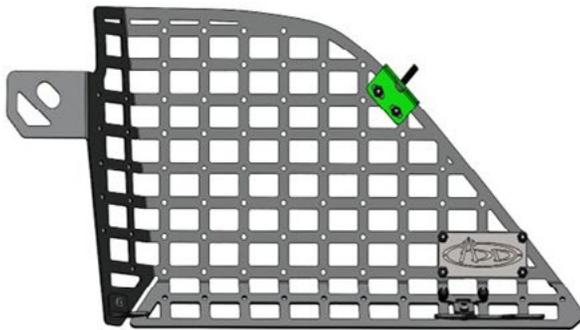

TOOLS REQUIRED

(Sockets) 7/16
(Box end wrenches) 7/16
(Allen wrenches) 5/32, 7/32
(Torx) T50
Ratchet



TIME REQUIRED

- 2 hours



SKILL LEVEL

-Easy/Intermediate



INCLUDED IN KIT

16- Nylon Lock Nuts (1/4-20")
16- Button Head Bolts (1/4-20 X 3/4)
4- Button Head Bolts (1/4-20 X 1/2)
2- Flat Washers (M8)
2- Button Head Bolts (M8-1.25 x 30mm)
24- Flat Washers (M6)

⚠️ WARNINGS/CAUTIONS BEFORE STARTING INSTALLATION ⚠️

-BEFORE YOU INSTALL THIS KIT-

Read and understand all instructions, warnings, cautions, & notes contained in this installation instruction guide. Consult your vehicle owner's manual for proper disconnection of electrical and lifting of vehicle if required for installation of this product.

This install may require some technical skills and knowledge of basic mechanical work. If you do not feel that you are capable of performing this install please take this product to a trained professional.

After reading this guide please contact us with any questions or concerns before installing product.
Customer Service (480) 671-0820

Addictive desert designs is *not* responsible for any bodily injury or harm to you or your vehicle as a result of an improper install.

Proper installation of this kit required knowledge of the factory recommended procedures for removal and installation of original equipment components.

We recommend that the factory shop manual and any special tools needed to service your vehicle be on hand during the installation. Installation of this kit without proper knowledge of the factory recommended procedures may affect the performance of these components and the safety of the vehicle.

Inspect all contents of this package to make sure product is not damaged and all installation hardware has been included. If parts are missing from kit, please be prepared to provide the following information:

1. Name of purchase location
2. Bar Code on side of box
3. Date above bar code
4. Date inside box cover

ALWAYS WEAR EYE PROTECTION WHEN OPERATING POWER TOOLS

REAR MSP 21+/FORD BRONCO

STEP 1


Remove the seatbelt bolt using a T50.



REAR MSP 21+/FORD BRONCO

STEP 2


Remove hardtop mounting bolts using a T50.

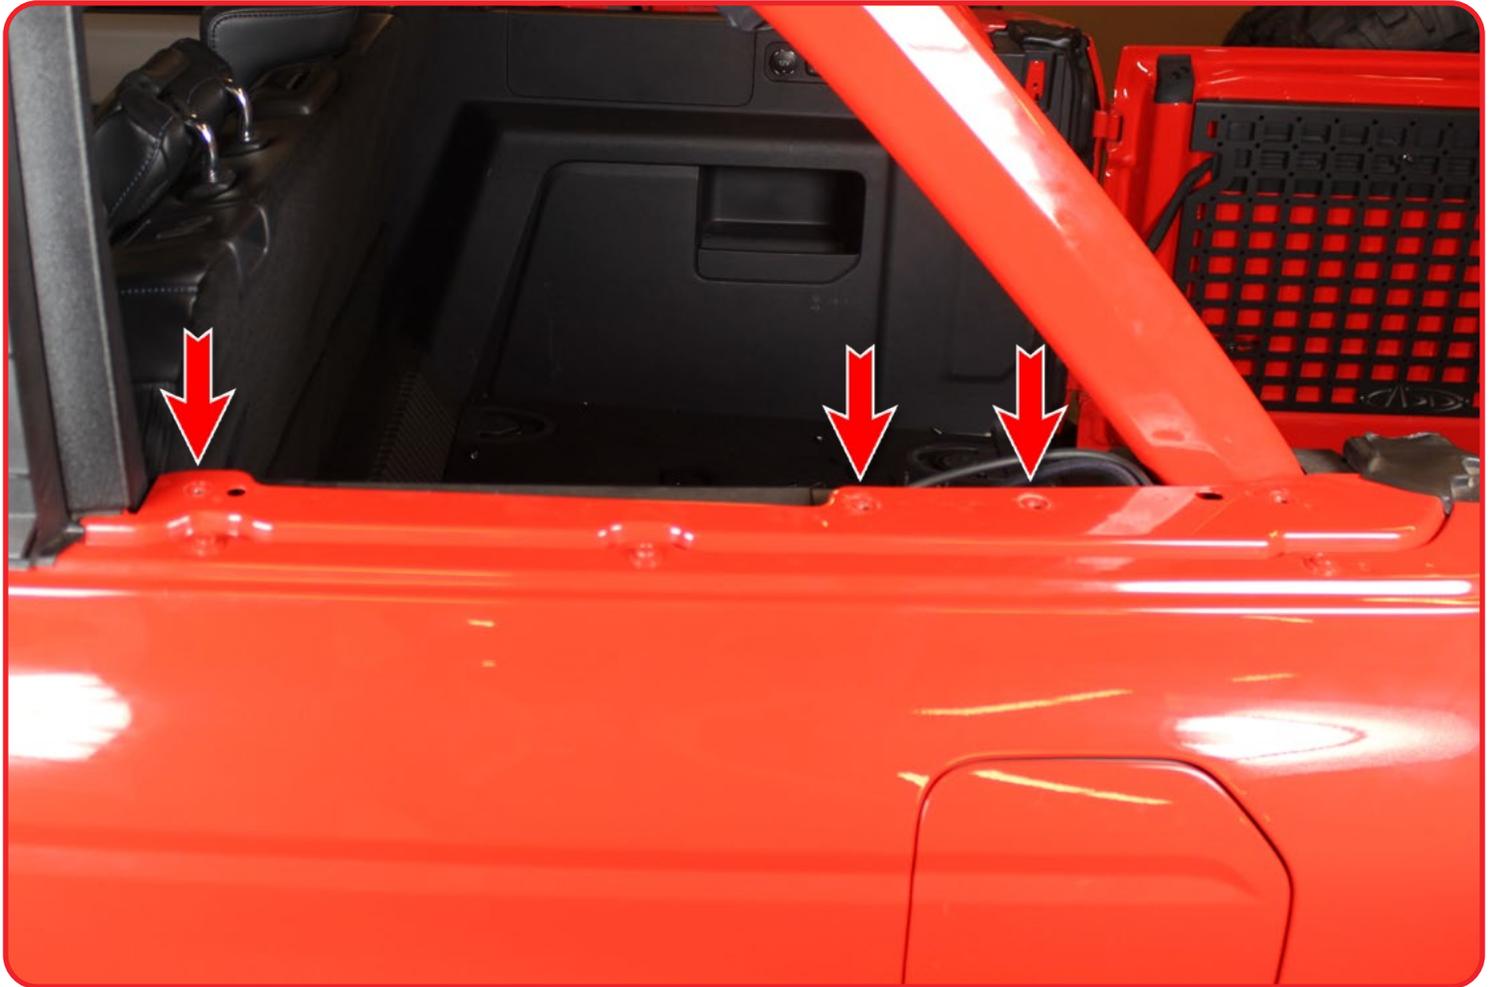

REAR MSP 21+/FORD BRONCO

□ STEP 3



Install the mount brackets using the provided 1/4" button head bolts, washers, and nylon lock nuts using (5/32 allen wrench) and a (7/16 wrench).

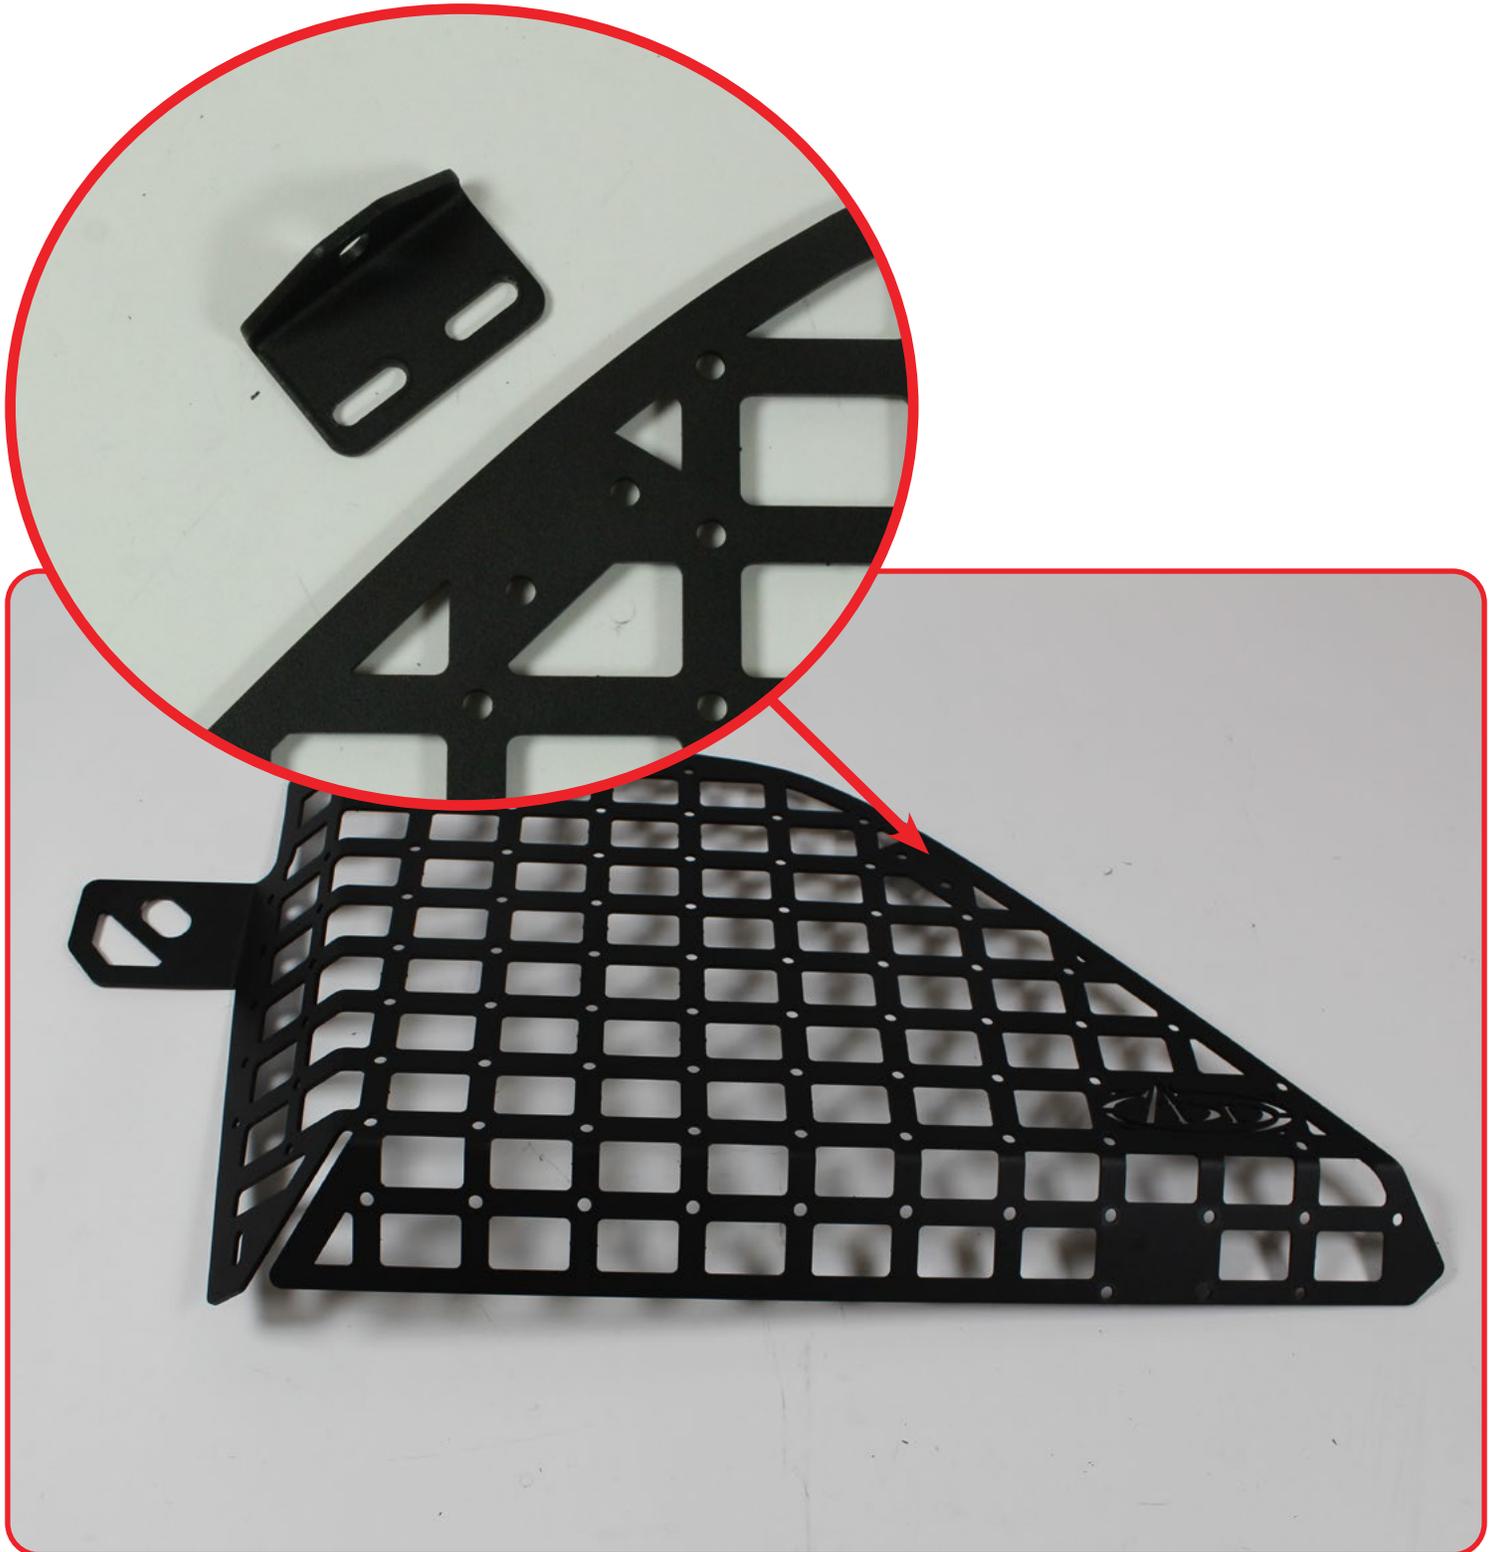

REAR MSP 21+ / FORD BRONCO

□ STEP 4


Install the mount brackets using the provided 1/4" button head bolts, washers, using (5/32 allen wrench).

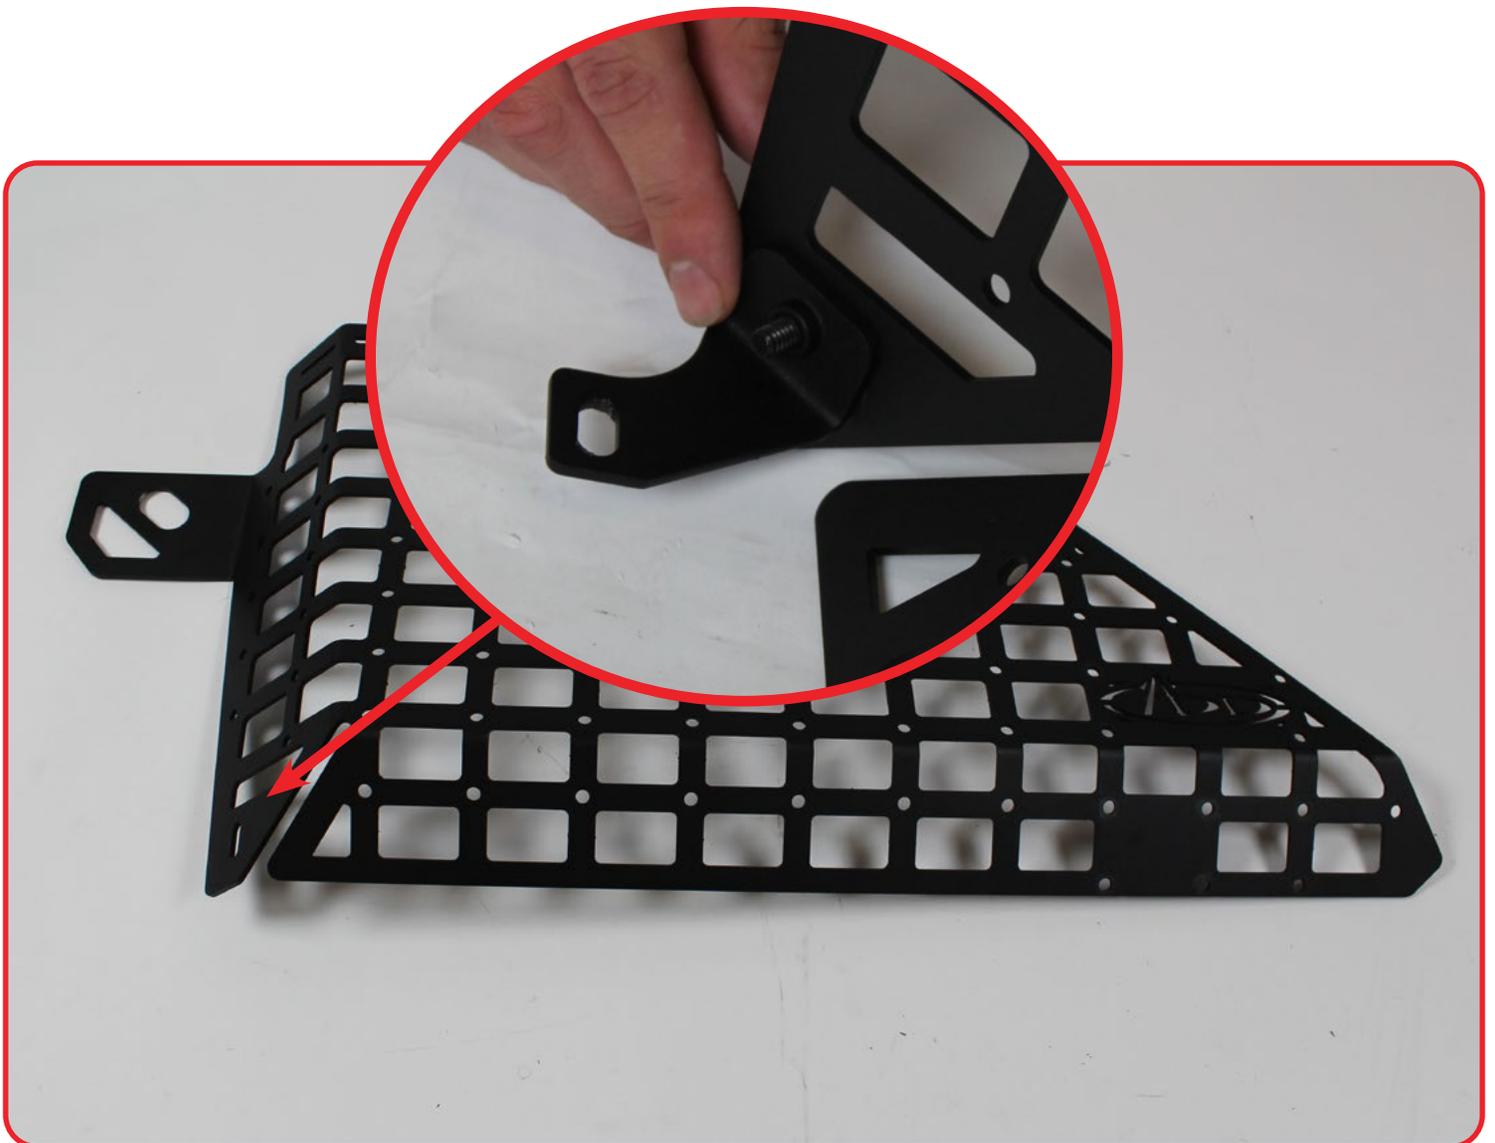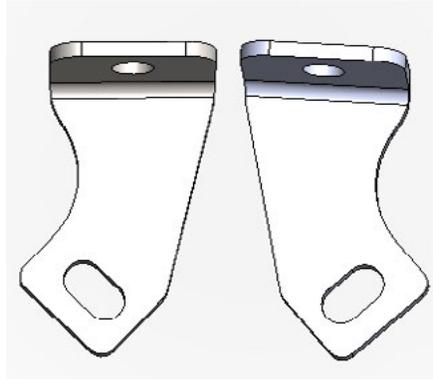

REAR MSP 21+/FORD BRONCO

□ STEP 5



Install the mount brackets using the provided 1/4" button head bolts, washers, and nylon lock nuts using (5/32 allen wrench) and a (7/16 wrench).

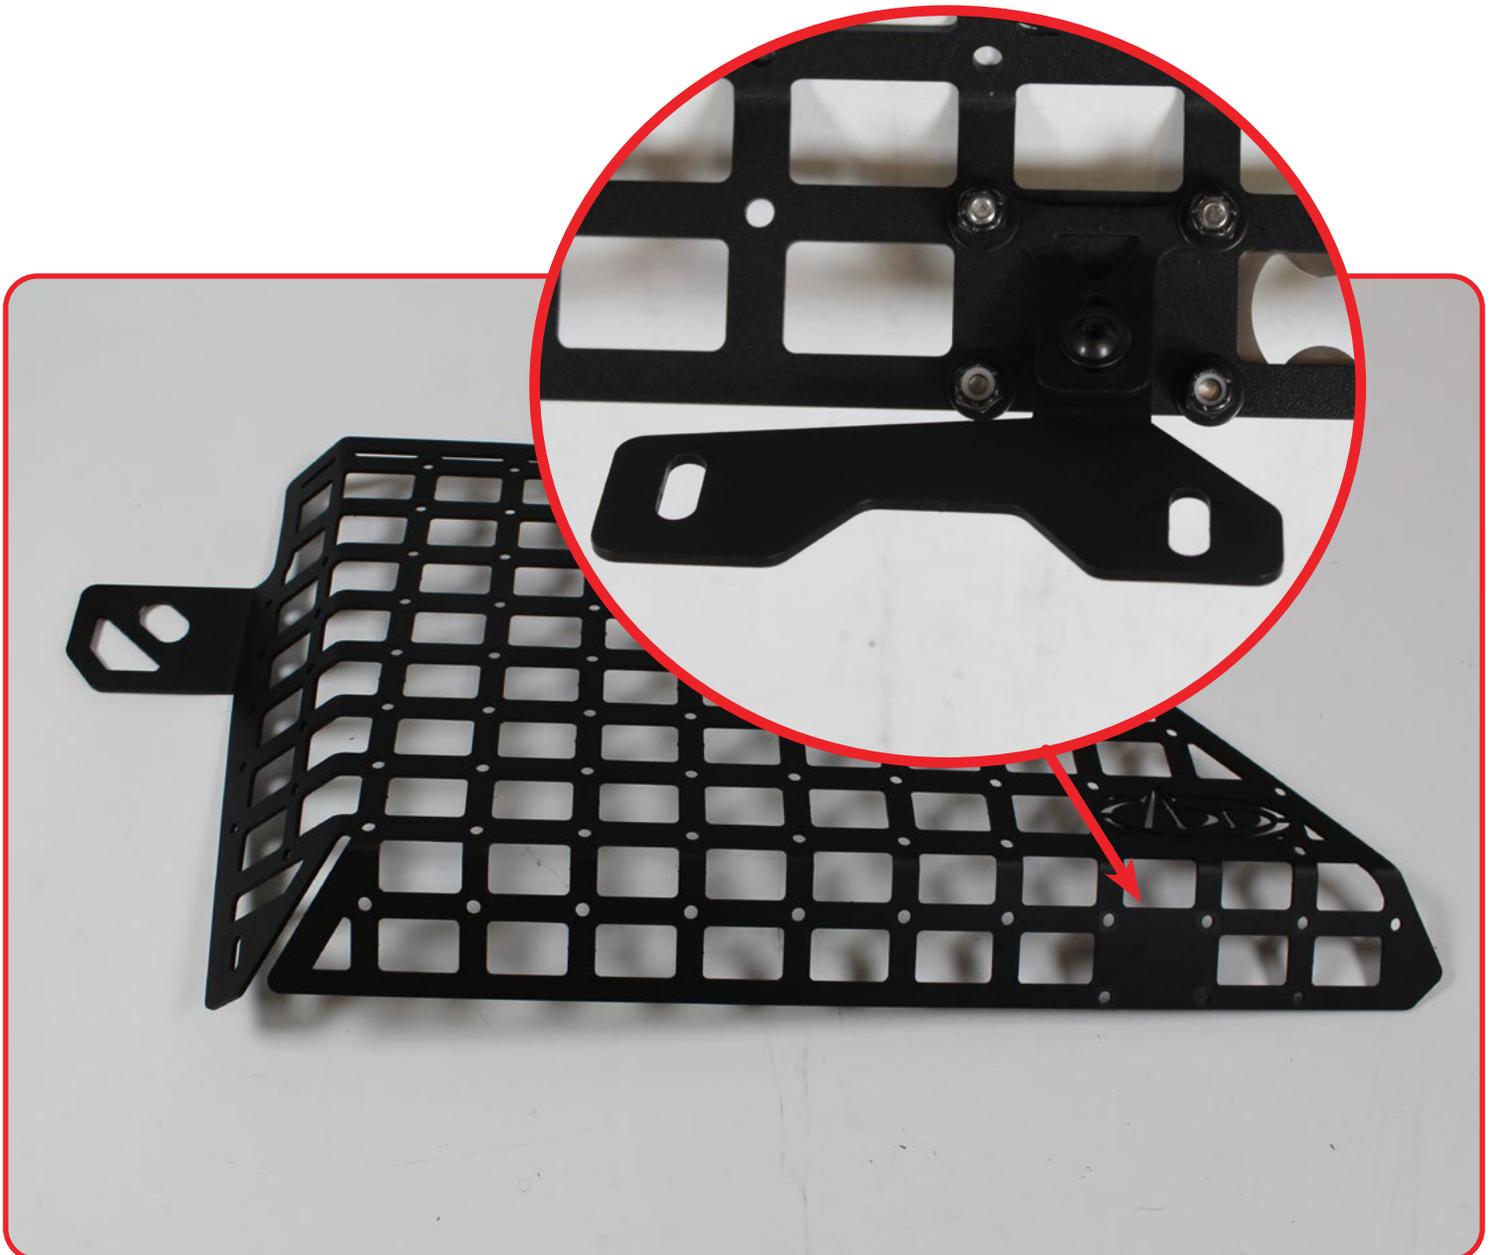

REAR MSP 21+/**FORD BRONCO**

STEP 6


Install the logo and backer plate using the provided 1/4" button head bolts, washers, and nylon lock nuts using (5/32 allen wrench) and a (7/16 wrench).

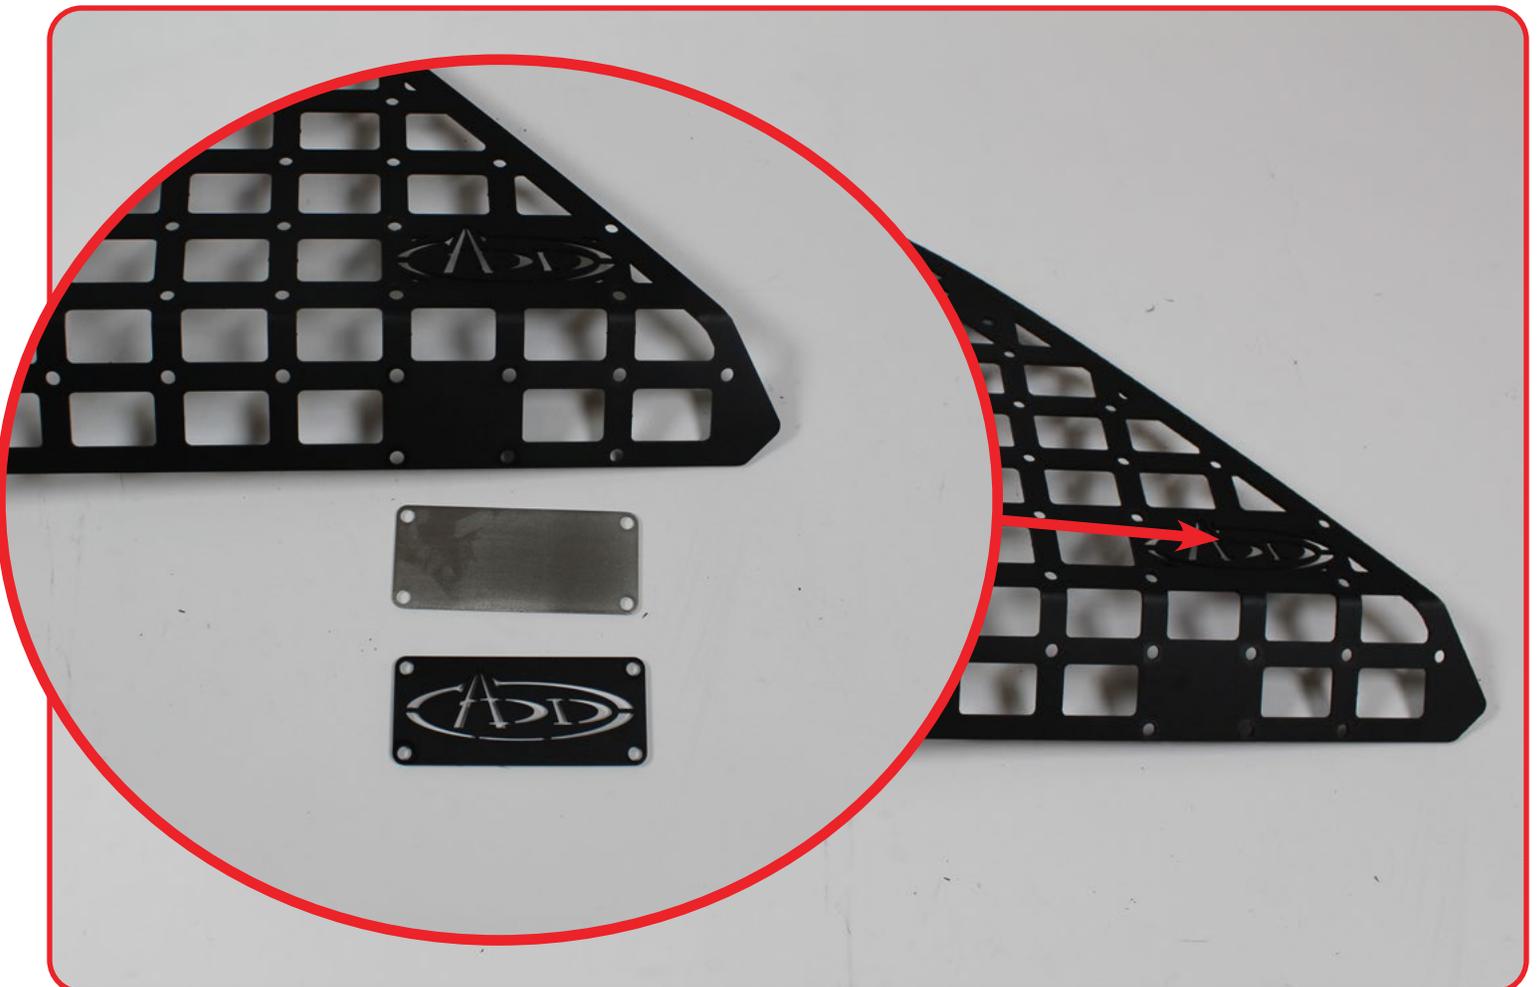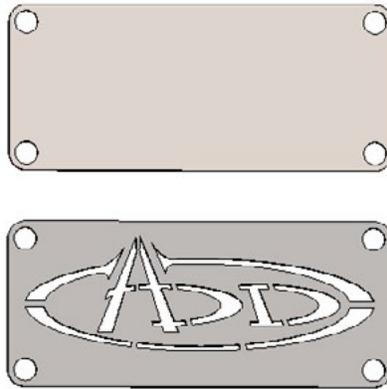

REAR MSP 21+/FORD BRONCO

□ STEP 7

Install panel with the seatbelt bolt first using a T50.

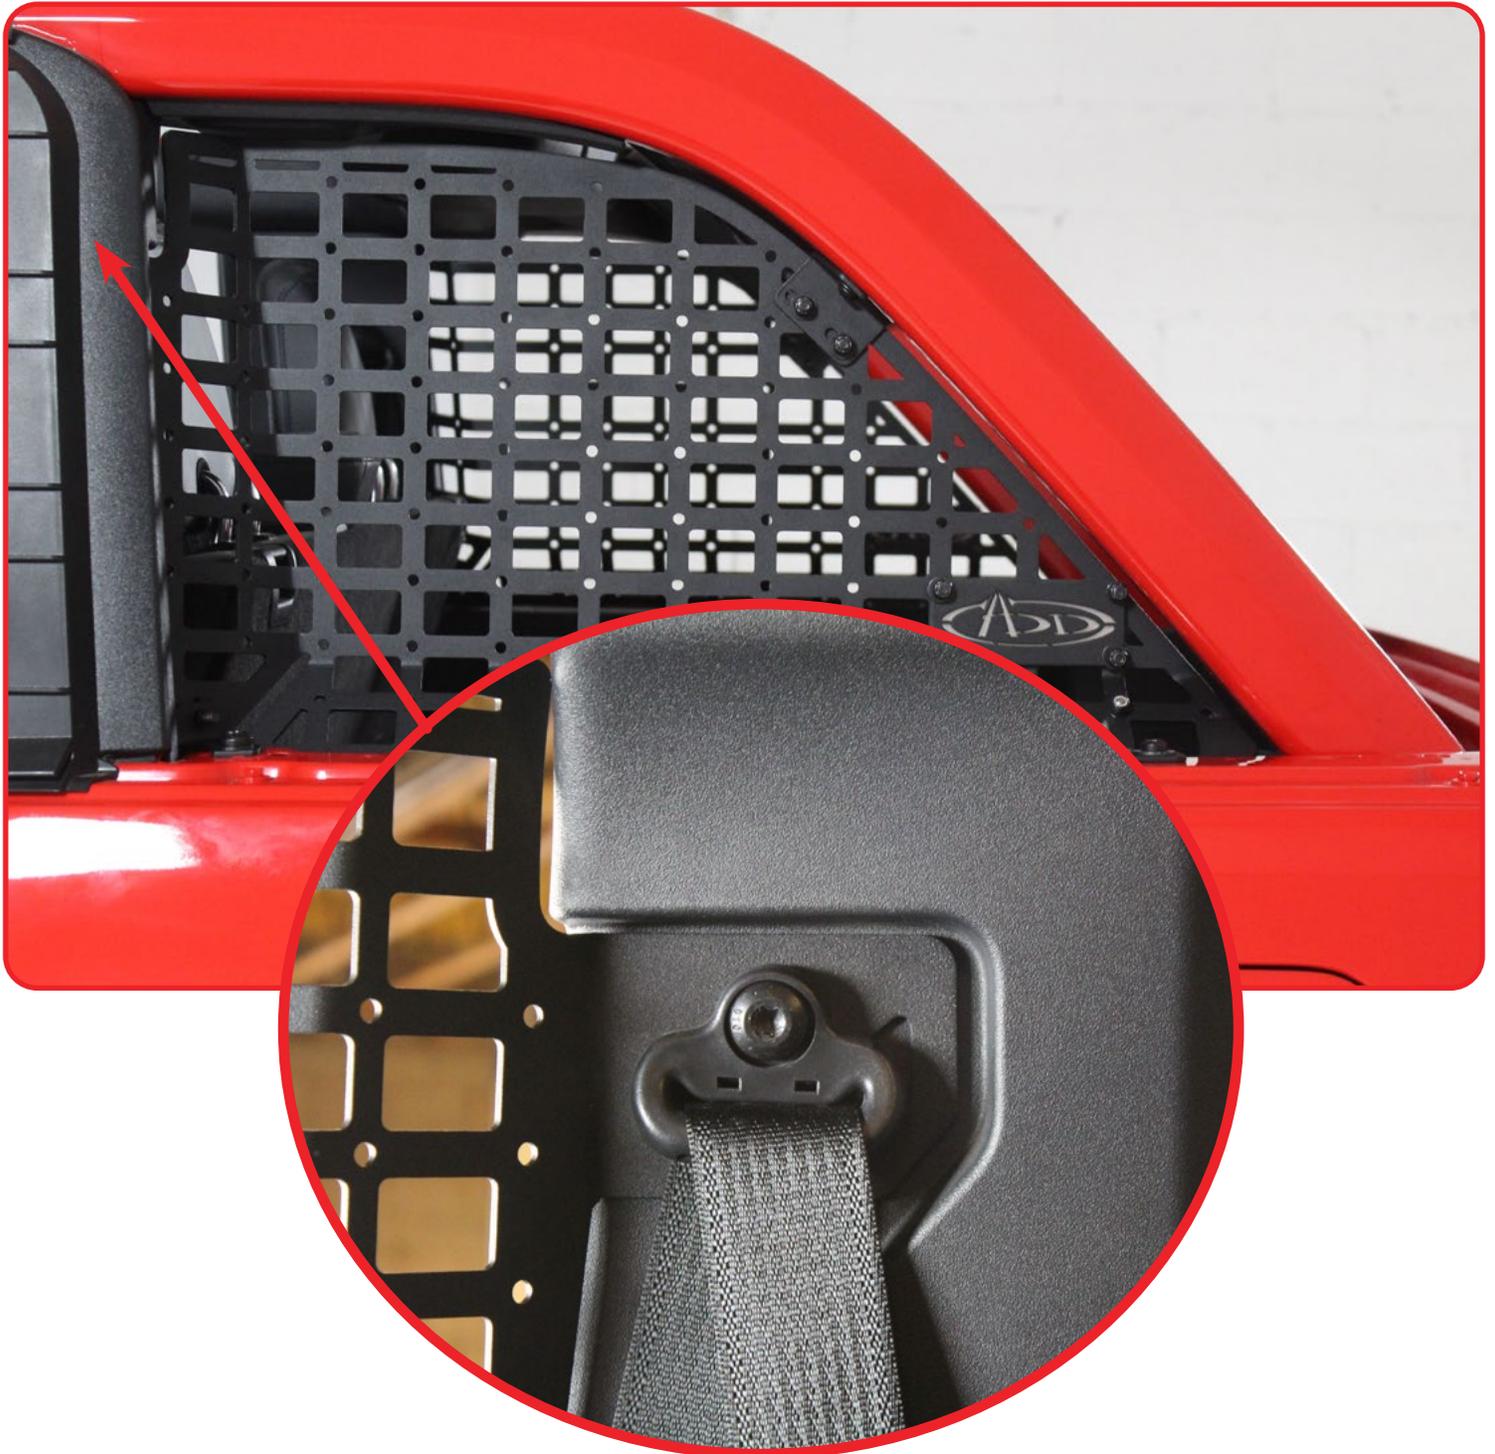

REAR MSP 21+/FORD BRONCO

□ STEP 8


Install the M8 bolt using a (7/32 allen wrench).



REAR MSP 21+/FORD BRONCO

STEP 9

Install the hardtop mounting bolts using a T50.

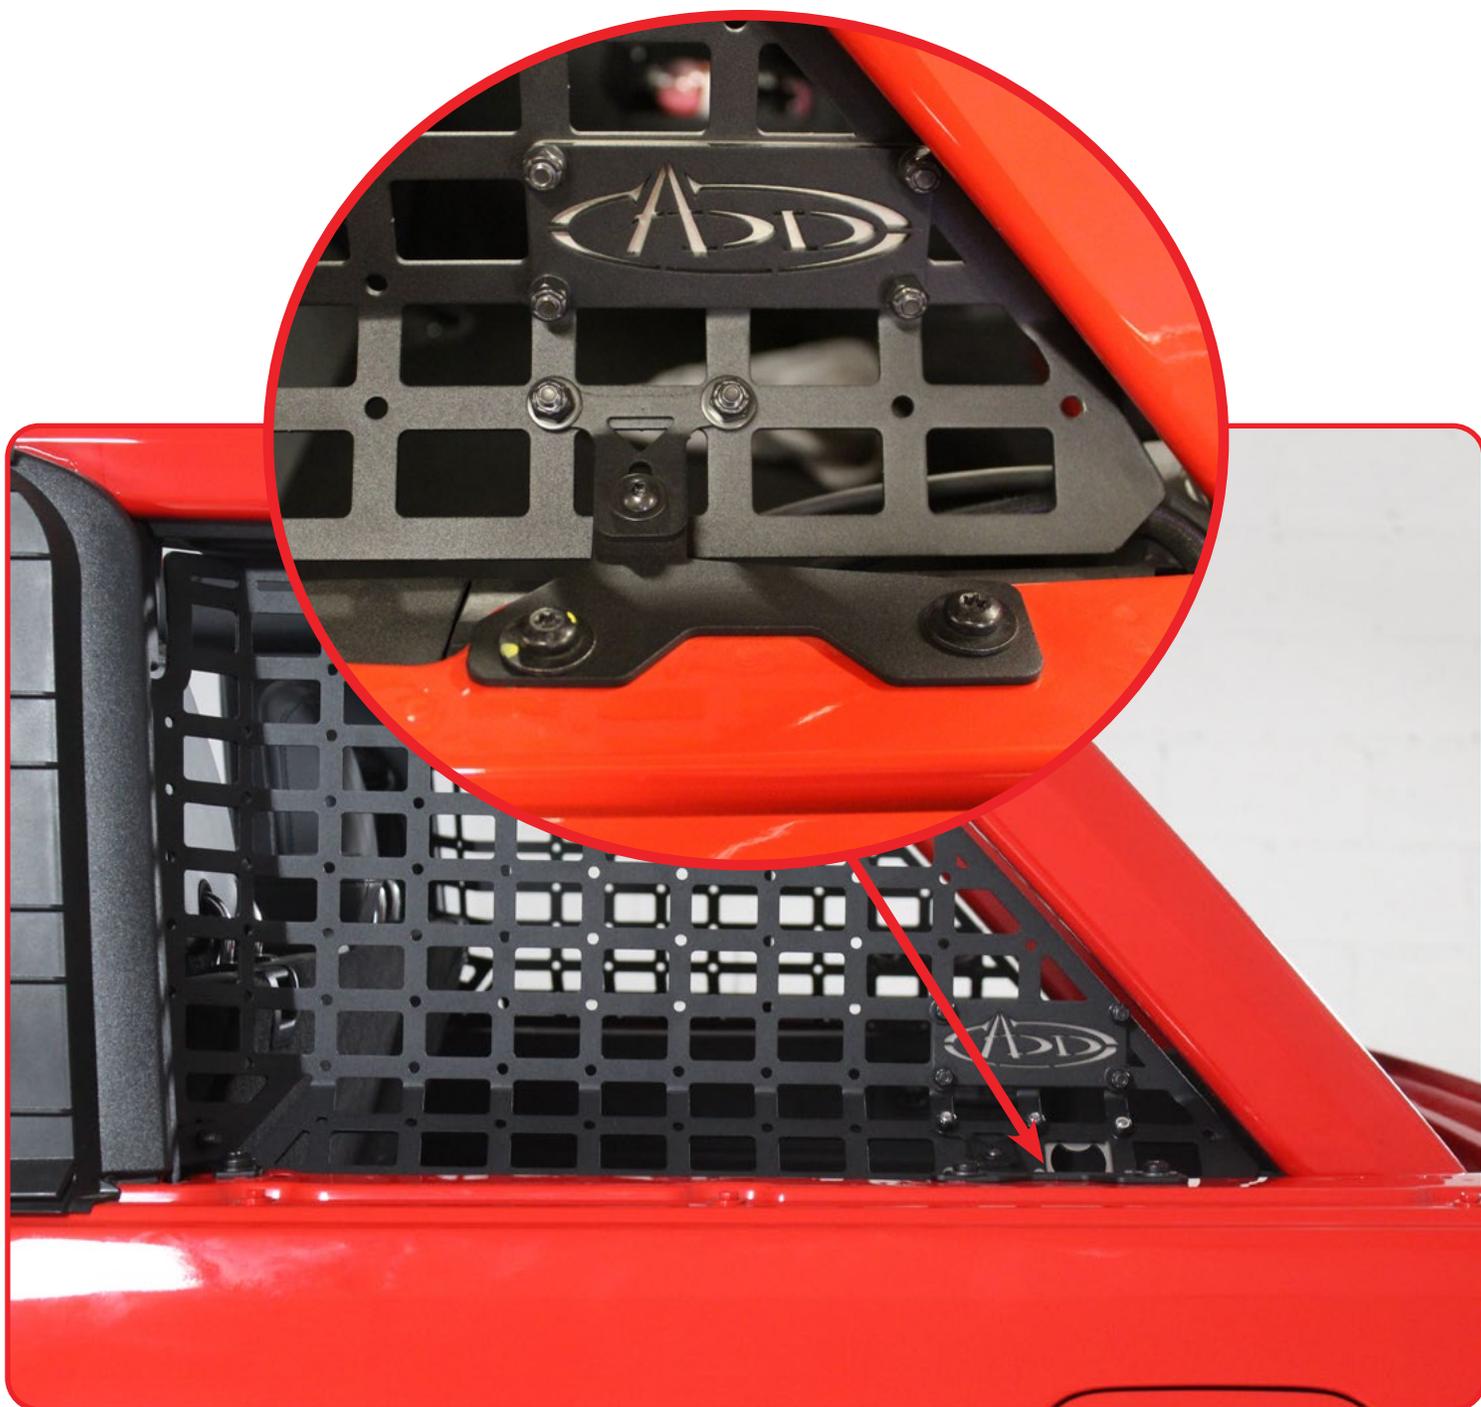

REAR MSP 21+/FORD BRONCO

STEP 10

Stand back and enjoy your new ADD Rear MSP's

Check and re-tighten, if needed, all mounting bolts after 100 miles and periodically thereafter.



THIS PRODUCT IS PROTECTED BY ONE OR MORE U.S. PATENTS
WWW.ADDICTIVEDESERTDESIGNS.COM/PATENTS

FOR ADDITIONAL SUPPORT OR TECHNICAL QUESTIONS,
PLEASE CALL 480-671-0820 OR
EMAIL INFO@ADDICTIVEDESERTDESIGNS.COM