


**CONTROLLED**

RHINO-RACK

Rhino-Rack Dome 1300 (32125)

- | | |
|--|--|
| 1. <input type="checkbox"/> Check Part No./Kit is correct | 3. <input type="checkbox"/> Fit roof rack accessory |
| 2. <input type="checkbox"/> Read through instruction before installing | 4. <input type="checkbox"/> Check and recheck all fasteners are secure |

Layout

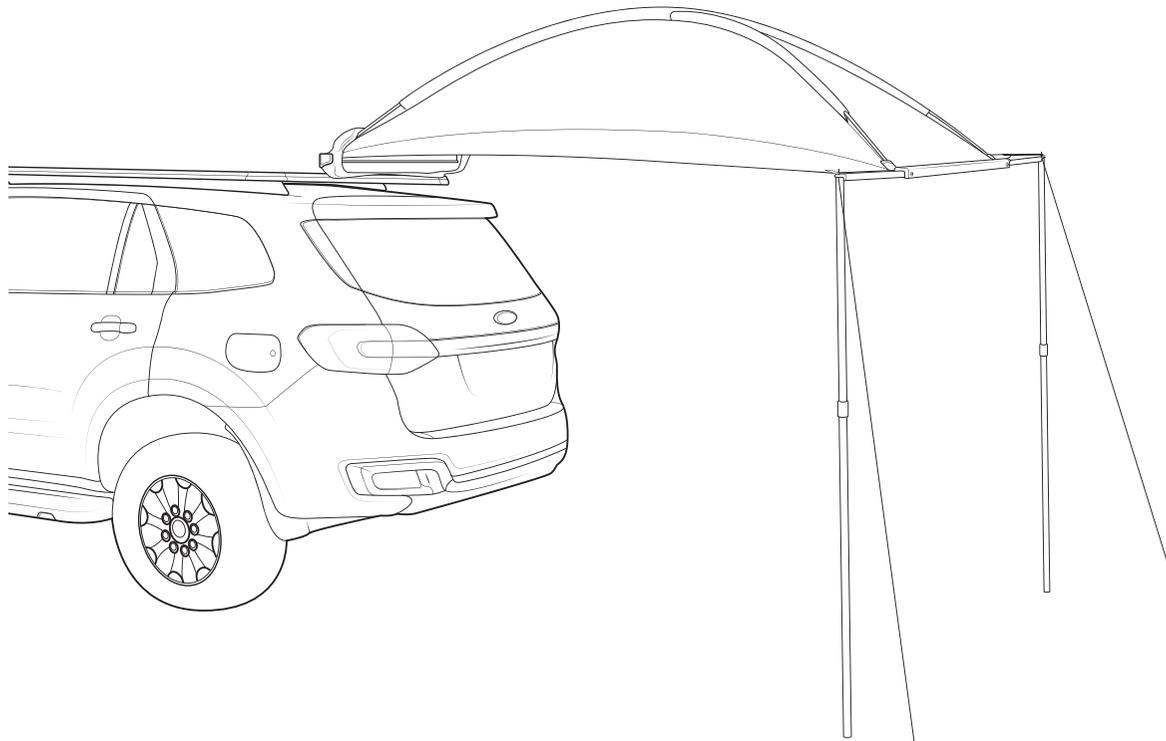

Important Information

Load Ratings

With the additional weight of the Dome1300 Awning, the load capacity of your crossbars will have to be adjusted accordingly. The Dome1300 and 2 crossbars weigh approximately 15kg (33lbs).

Torque settings

Unless stated otherwise in these instructions, all fasteners should be set to the following torque settings -

M6: 4-5Nm (3-4lbs/ft), M8: 8-10Nm (6-7.5lbs/ft) and M10: 16-18Nm (12-13lbs/ft).

Warning:

- Check the Rhino-Rack website to ensure you have the latest issue of the instructions
- Check Part No. and/ or Kit is correct for use with your vehicle
- Do not attempt to fit the rack system to your vehicle unless you fully understand these fitting instructions. Please direct any questions regarding fitting to the dealer from where the roof racks were purchased.
- **Use only non-stretch fastening ropes or straps.**
- The handling characteristics of the vehicle changes when you transport a load on the roof. For safety reasons we recommend you exercise extreme care when transporting wind-resistant loads. Special consideration must be taken into account when cornering and braking.
- Although the system is tested and approved to AS1235-2000 / ISO 11154, off-road conditions can be much more rigorous. Extreme care must be taken in off road conditions.
- Remove the roof racks and accessories before using an automatic carwash.

Recommendations:

It is essential that all bolt connections be checked after driving a short distance when you first install your roof racks. Bolt connections should be checked again at regular intervals (once a week is enough, depending on road conditions, usage, loads and distances travelled). You should also check the roof racks each time they are re-fitted. Always make sure to fasten your load securely. Please also ensure that all loads are evenly distributed and that the centre of gravity is kept as low as possible and must be entirely contained within the extents of the roof racks.

Note for Dealers and Fitters:

It is your responsibility to ensure these fitting instructions are given to the end user or client

Rhino-Rack, 22 Hanson Pl, Eastern Creek
NSW 2766, Australia
(02) 8846 1900
rhinorack.com.au



Document No: R743
Prepared By: K.Everett
Authorised By: N.Clarke

Issue No: 10
Issue Date: 21/03/2019

These instructions remain the property of Rhino-Rack Australia Pty. Ltd. and may not be used or changed for any other purpose than intended.

RHINO-RACK


Rhino-Rack Dome 1300 (32125)

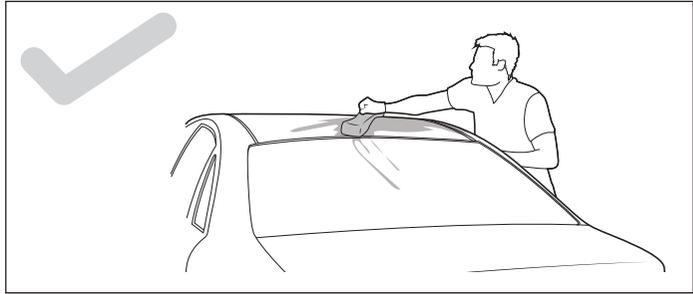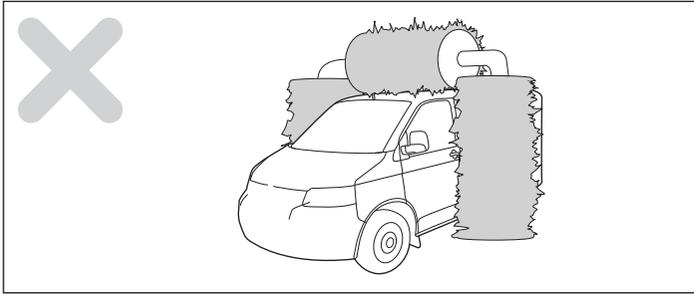


If awning is wet, be sure to dry before you stow.



Always use sand screws (31113, sold separately) when awning is open on beach or sand.

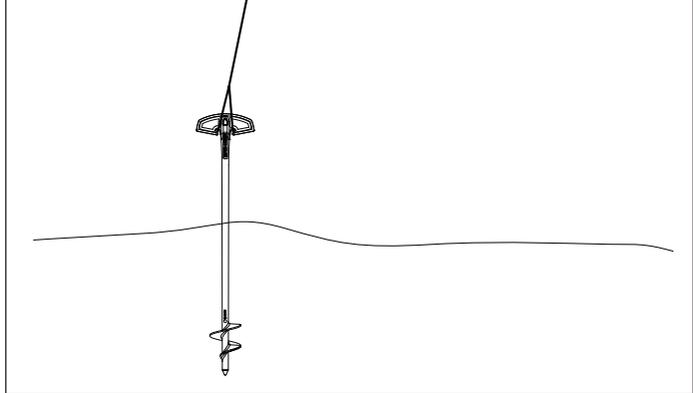

Always use guy ropes when awning is deployed.

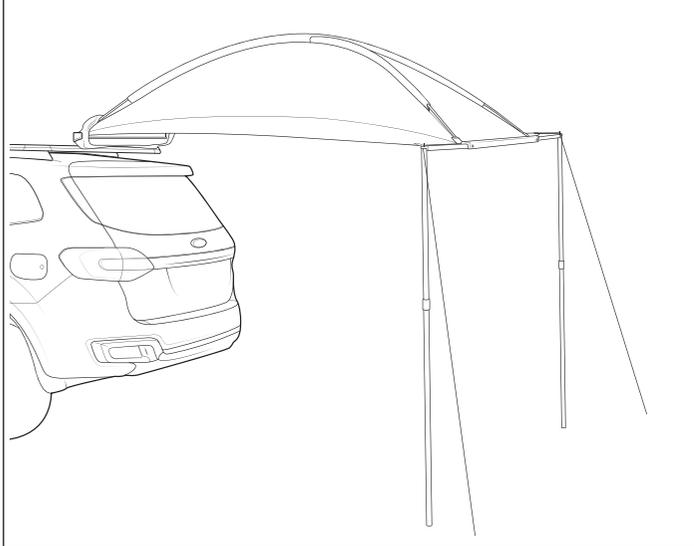


Do not use the awning as a means to hoist your body weight up or to the roof of the vehicle.



Be aware of the effects of wind on the open awning. It is advised that the awning be stowed away in strong winds. **Do not leave your awning unattended while open, weather conditions can change suddenly. Avoid setup in windy conditions.**

Warning: Shade does not provide 100% protection. Some UV can still reach you in the shade by reflecting off surrounding surfaces. Always combine shade with clothing, a hat, sunglasses and sunscreen.

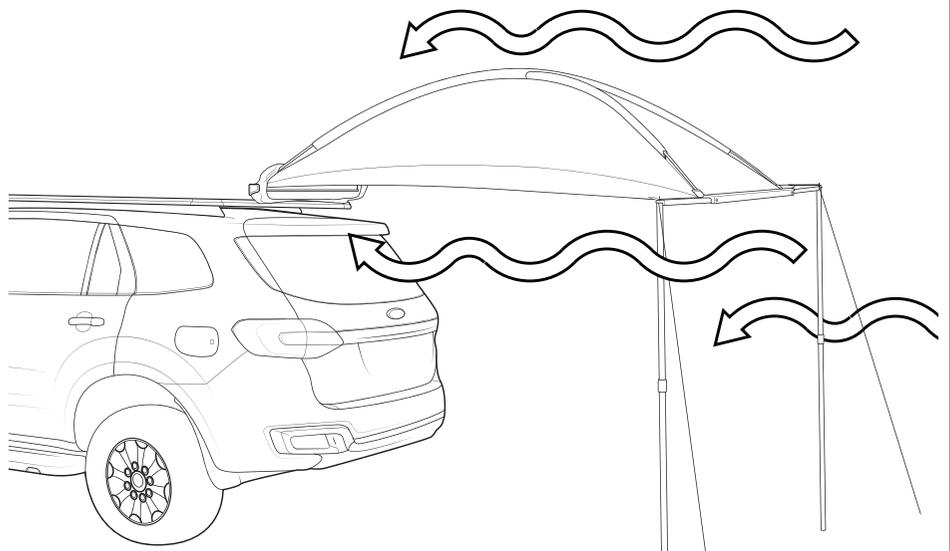


RHINO-RACK


Rhino-Rack Dome 1300 (32125)

Parts


Parts List			
1a	Dome 1300 Awning	1	-
1b	Carry Bag black	1	SP293
2	Crossbar Bracket	2	C640
3	M8 x 20mm T-Bolt	4	C764
4	M8 X 17mm Flat Washer	4	W020
5	M8 Nyloc Nut	4	N028
6	M8 Channel Nut	4	N003
7	M8 Spring Washer	4	W019
8	M8 x 25mm Hex Bolt	4	B101
9	Metal Peg	2	C909
10	Guy Rope	2	C910
11*	Awning Extension Adapter	1	32116
12	Telescopic Support Pole black	2	SP294
13	Dome Support Poles	2	SP200
14	Fitting Instruction	1	R743

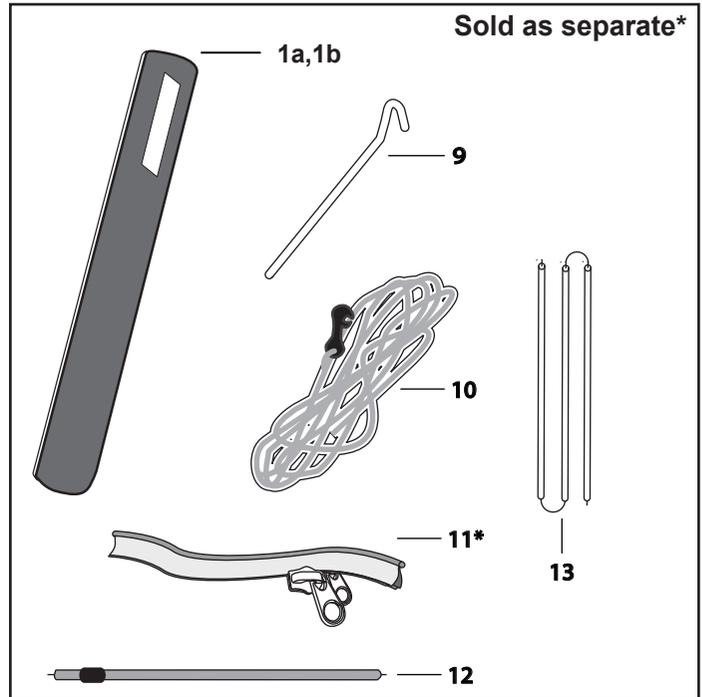

Vortex Crossbar/ Pioneer Setup

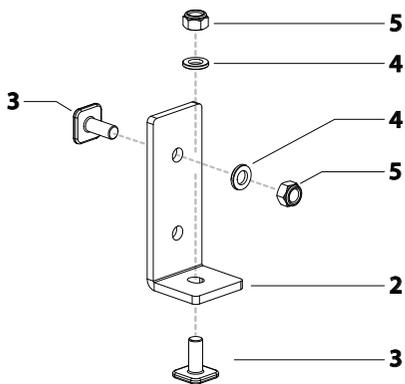

Heavy Duty Crossbar setup

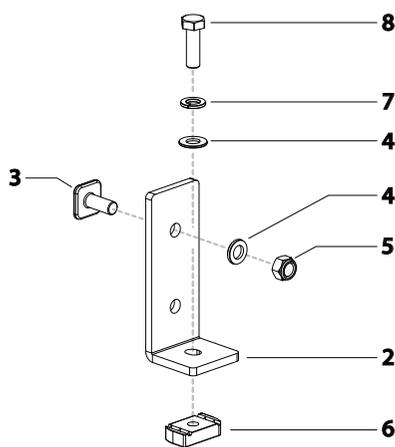



Tools Required:

Tape Measure. 13mm Spanner. Mallet.

Care Instructions:

Wash and clean vehicle roof racks prior to install.
Avoid setup in high winds



Fitting Instructions

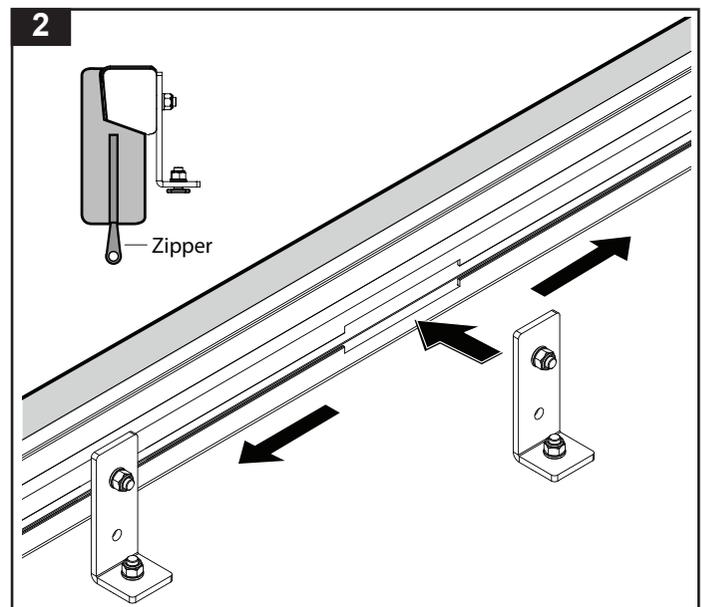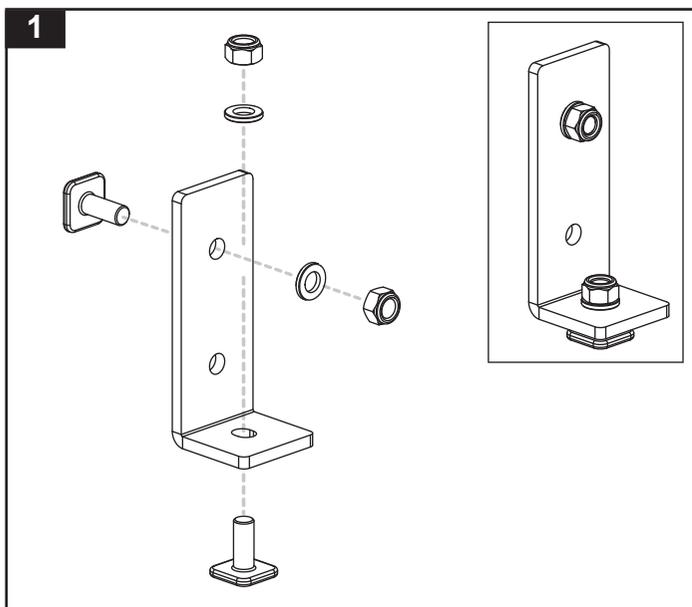



RHINO-RACK

Rhino-Rack Dome 1300 (32125)


3

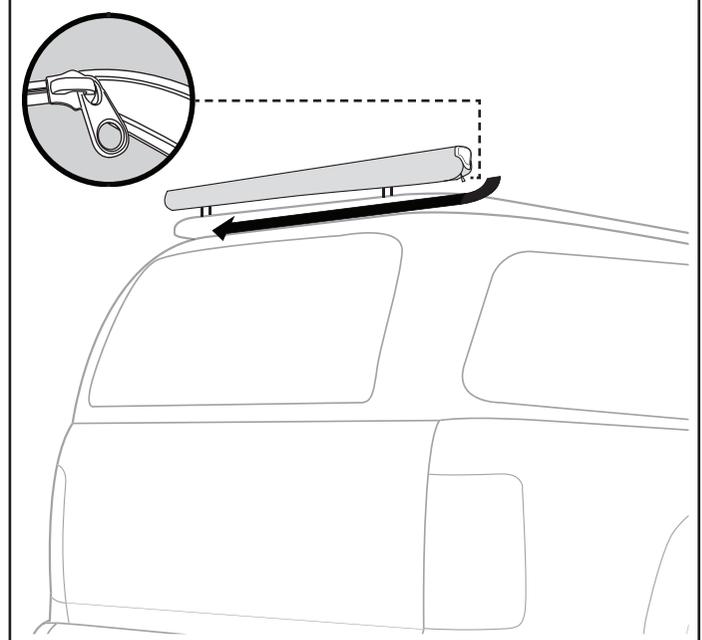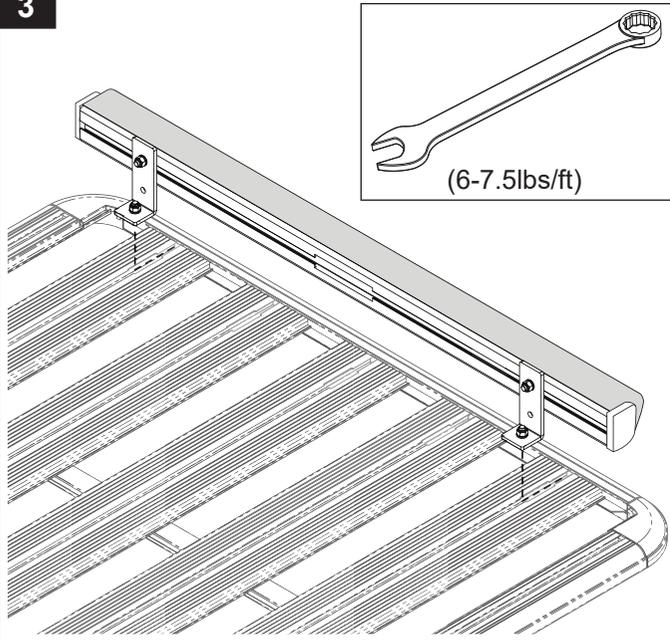


4

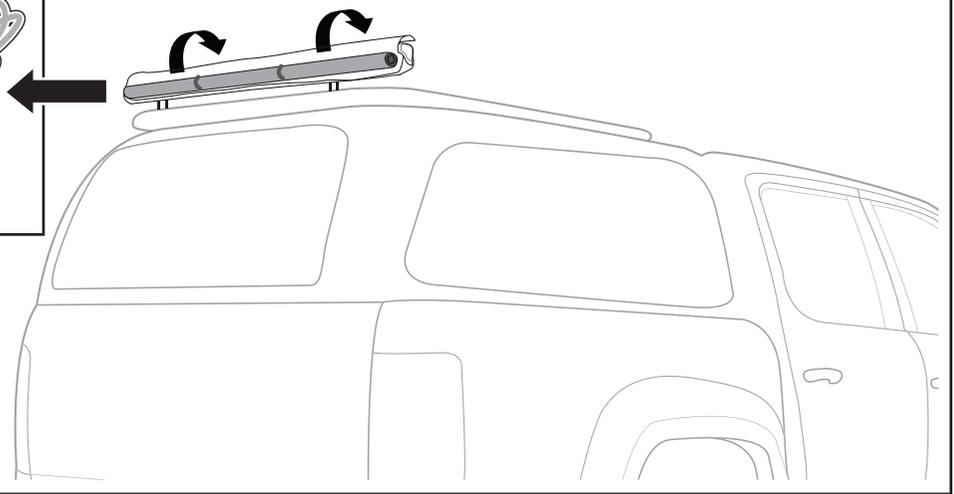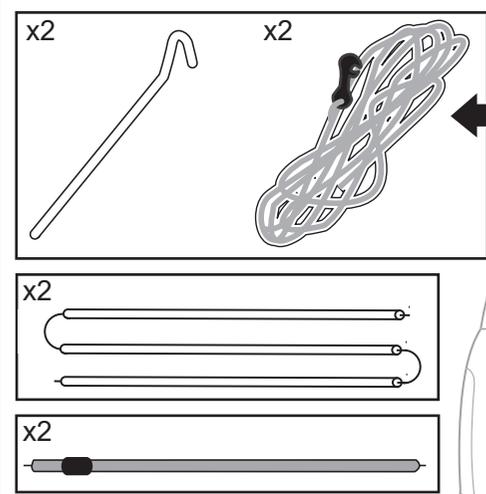

5

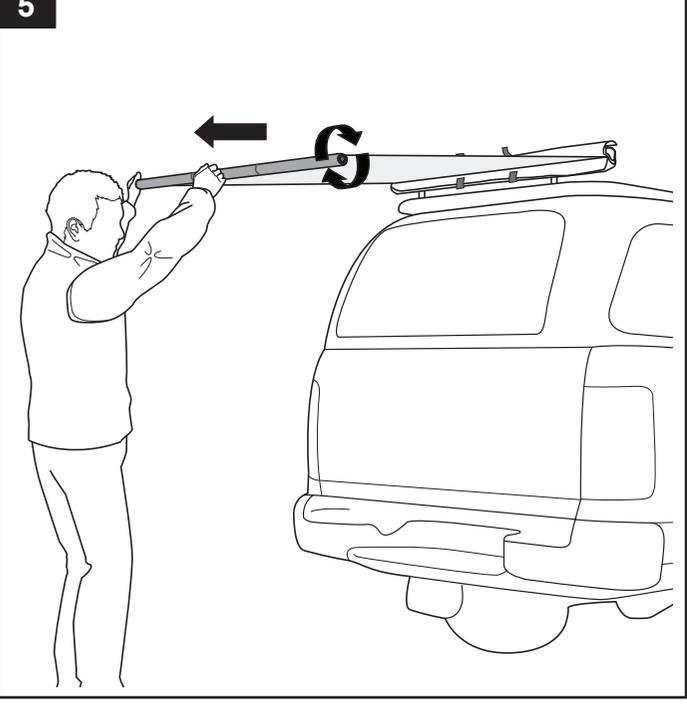



6

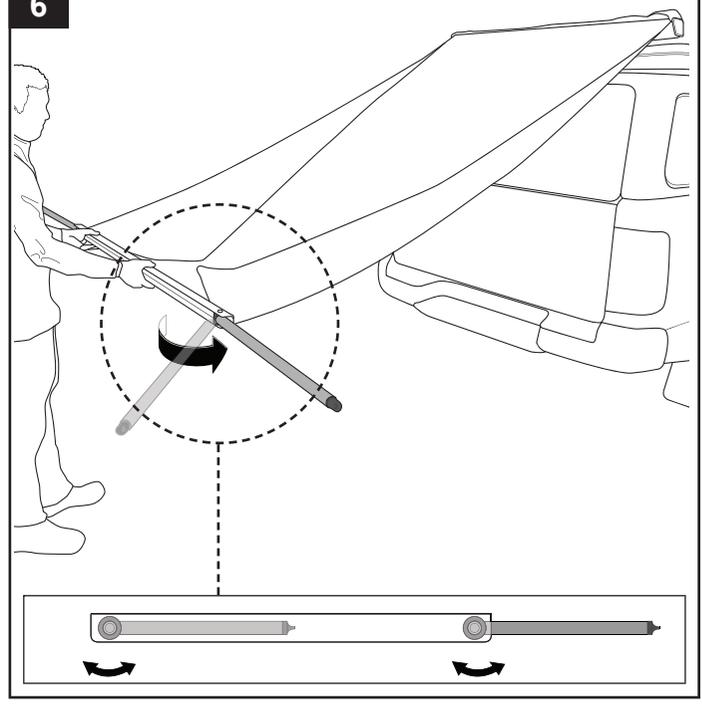




RHINO-RACK

Rhino-Rack Dome 1300 (32125)



7

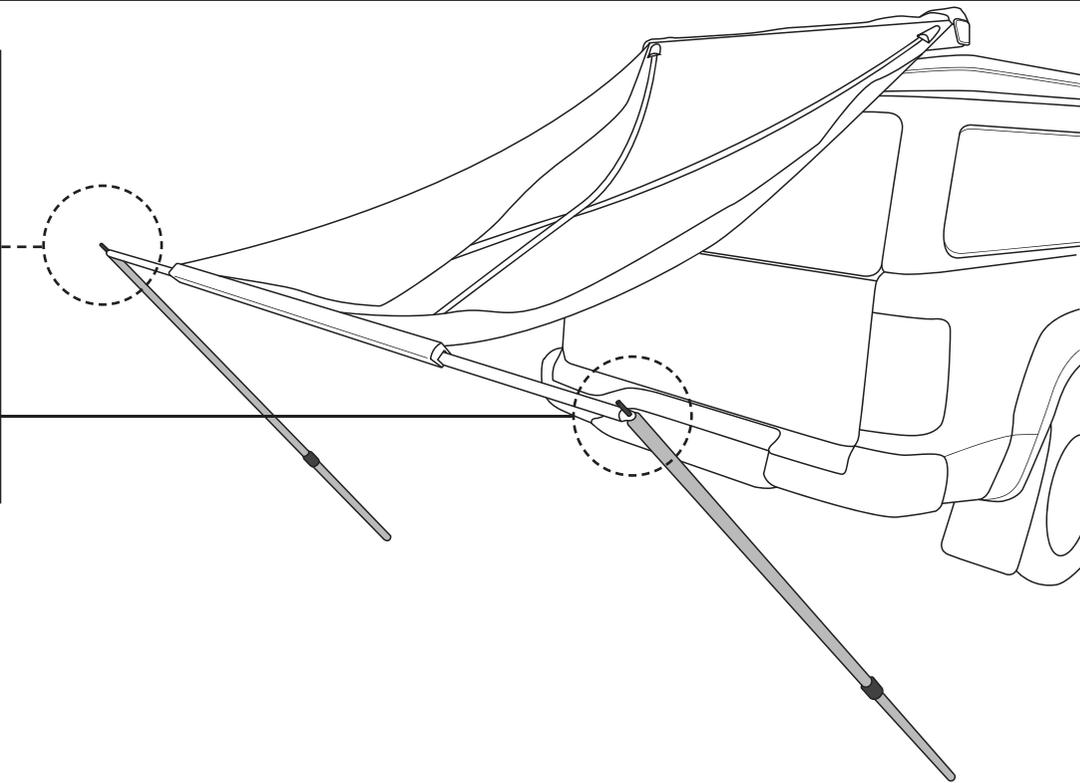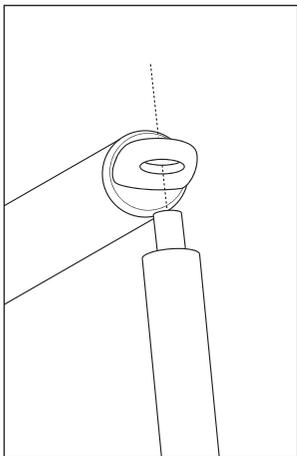

8

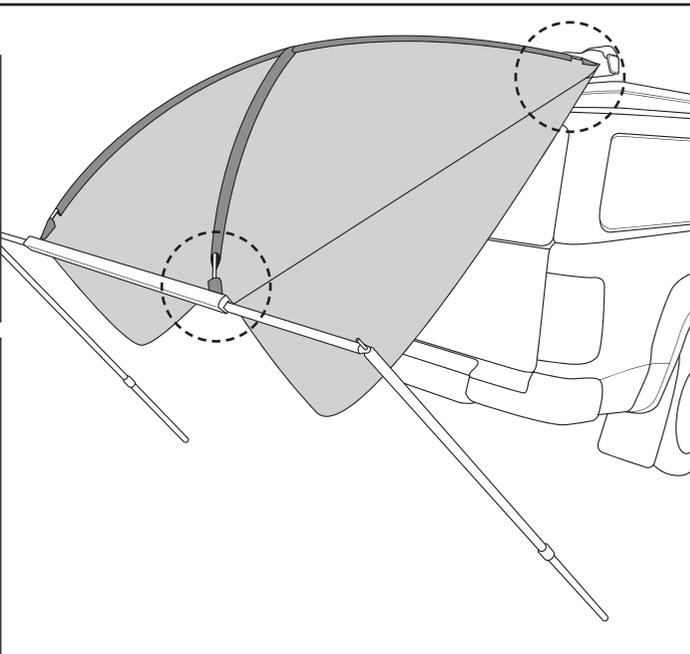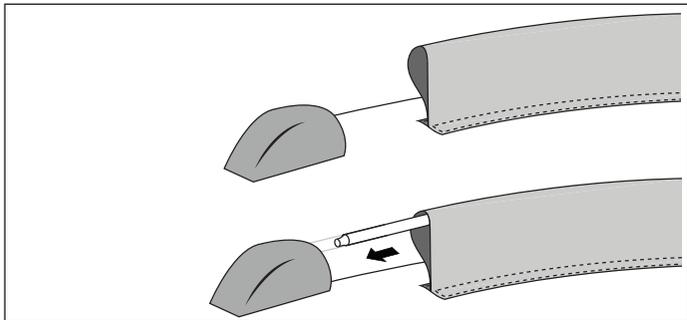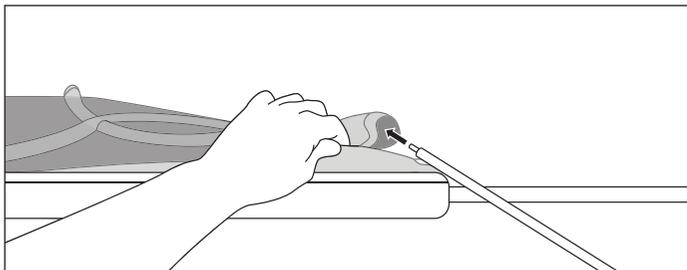


9

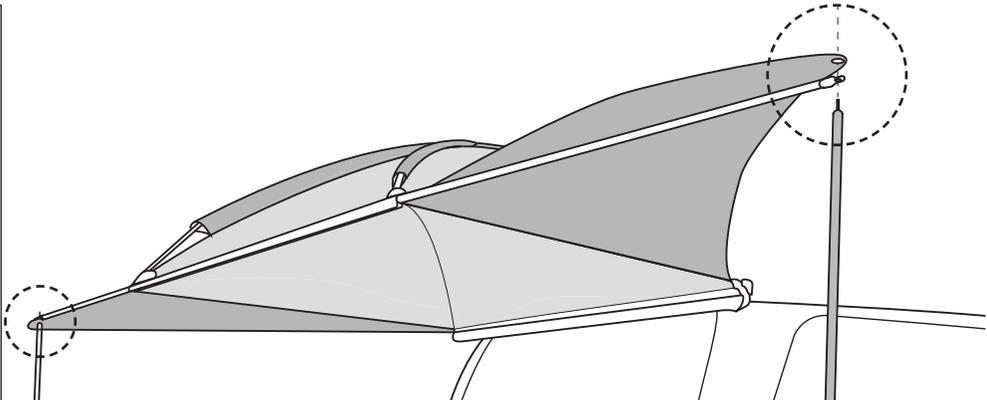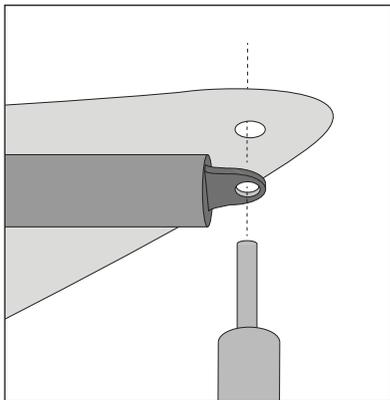





RHINO-RACK

Rhino-Rack Dome 1300 (32125)

10


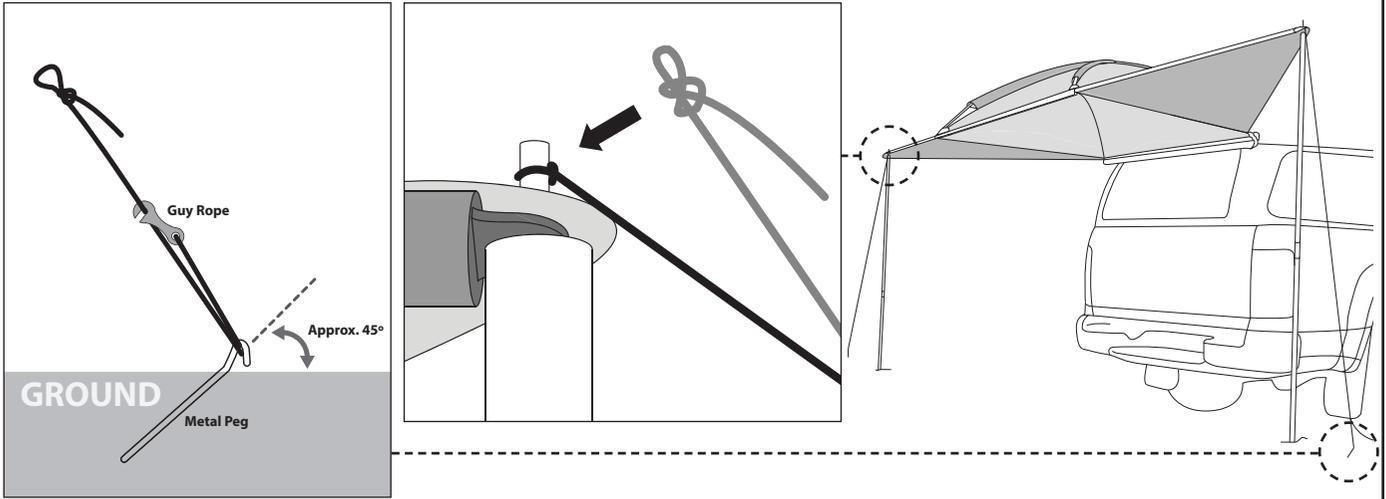


Storage Instructions

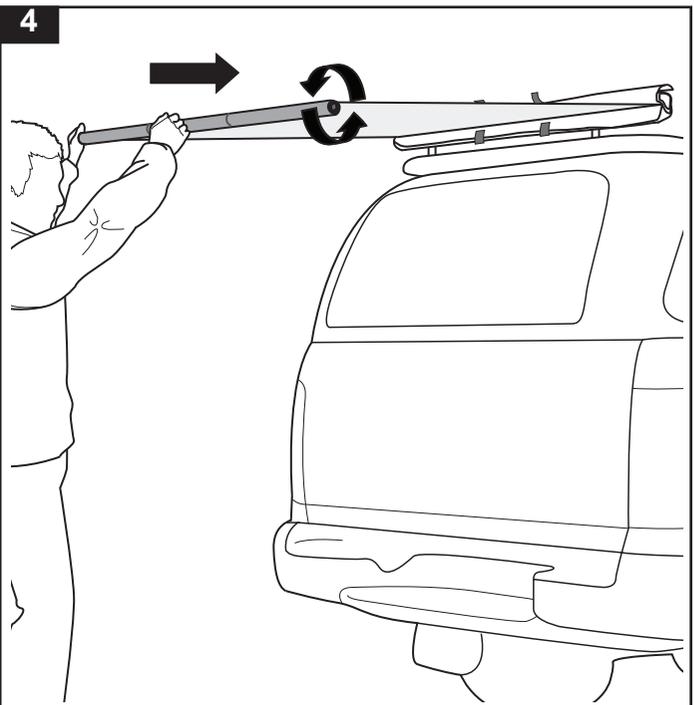
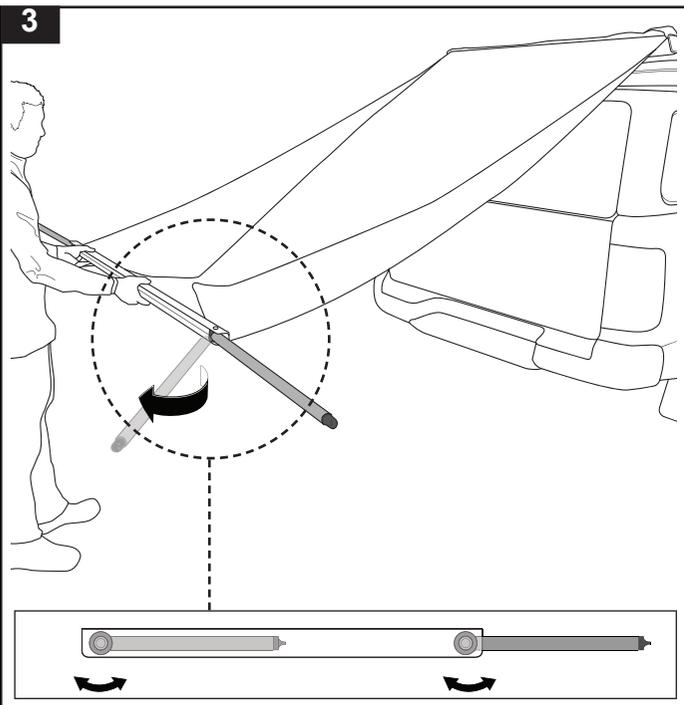
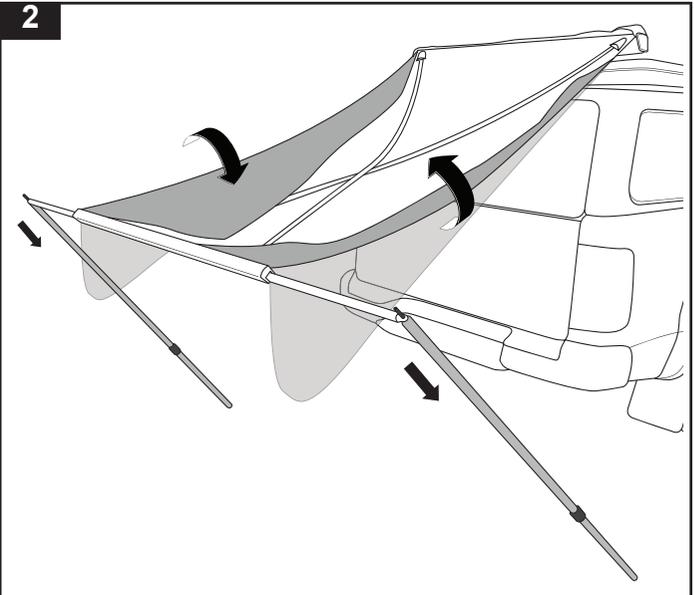
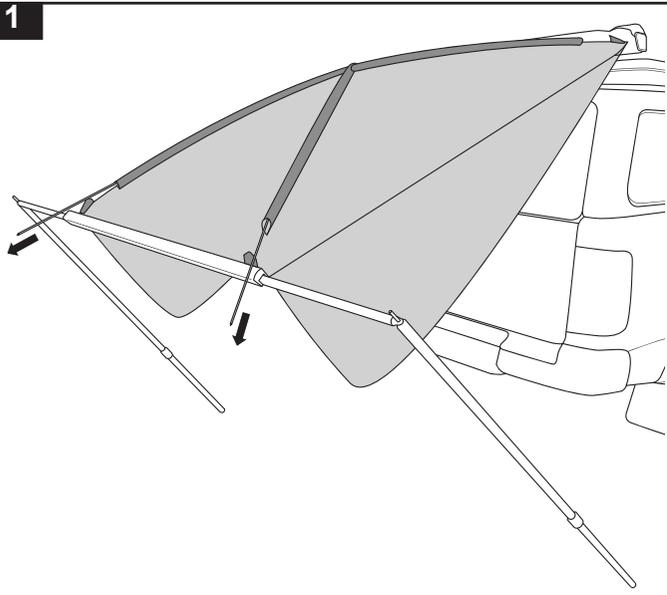


RHINO-RACK

Rhino-Rack Dome 1300 (32125)

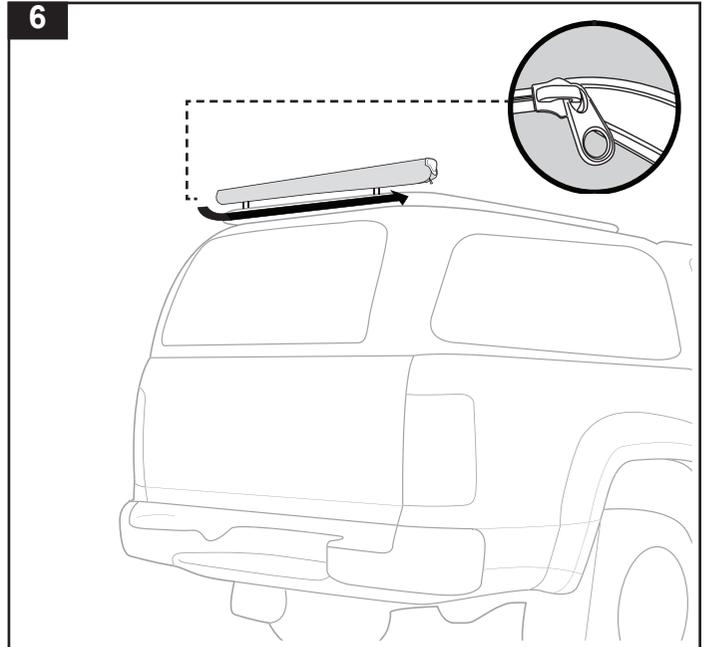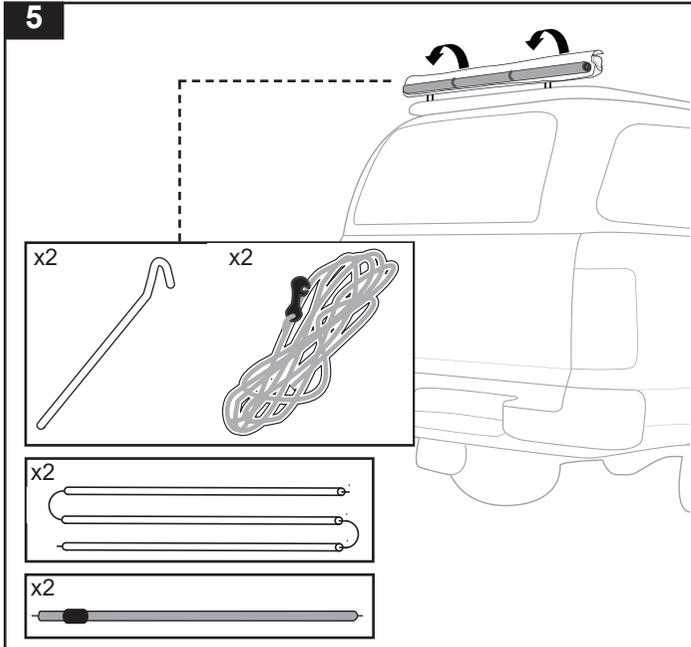


Side Mount Instructions

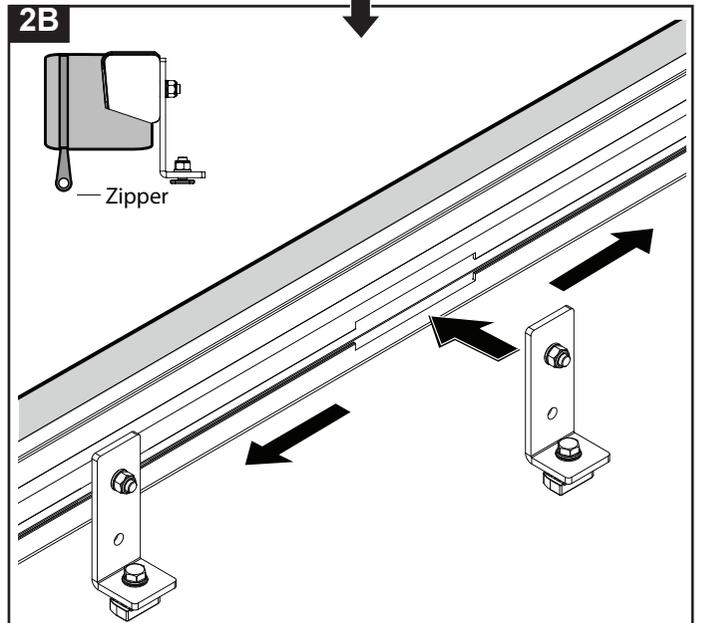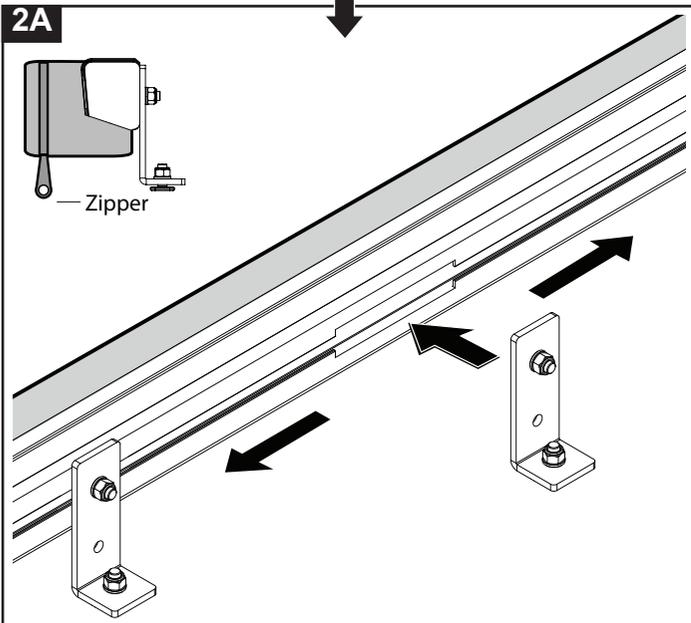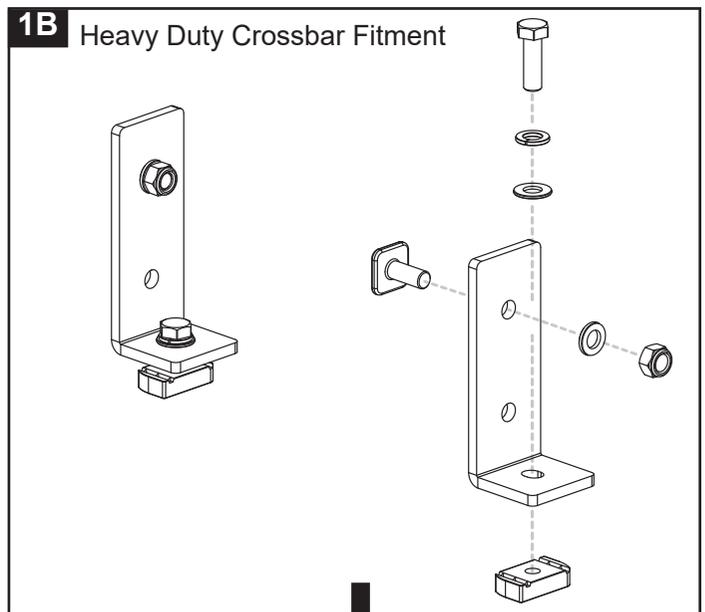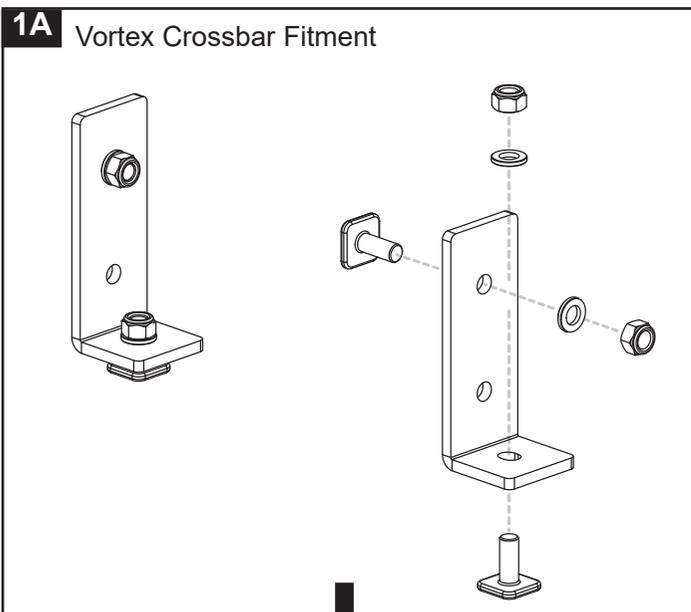


RHINO-RACK

Rhino-Rack Dome 1300 (32125)


3A

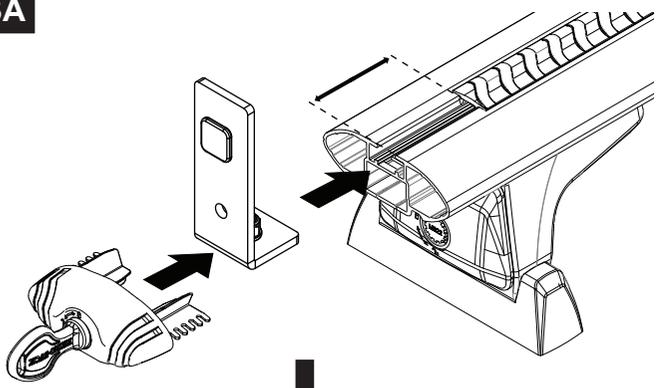

3B

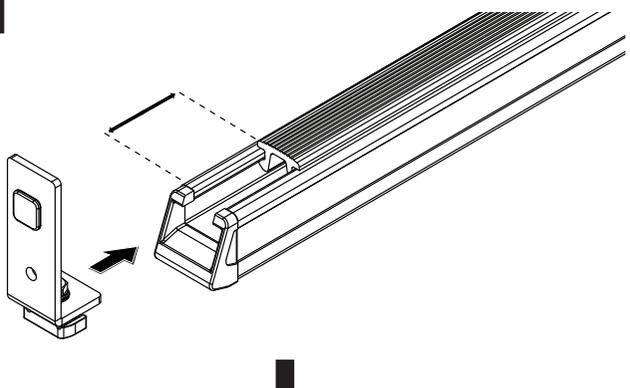

4A

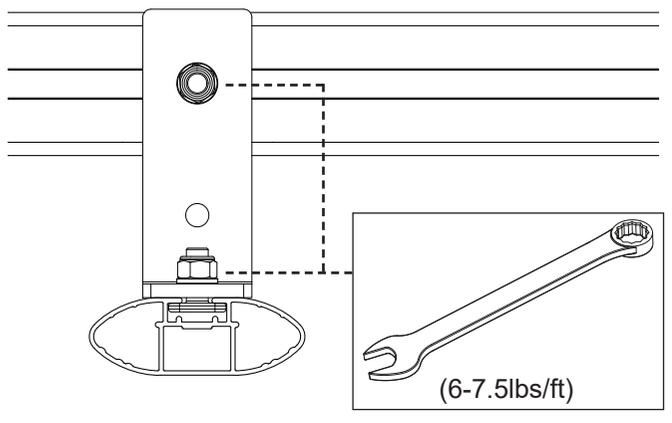

4B

