
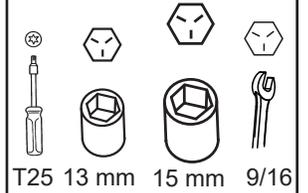



APPLICATION
GM Silverado/Sierra 1500
(Mid/Long Bed Only)

MODEL YEAR
2019 - 2024


PART NUMBER
75416-01A

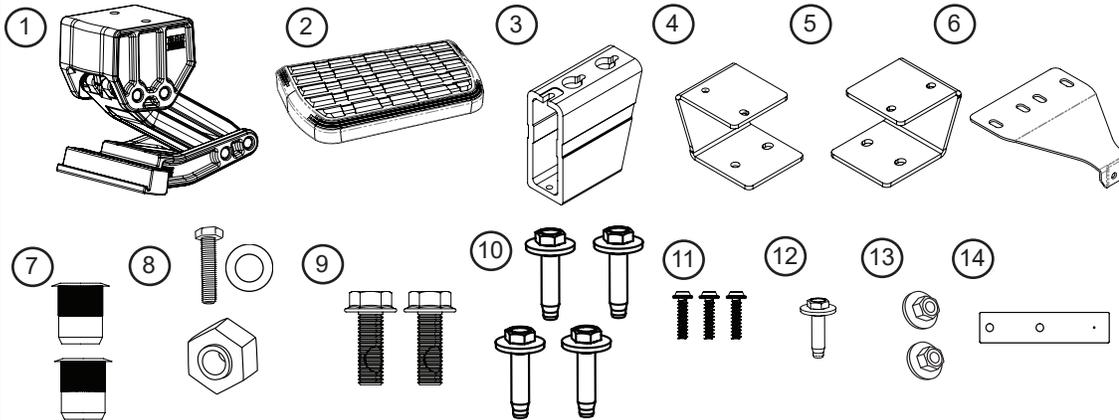

Components must be configured for Passenger or Drivers-Side as shown.

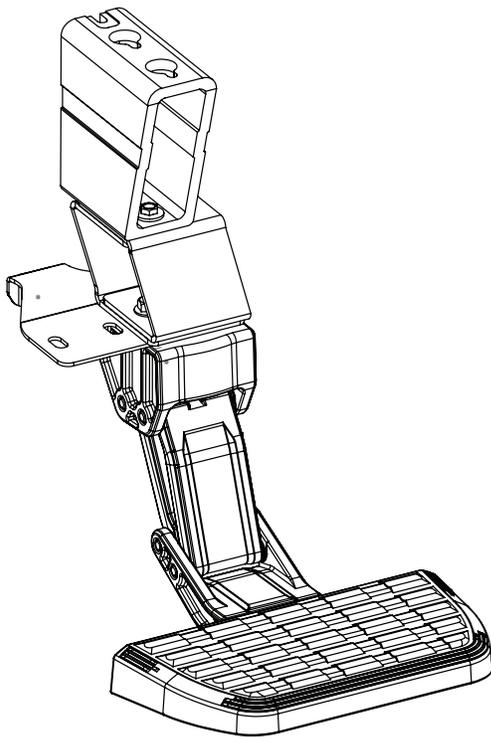

Driver-Side Orientation


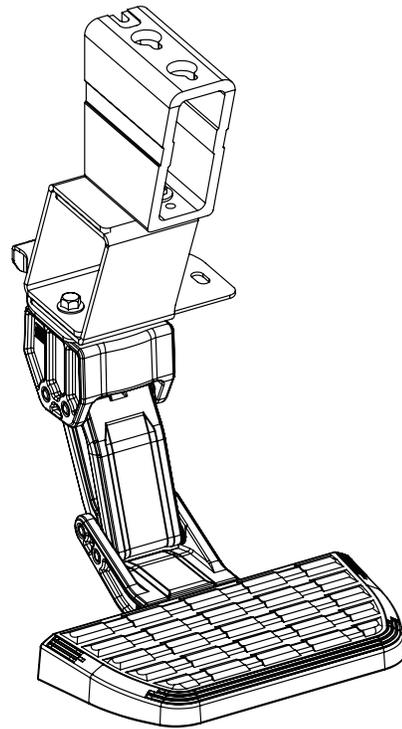


Passenger-Side Orientation

REALTRUCK TECH SUPPORT 1-888-983-2204 (Press 2) Monday - Friday, 8:00 AM - 5:00 PM EST

Designed and manufactured by AMP Research® • Made in Mexico
Patent Protected. Please see our product site for applicable patents. www.realtruck.com/b/amp-research/
© 2024 AMP Research • Three-year limited warranty. • Professional installation is recommended.



Using a 15mm Socket assemble Lateral mounting brackets onto linkage assembly. Steel support bracket is to be assembled between linkage and lateral mount. Do not tighten bolts yet. **NOTE: See page 1 for bracket orientation based on side of vehicle.**

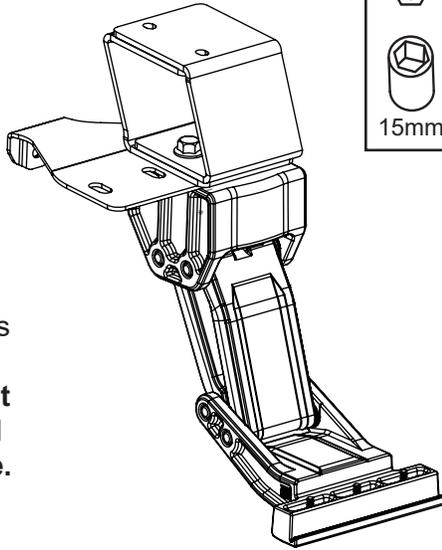

15mm

1


Using a 13mm socket assemble frame mount onto lateral mount using bolts (#10) and Captive washer nuts (#13). Torque to 16ft-lbs.

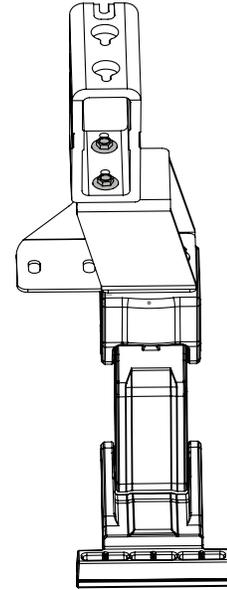

13mm

2


Remove factory bolt on forward most bed channel. Using supplied drill template (#14) and bolt (#10) attach template to bed channel. Make sure template edge is parallel to bed channel edge. Center punch hole, remove template, Pre drill using 1/8" drill bit. Then drill to 17/32". Install rivet nut with provided steps included in rivet nut package.

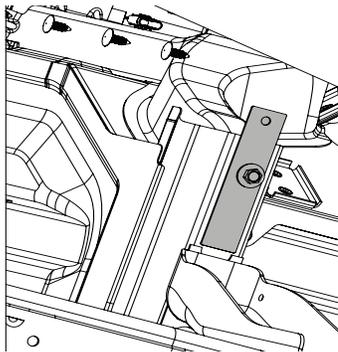

13mm


3

Hand start bolts (#10) into factory hole and into rivet nut.

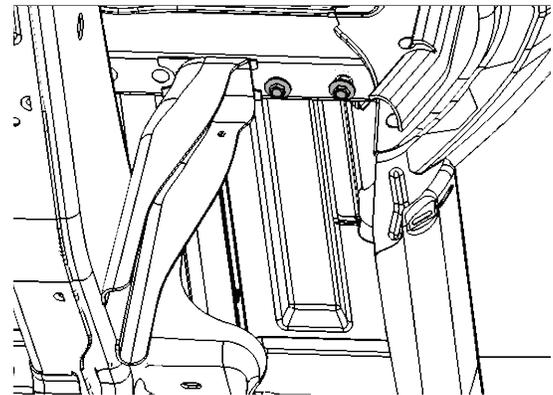

4


Slide assembly into position and snug bolts so frame mount of assembly is snug to bed channel. Adjust linkage assembly so its parallel to bed panel. Slide steel bracket up to frame and mark hole location to be drilled. Remove linkage assembly and pre drill using an 1/8" drill bit. Then drill to 17/32". Install rivet nut with provided steps included in rivet nut package.

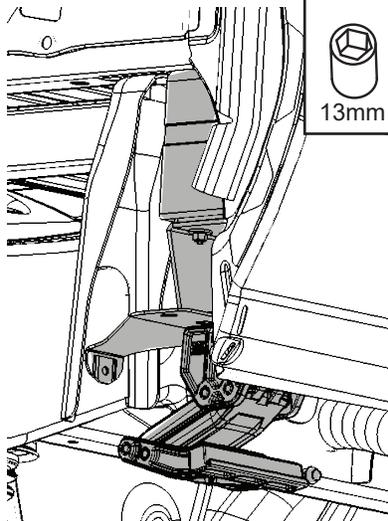

13mm

5


Install assembly into position. Tighten frame mount up to bed channel. Slide bracket up to frame and assemble bolt (#12) into position. **Hand tighten only.**

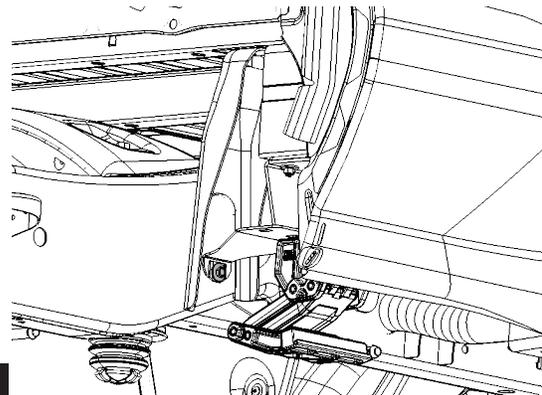

13mm

6

Center step pad on lower mount and scure using provided PT Screws. Tighten to 5ft-lbs using a T25 Torx bit. Verify Step pad alignment to body line of vehicle. Once step pad is in line to vehicle torque all bracket hardware to 16ft-lbs.

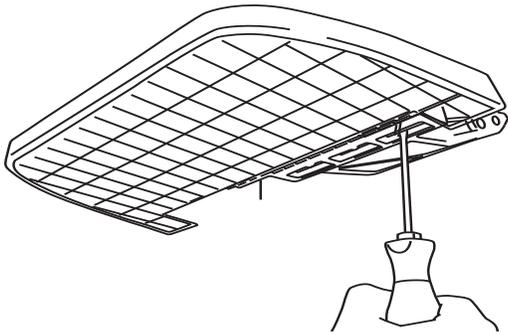


7




T25

Verify step pad alignment to body line of vehicle.

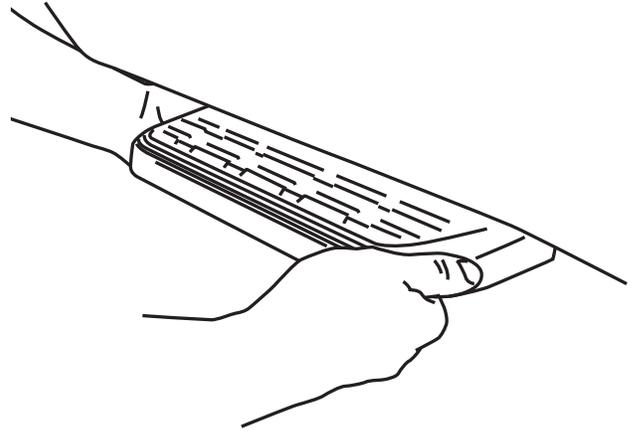


8

To deploy the step, press down using your foot on the outside edge of the step pad.

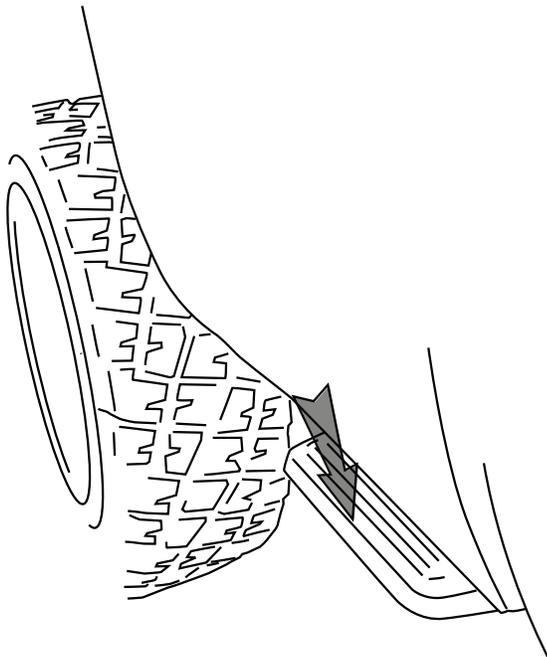

9

To retract, gently kick up on the underside of the step pad.

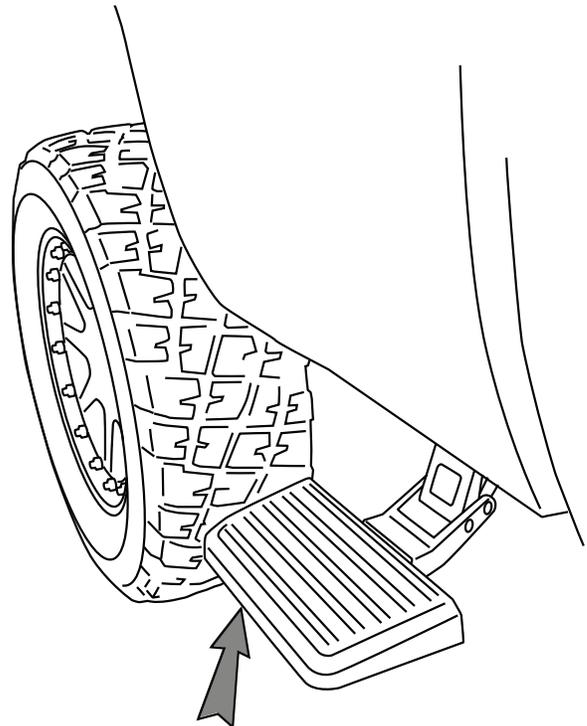

10

Thank you for your recent Realtruck Purchase.

**REGISTER YOUR PRODUCT TODAY FOR
FASTER SERVICE & PRODUCT UPDATES**

Please visit:

<https://realtruck.com/warranty-registration/>
or scan the QR Code



Product Registration Benefits:

- Ensure we have your purchase receipt and product info in our system which is required for warranty.
- Faster and easier access to customer service and tech support in the unlikely event you need warranty or product support.
- Registration helps us keep you up to date on product information and offers.

To view other Realtruck products that may be offered for your vehicle.

Please visit: www.realtruck.com



Congratulations on the purchase of your AMP Research BedStep®

Here's what you should know...

OPERATION

- The AMP Research BedStep® is foot operated and deploys and retracts with a nudge of your foot.
- To deploy, press down using your left foot, on the forward outside corner of the step pad.
- To retract, gently kick the underside of the step pad.
- Max Load Capacity: 300lbs.
- Always use appropriate hand holds when stepping up to or down from your truck's cargo bed.

MAINTENANCE TIPS

The step pad surface and linkage arms can be washed with mild soap and water using a soft brush or sponge to dislodge any mud, dirt or accumulated road grime. Rinse with fresh water.

To prevent slipping, avoid applying waxes, lubricants or protectants like Armor All® to the step surface.

ATTENTION!

BEDSTEP SHOULD ALWAYS BE STOWED IN THE RETRACTED POSITION WHEN DRIVING.

LIMITED WARRANTY

REALTRUCK warrants product to be free from defects in material and workmanship, for terms specified below, provided there has been normal use and proper maintenance. All remedies under this warranty are limited to the repair or replacement of any item found by the factory to be defective within the time period specified.

If you have a warranty claim, first you must call our factory at the number below for instructions. You must retain proof of purchase and submit a copy with any items returned for warranty work. Upon completion of warranty work, if any, we will return the repaired or replaced item or items to you freight prepaid. Damage to our products caused by accidents, fire, vandalism, negligence, misinstallation, misuse, acts by mother nature, or by defective parts not manufactured by us, is not covered under this warranty.

THE WARRANTY TIME PERIOD IS AS FOLLOWS: THREE YEARS FROM DATE OF PURCHASE.

ANY IMPLIED WARRANTIES OF MERCHANTABILITY AND/OR FITNESS FOR A PARTICULAR PURPOSE CREATED HEREBY ARE LIMITED IN DURATION TO THE SAME DURATION AND SCOPE AS THE EXPRESS WRITTEN WARRANTY. OUR COMPANY SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGE.

Some states do not allow limitations on how long an implied warranty lasts, or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights that vary from state to state.

FOR WARRANTY ISSUES WITH THIS PRODUCT PLEASE CALL REALTRUCK CUSTOMER SERVICE 1-888-983-2204

WARNING

Be sure to read and precisely follow the provided instructions when installing this product. Failure to do so could place the vehicle occupants in a potentially dangerous situation. After installing or reinstalling, re-check to insure that the product is properly installed.