



APPLICATION
Ram DT 1500

MODEL YEAR
2019 - 2024

PART NUMBER
75414-01A

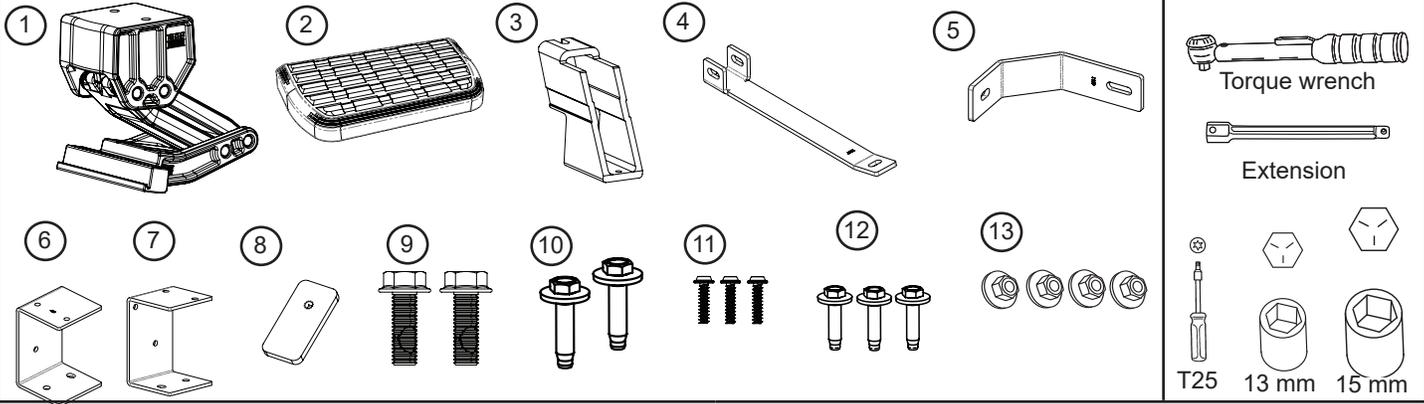


For 5.5' bed lengths components must be configured for Passenger or Driver-side as shown.

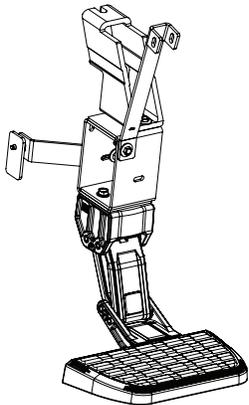


**Driver-Side
Orientation**

**Passenger-Side
Orientation**


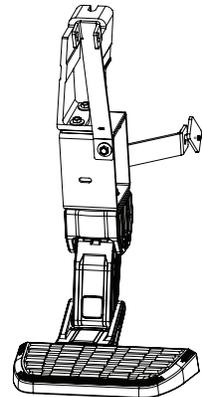


For 6.5' bed lengths components must be configured for Passenger or Driver-side as shown.

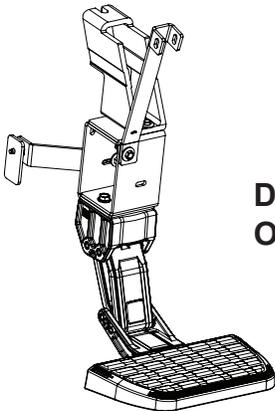

**Driver-Side
Orientation**


**Passenger-Side
Orientation**

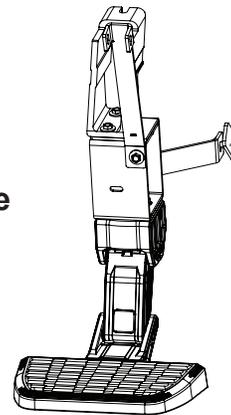


REALTRUCK TECH SUPPORT 1-888-983-2204 (Press 2) Monday - Friday, 8:00 AM - 5:00 PM EST

Designed and manufactured by AMP Research® • Made in Mexico
Patent Protected. Please see our product site for applicable patents. www.realtruck.com/b/amp-research/
© 2024 AMP Research • Three-year limited warranty. • Professional installation is recommended.


Using a 13mm Socket and wrench assemble the frame mount to the lateral mounting brackets. Use bolts (10) and nuts (13). Note orientation of brackets. Torque bolts to 16 ft-lbs.

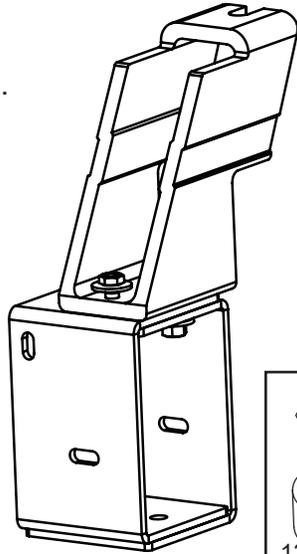


1




Assemble Linkage to bracket assembly using a 15mm Socket or wrench. Use supplied flange Bolts (9). Do not tighten bolts, leave loose to adjust linkage in a later step.

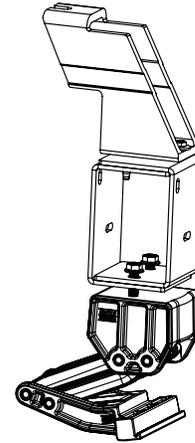


2




Loosen factory bed bolt using a 15mm socket with extension. Loosen enough to slide bracket assembly into position.

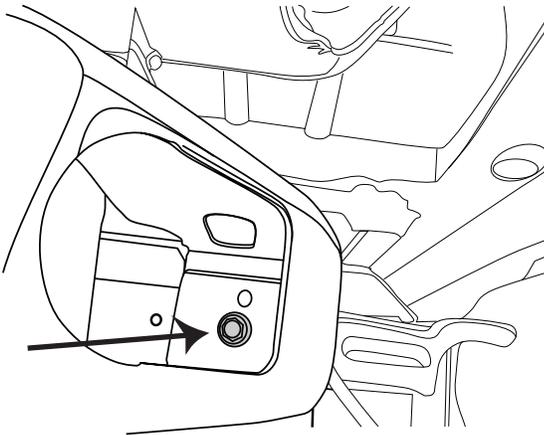


3




Set linkage assembly into position and tighten bed bolt. Torque bed bolt to 40ft-lbs.

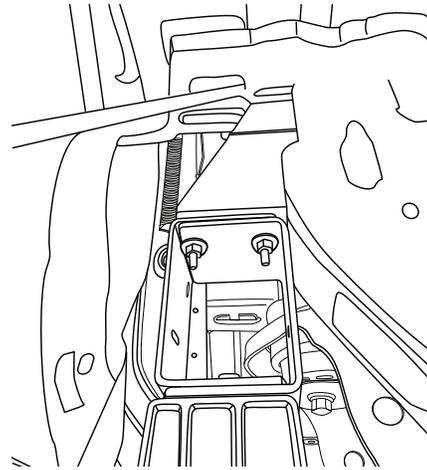


4




Assemble Rear support Bracket (#5). Use Bolt (#12) and nut (#13) on linkage assembly and Bolt (#12) and threaded nut plate (#8) on Frame. Torque bolts to 16ft-lbs.

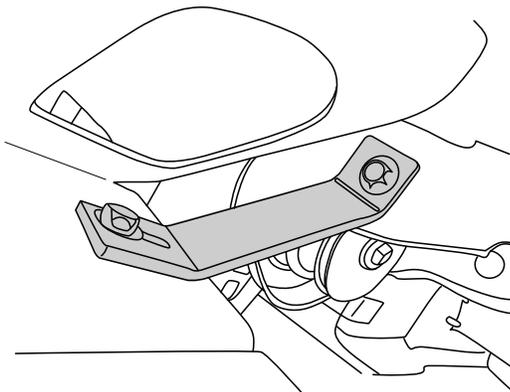


5




Locate factory bed bolt. Using a 13mm socket or wrench remove bolt.

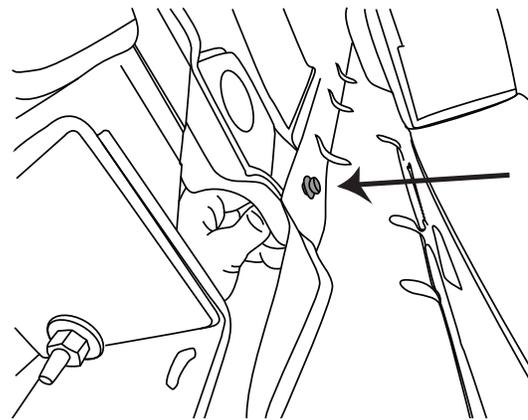

6




Using factory bolt removed in previous step attach bracket to bed. Use supplied Bolt (#12) and Nut (#13) to attach bracket to linkage assembly. Torque bolts to 16ft-lbs.

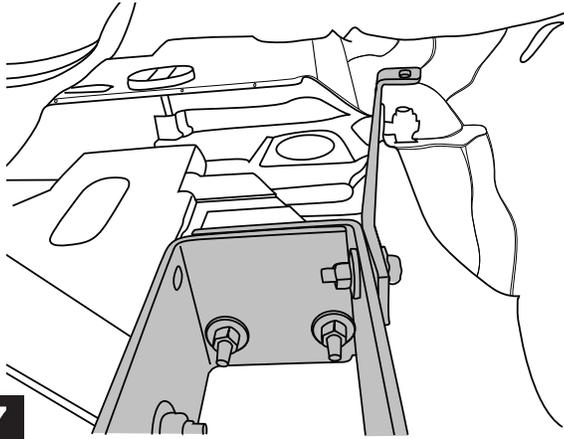

7

13mm


Install step pad (#2) onto linkage. Torque to 5ft-lbs. **6.5'** bed applications center step pad on linkage (As shown). **5.5'** bed applications offset step pad forward on linkage.

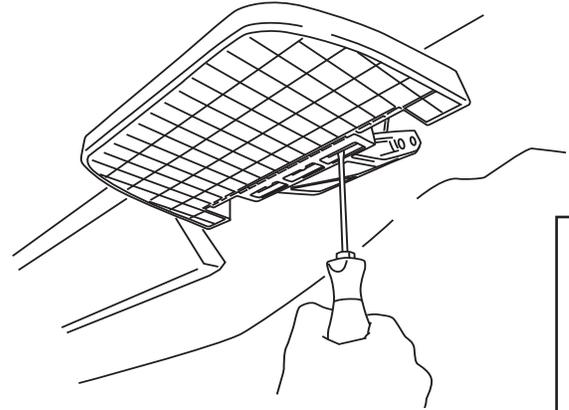

8


T25

Verify step pad alignment to body line of vehicle.

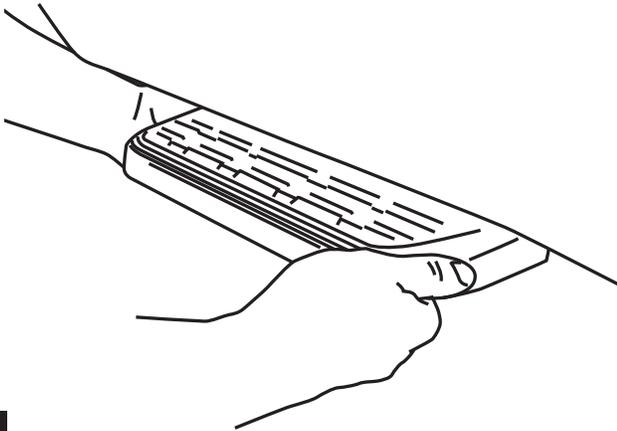

9


Tighten linkage bolts using a socket or wrench. Torque bolts to 20ft-lbs.

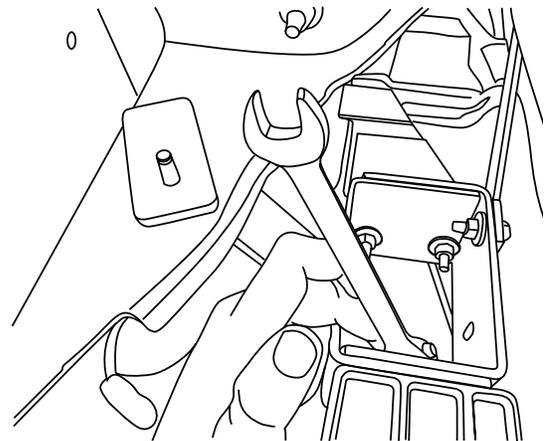

10


15mm

To deploy the step, press down using your foot on the outside edge of the step pad.

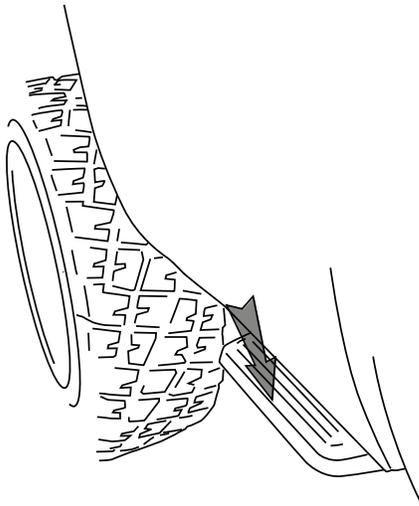

11

To retract, gently kick up on the underside of the step pad.

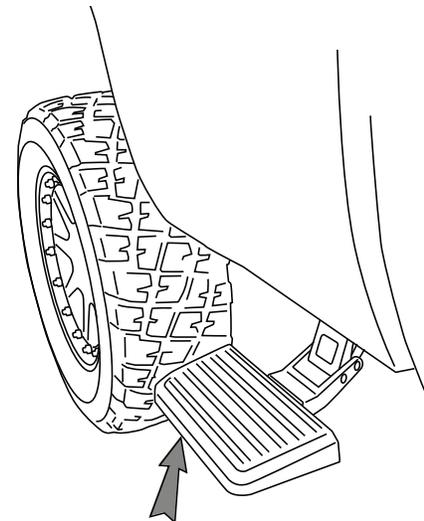

12

Thank you for your recent Realtruck Purchase.

**REGISTER YOUR PRODUCT TODAY FOR
FASTER SERVICE & PRODUCT UPDATES**

Please visit:

<https://realtruck.com/warranty-registration/>
or scan the QR Code



Product Registration Benefits:

- Ensure we have your purchase receipt and product info in our system which is required for warranty.
- Faster and easier access to customer service and tech support in the unlikely event you need warranty or product support.
- Registration helps us keep you up to date on product information and offers.

To view other Realtruck products that may be offered for your vehicle.

Please visit: www.realtruck.com



Congratulations on the purchase of your AMP Research BedStep®

Here's what you should know...

OPERATION

- The AMP Research BedStep® is foot operated and deploys and retracts with a nudge of your foot.
- To deploy, press down using your left foot, on the forward outside corner of the step pad.
- To retract, gently kick the underside of the step pad.
- Max Load Capacity: 300lbs.
- Always use appropriate hand holds when stepping up to or down from your truck's cargo bed.

MAINTENANCE TIPS

The step pad surface and linkage arms can be washed with mild soap and water using a soft brush or sponge to dislodge any mud, dirt or accumulated road grime. Rinse with fresh water.

To prevent slipping, avoid applying waxes, lubricants or protectants like Armor All® to the step surface.

ATTENTION!

BEDSTEP SHOULD ALWAYS BE STOWED IN THE RETRACTED POSITION WHEN DRIVING.

LIMITED WARRANTY

REALTRUCK warrants product to be free from defects in material and workmanship, for terms specified below, provided there has been normal use and proper maintenance. All remedies under this warranty are limited to the repair or replacement of any item found by the factory to be defective within the time period specified.

If you have a warranty claim, first you must call our factory at the number below for instructions. You must retain proof of purchase and submit a copy with any items returned for warranty work. Upon completion of warranty work, if any, we will return the repaired or replaced item or items to you freight prepaid. Damage to our products caused by accidents, fire, vandalism, negligence, misinstallation, misuse, acts by mother nature, or by defective parts not manufactured by us, is not covered under this warranty.

THE WARRANTY TIME PERIOD IS AS FOLLOWS: THREE YEARS FROM DATE OF PURCHASE.

ANY IMPLIED WARRANTIES OF MERCHANTABILITY AND/OR FITNESS FOR A PARTICULAR PURPOSE CREATED HEREBY ARE LIMITED IN DURATION TO THE SAME DURATION AND SCOPE AS THE EXPRESS WRITTEN WARRANTY. OUR COMPANY SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGE.

Some states do not allow limitations on how long an implied warranty lasts, or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights that vary from state to state.

FOR WARRANTY ISSUES WITH THIS PRODUCT PLEASE CALL REALTRUCK CUSTOMER SERVICE 1-888-983-2204

WARNING

Be sure to read and precisely follow the provided instructions when installing this product. Failure to do so could place the vehicle occupants in a potentially dangerous situation. After installing or reinstalling, re-check to insure that the product is properly installed.