


21+ / FORD BRONCO

OVERHEAD MOLLE

AC2302901NA

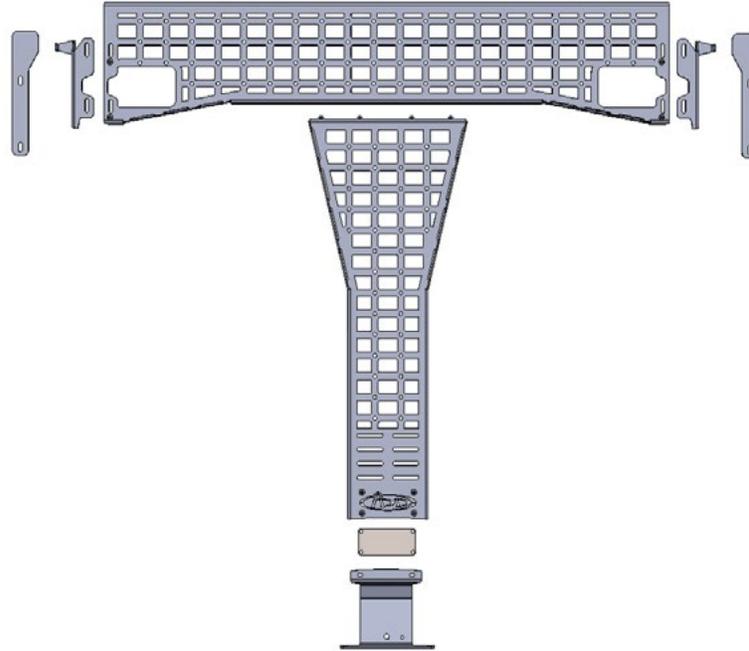

TOOLS REQUIRED

(Torx) T15, T55
(Wrench) 7/16, 8mm, 10mm
(Socket) 7/16, 8mm, 10mm
Ratchet



TIME REQUIRED

- 1 Hour



SKILL LEVEL

-Easy/Intermediate



INCLUDED IN KIT

12- 1/4"-20 x 3/4" Button Head Bolts
12- 1/4"-20 Nylon Lock Nuts
12- 1/4" Flat Washers

****This installation requires 2 people for best results****

⚠️ WARNINGS/CAUTIONS BEFORE STARTING INSTALLATION ⚠️

-BEFORE YOU INSTALL THIS KIT-

Read and understand all instructions, warnings, cautions, & notes contained in this installation instruction guide. Consult your vehicle owner's manual for proper disconnection of electrical and lifting of vehicle if required for installation of this product.

This install may require some technical skills and knowledge of basic mechanical work. If you do not feel that you are capable of performing this install please take this product to a trained professional.

After reading this guide please contact us with any questions or concerns before installing product.
Customer Service (480) 671-0820

Addictive desert designs is *not* responsible for any bodily injury or harm to you or your vehicle as a result of an improper install.

Proper installation of this kit required knowledge of the factory recommended procedures for removal and installation of original equipment components.

We recommend that the factory shop manual and any special tools needed to service your vehicle be on hand during the installation. Installation of this kit without proper knowledge of the factory recommended procedures may affect the performance of these components and the safety of the vehicle.

Inspect all contents of this package to make sure product is not damaged and all installation hardware has been included. If parts are missing from kit, please be prepared to provide the following information:

1. Name of purchase location
2. Bar Code on side of box
3. Date above bar code
4. Date inside box cover

ALWAYS WEAR EYE PROTECTION WHEN OPERATING POWER TOOLS

OVERHEAD MOLLE 21+/FORD BRONCO

STEP 1

Remove front section of hardtop/soft top.



OVERHEAD MOLLE 21+/FORD BRONCO

STEP 2

Remove the two stock bolts holding the hardtop brackets using a (T50).



OVERHEAD MOLLE 21+/FORD BRONCO

□ STEP 3

Remove the stock bolt holding the plastic using a (8mm Socket).



OVERHEAD MOLLE 21+/FORD BRONCO

❑ STEP 4

Remove the sun visor clips using a (T15).



OVERHEAD MOLLE 21+/FORD BRONCO

STEP 5

Pull down on the overhead and remove the two bolts as shown below using a (T50).



OVERHEAD MOLLE 21+/FORD BRONCO

STEP 6


Remove the nut using a (10mm wrench).



OVERHEAD MOLLE 21+/FORD BRONCO

STEP 7


Install the front bracket using the hardware removed from step 5 and 6.

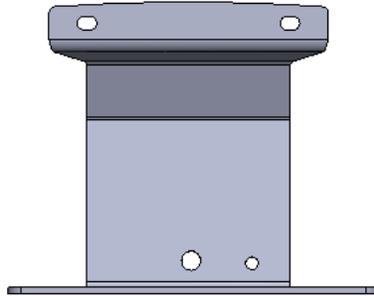

OVERHEAD MOLLE 21+/FORD BRONCO

□ STEP 8

Assemble the two main panels with the provided 1/4-20 button head bolts, nylon lock nuts and washers using a (7/16 wrench) and a (5/32 allen).

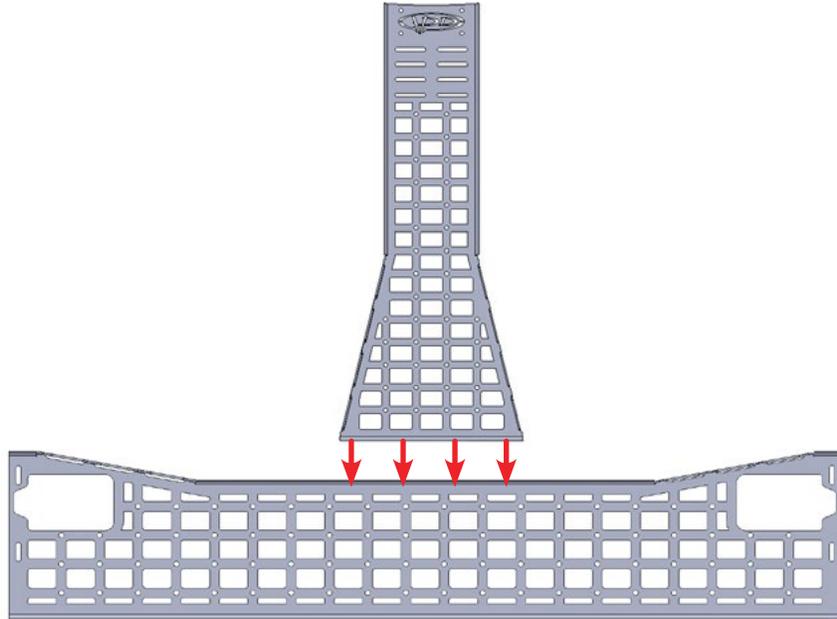


OVERHEAD MOLLE

21+/FORD BRONCO

□ STEP 9

Assemble the side mount brackets with the provided 1/4-20 button head bolts, nylon lock nuts and washers using a (7/16 wrench) and a (5/32 allen).

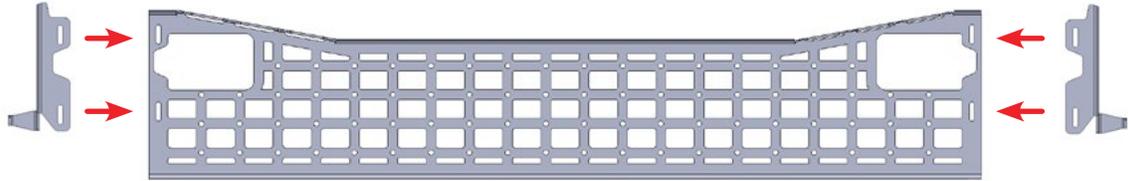


OVERHEAD MOLLE

21+/FORD BRONCO

□ STEP 10

Assemble the backer plate with the provided 1/4-20 button head bolts, nylon lock nuts and washers using a (7/16 wrench) and a (5/32 allen). **(keep the two front holes removed for later in install)**

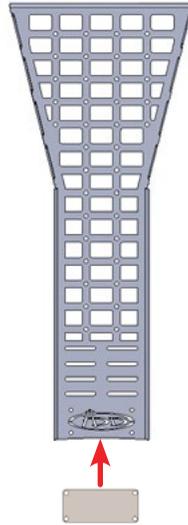

OVERHEAD MOLLE 21+/FORD BRONCO

□ STEP 11



With another person, place the overhead molle that you assembled with the side mounts slipped into the slot provided on the bronco.



OVERHEAD MOLLE 21+/FORD BRONCO

□ STEP 12

Install the stock bolt removed from **step 3** using a (10mm wrench).

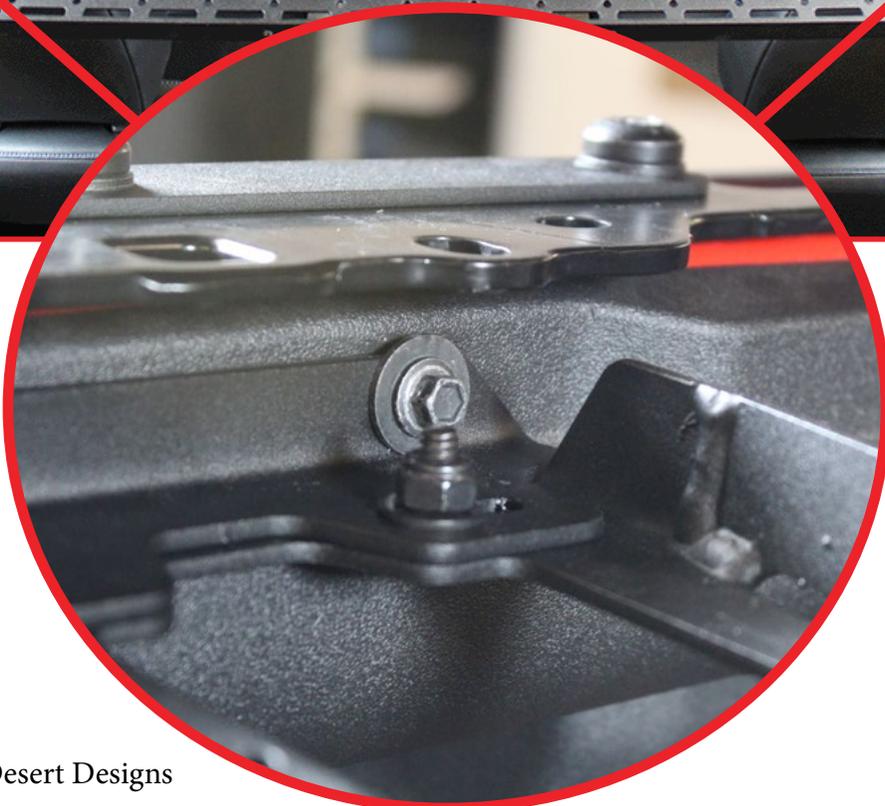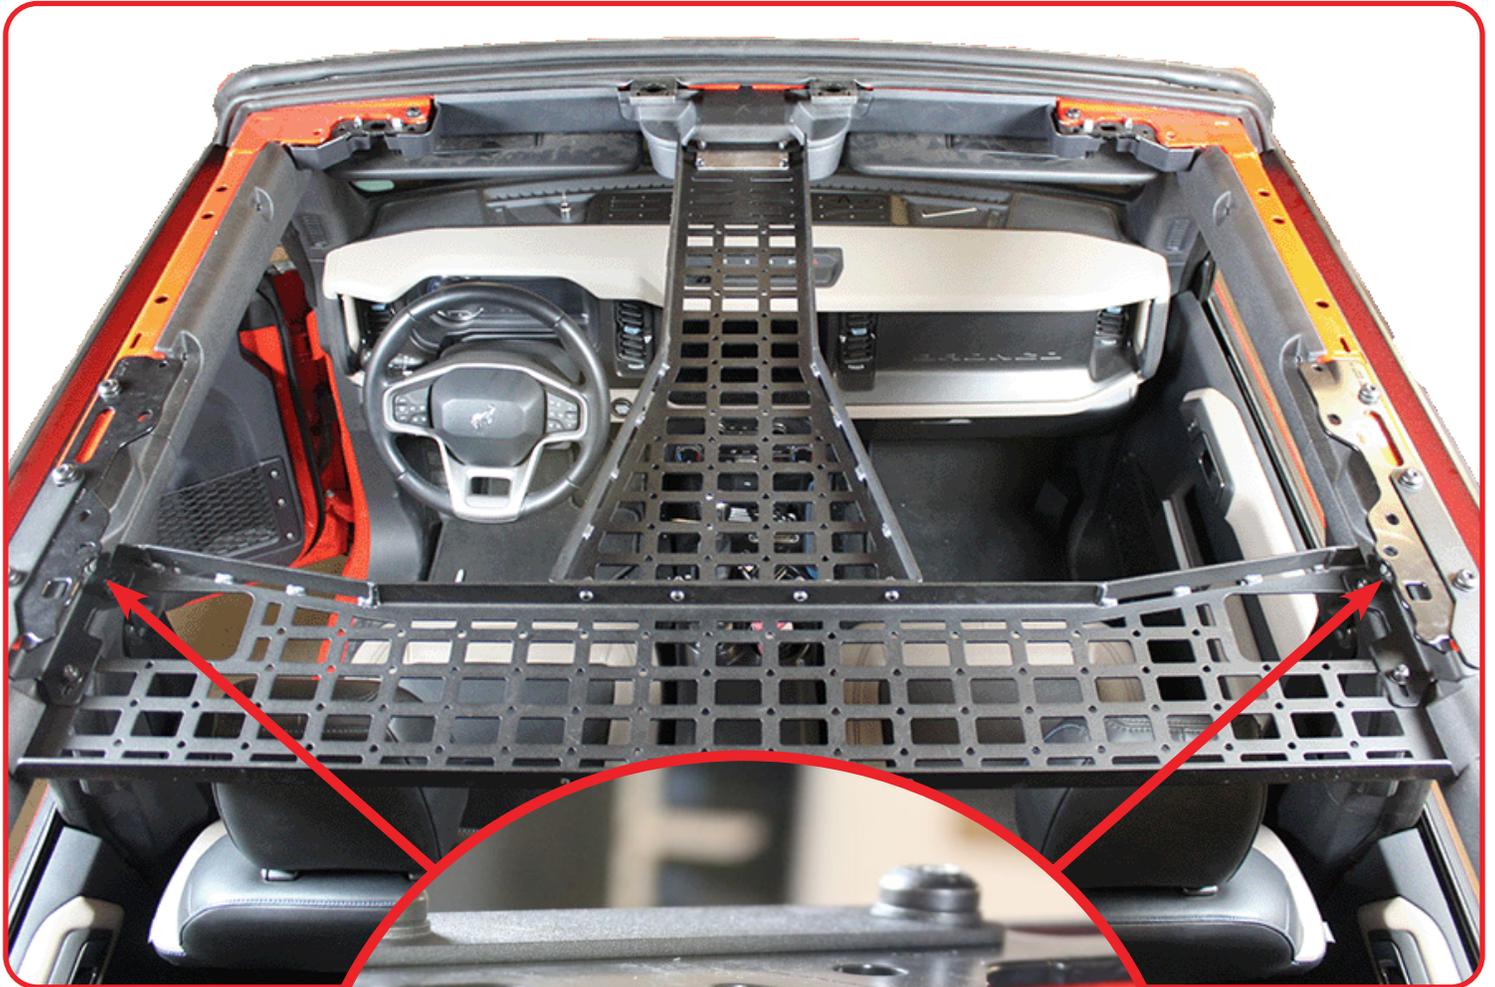

OVERHEAD MOLLE 21+/FORD BRONCO

□ STEP 13


Install the clamp plates using the hardware removed from **step 2** with a (T55).



OVERHEAD MOLLE 21+/FORD BRONCO

□ STEP 14


Install the front of the overhead molle with the provided 1/4-20 button head bolts, nylon lock nuts and washers using a (7/16 wrench) and a (5/32 allen).

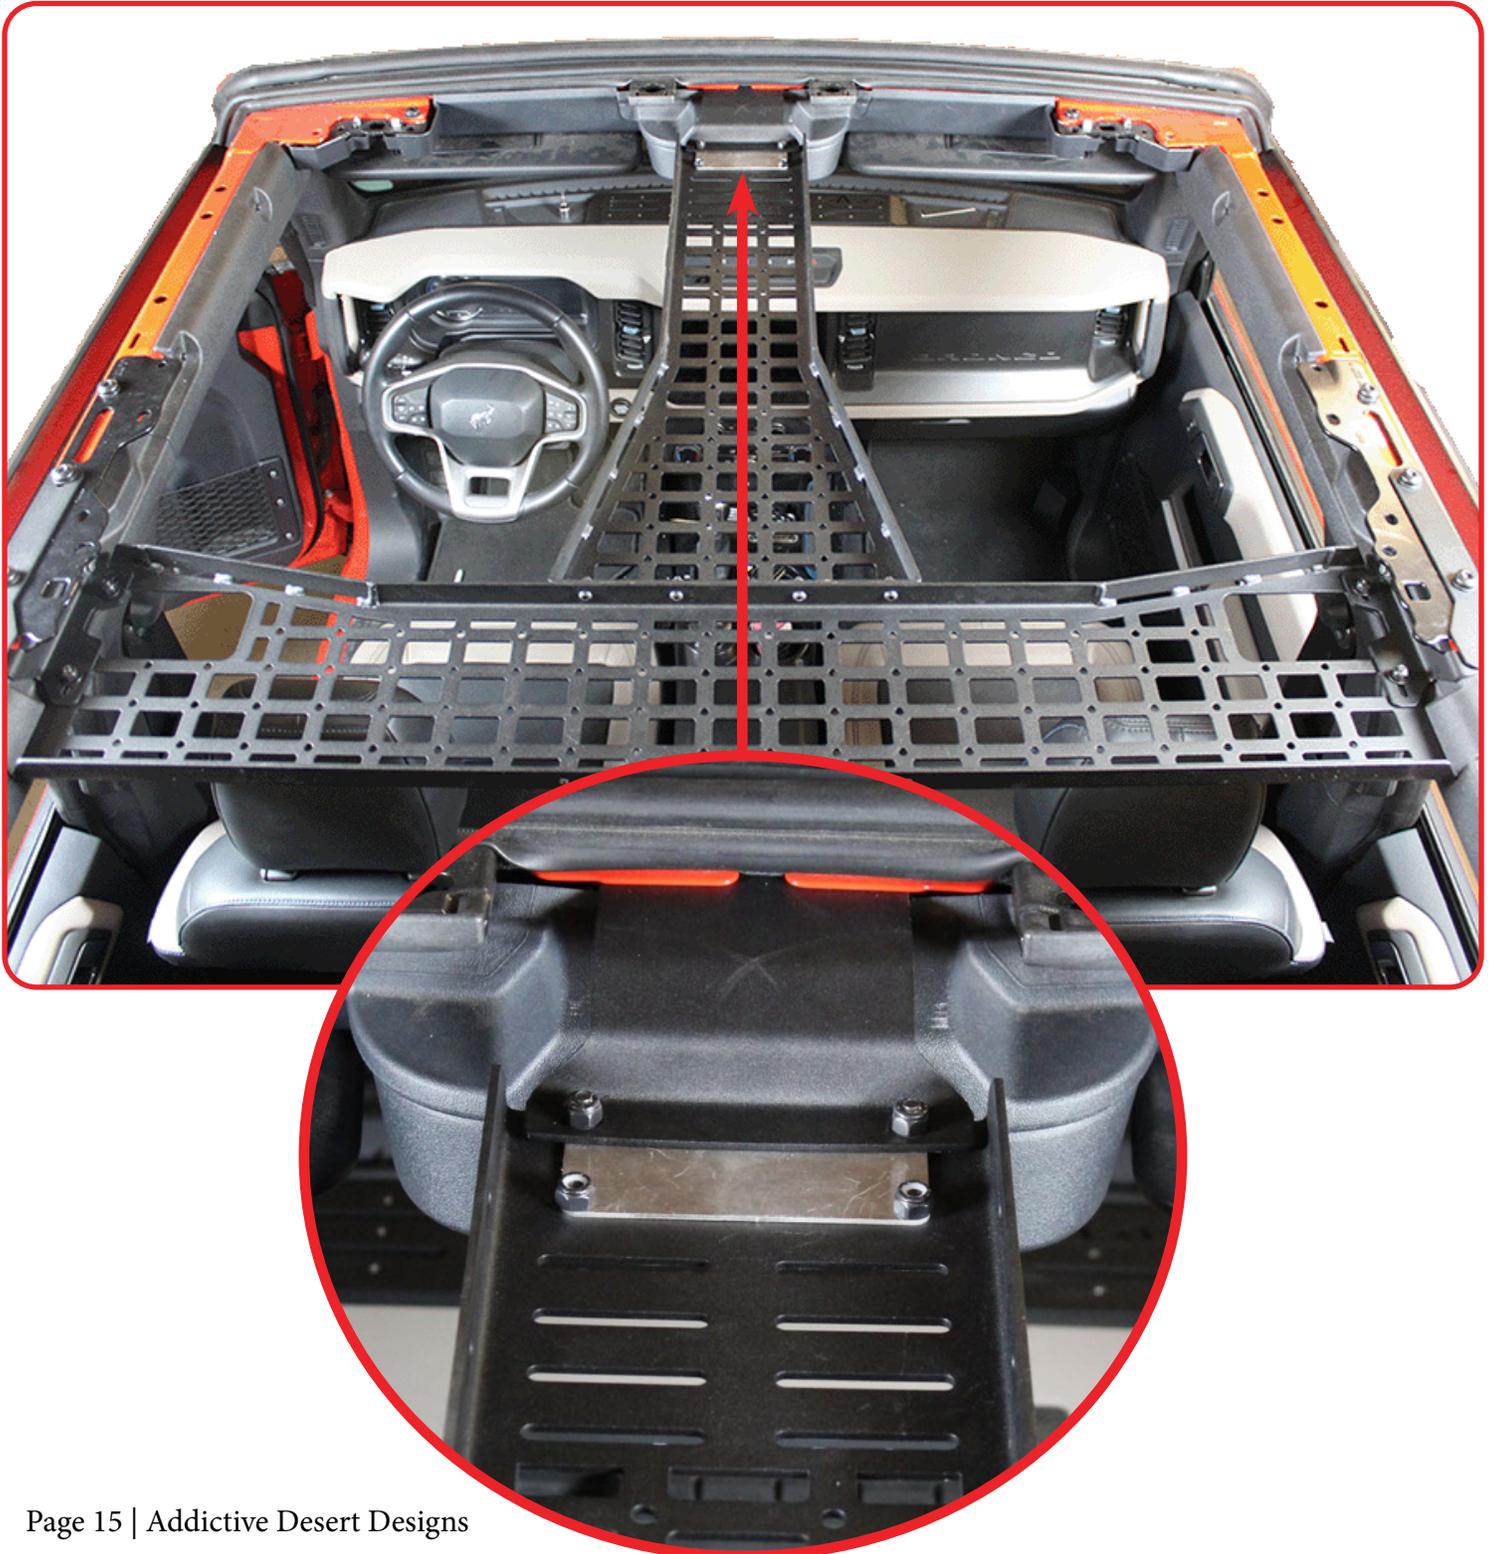

OVERHEAD MOLLE 21+/FORD BRONCO

□ STEP 15

Clip the overhead back into place.

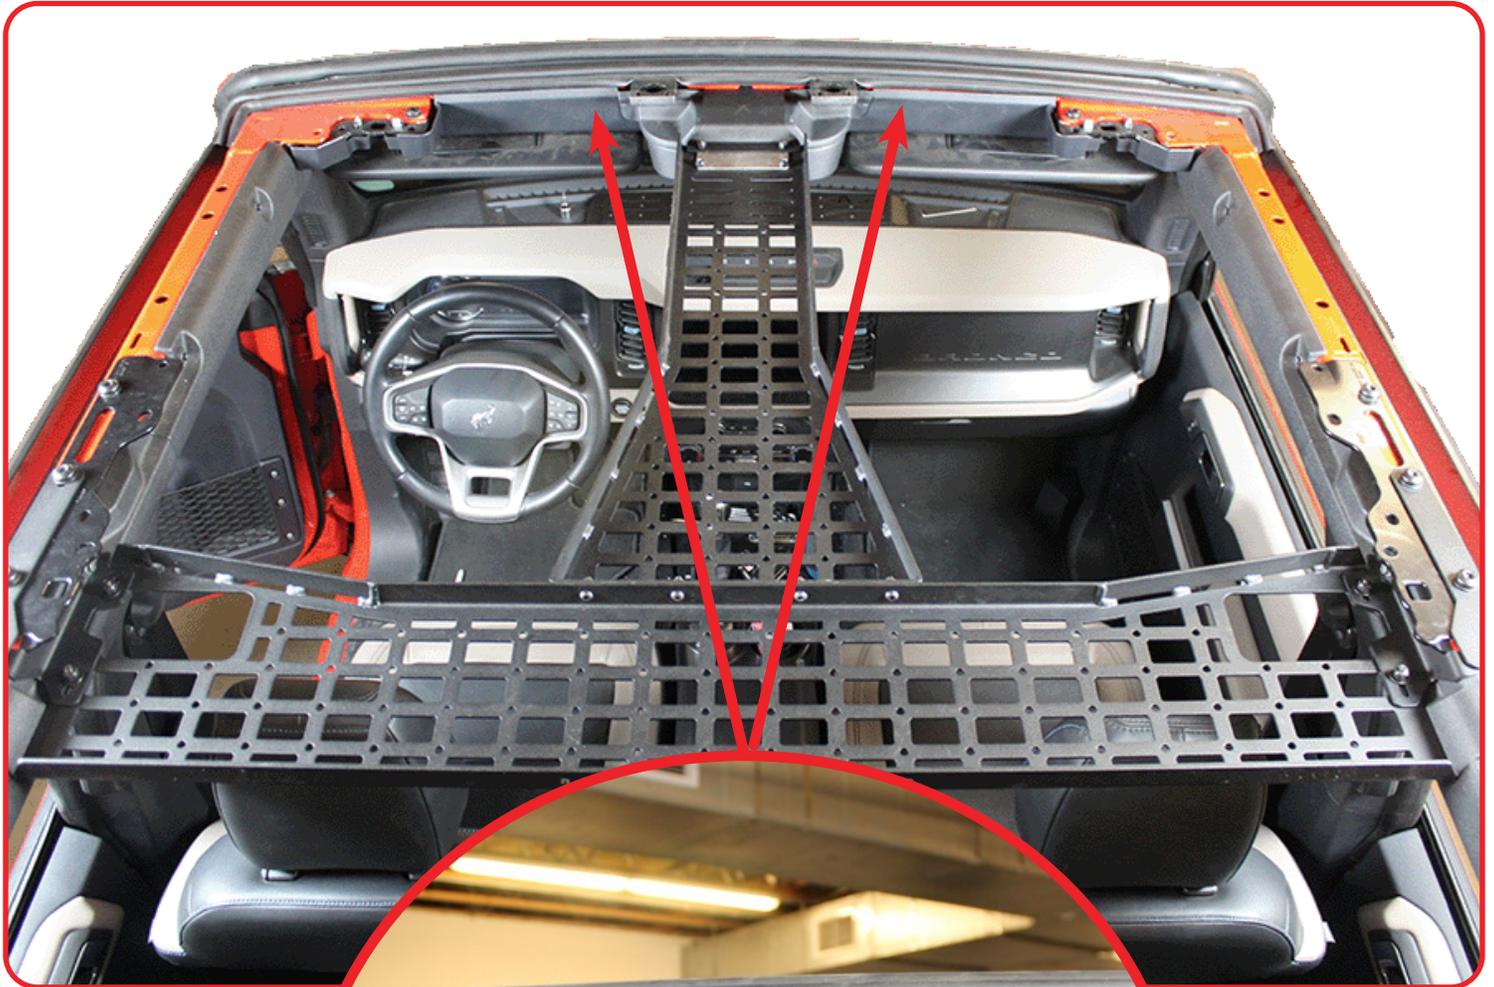

OVERHEAD MOLLE 21+/FORD BRONCO

□ STEP 16

Re-install the sun visor clips using a (T15).



OVERHEAD MOLLE 21+/FORD BRONCO

□ STEP 17

Stand back and enjoy your new ADD Overhead Molle.

Check and re-tighten, if needed, all mounting bolts after 100 miles and periodically thereafter.



THIS PRODUCT IS PROTECTED BY ONE OR MORE U.S. PATENTS
WWW.ADDICTIVEDESERTDESIGNS.COM/PATENTS

FOR ADDITIONAL SUPPORT OR TECHNICAL QUESTIONS,
PLEASE CALL 480-671-0820 OR
EMAIL INFO@ADDICTIVEDESERTDESIGNS.COM