

CENTER CONSOLE AND BRIDGE

2021+ FORD BRONCO

CCBR-01



TOOLS REQUIRED

- 4mm Allen Bit
- Drill
- 11/32" Drill Bit
- 10mm wrench

SKILL LEVEL

- Novice/Intermediate
 - 1 (you) to 2 persons
- Little skill level required, you can easily install it by yourself however, additional help will be useful

TIME REQUIRED

- 2 Hours
- Time to install this should only take about two hours.

WARNINGS/CAUTIONS BEFORE STARTING INSTALLATION

Before you install this kit – Read and understand all instructions, warnings, cautions, and notes contained in this installation instruction guide. Consult your vehicle owner's manual for proper disconnection of electrical and lifting of vehicle if required for installation of this product.

This install may require some technical skills and knowledge of basic mechanical work. If you do not feel that you are capable of performing this install please take this product to a trained professional.

After reading this guide please contact us with any questions or concerns before installing product.
Customer Service: 855-680-9595

DV8 Offroad is not responsible for any bodily injury or harm to you or your vehicle as a result of an improper install.

Proper installation of this kit required knowledge of the factory recommended procedures for removal and installation of original equipment components. We recommend that the factory shop manual and any special tools needed to service your vehicle be on hand during the installation. Installation of this kit without proper knowledge of the factory recommended procedures may affect the performance of these components and the safety of the vehicle

- Always wear eye protection when operating power tools

Inspect all contents of this package to make sure product is not damaged and all installation hardware has been included. If parts are missing from kit, please be prepared to provide the following information

1. Name of purchase location
2. Bar Code on side of box
3. Date above bar code
4. Date inside box cover



INSTALLATION MANUAL

STEP 1

Begin by unpacking all items and inspecting for missing pieces or damage. If you have any concerns, please contact the company the product was purchased from.

HARDWARE INCLUDED

- (14) M6x15 Allen Head
- (14) M6 Flat Washers
- (6) M6 Split Washers
- (8) M6 Serrated Nuts



STEP 2

Place the driverside mount up to the center console. The top of the mount will line up with the top of the plastic.

With the mount aligned, mark the holes on the mounting tabs.



INSTALLATION MANUAL

STEP 3

Use a 11/32" drill bit to drill out the marked mounting positions.

Drill accurately and carefully to avoid scuffing the trim unnecessarily.



STEP 4

Align the driver side mount with the mounting holes and press the M6x15 hardware into the drilled out holes, to loosely hold the mount in place. Pull back on the center console trim from the bottom to fit the M6 nuts into place.

Thread the nut onto the m6 bolt two or three threads only, secure with a 4mm allen bit while applying pressure with your hand under the center console until the nut "catches" and tightens.

Repeat this process for the other three bolts until the driver side mount is secure.



STEP 5


Repeat steps 1-4 with the passenger side mount. The top of the mount will align with the center console trim and grab bar handle.



INSTALLATION MANUAL

STEP 6

Slide the bridge into place over the grab bar handle as shown. Align the bridge with the handle and the dash, and secure using a 4mm allen bit and provided M6 hardware.

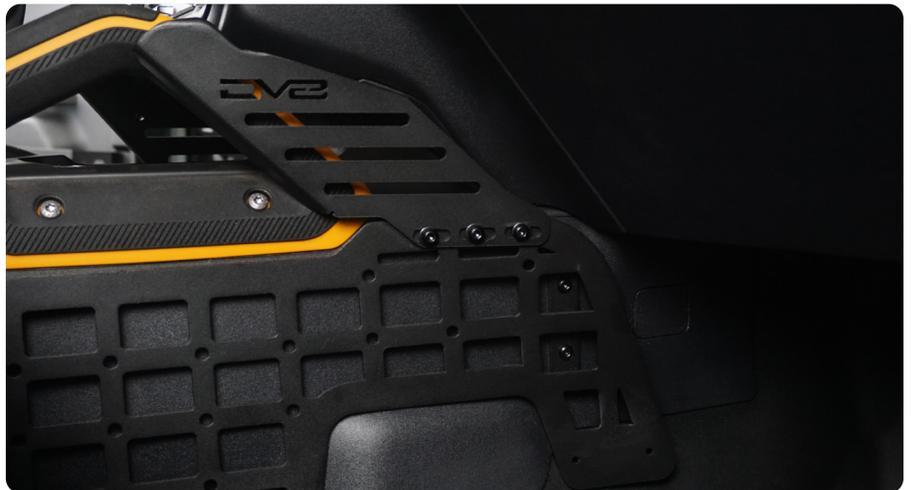

STEP 7

Double check fitment and all hardware is secure. Congratulations, you are finished with the install of the Bronco Center Console and Bridge.

