



n-fab.com

a TRUCK HERO company



PART NUMBER: EXT05CC-TX , EXT05QC-TX  
 PRODUCT: EPYX HOOP STEP  
 APPLICATION: 05-18 TOYOTA TACOMA CC / QC




PARTS INCLUDED	QTY
Step Rail	2
Rocker Panel mounting Brackets	6


HARDWARE DESCRIPTION	QTY.
HWKT-00036X	
M8X30mm Hex cap with washer	12
3/8" x 3/4" carriage bolts	12
3/8" Flanged nuts	12

**DO NOT USE IMPACT TOOLS**

**Step 1:** Locate the driver side step rail.

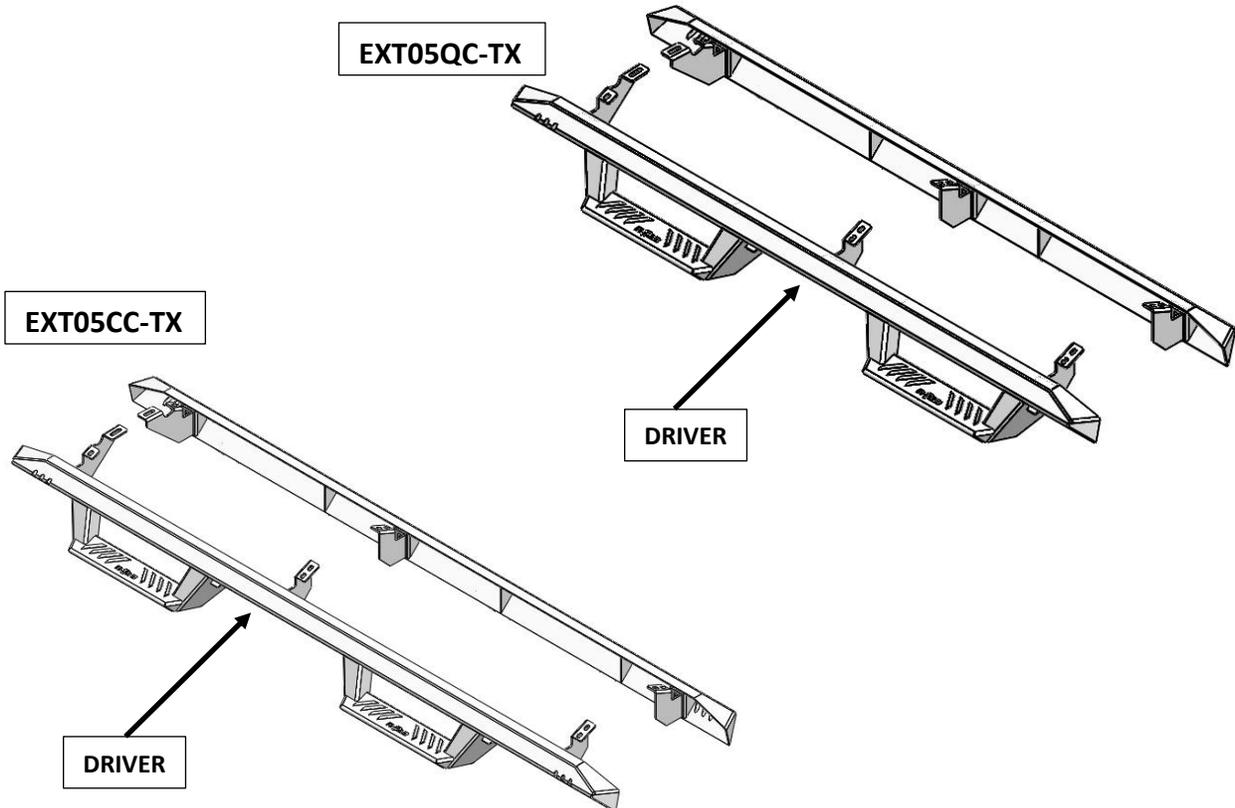

**Step 2:** Install three rocker panel brackets to the attachment points located on the backside of the channel using the supplied 3/8" x 3/4" carriage bolts and 3/8" flanged nuts. Leave finger tight for now.  
**NOTE:** *The larger bracket will attach towards the front of the step rail.*

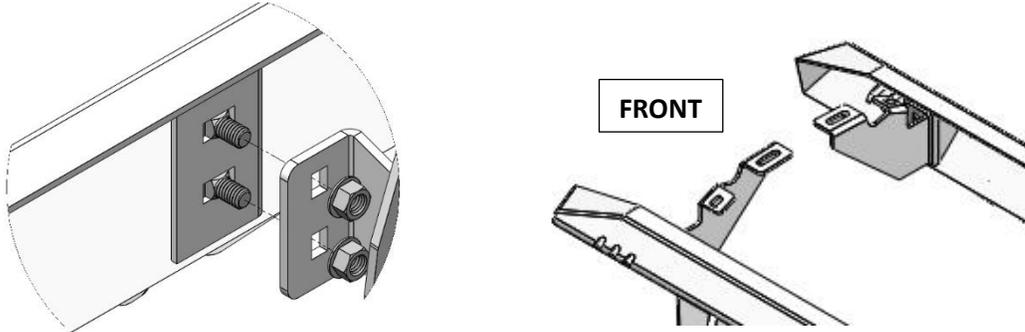

**Step 3:** Remove any factory-equipped running boards, fasteners, and discard.



**Step 4:** Position step assembly up to the body of the vehicle and align the brackets up with the factory mounting locations.

**Step 5:** Beginning with the center bracket, start one of the M8x30mm hex bolts into the factory bolt location and leave loose. Start the second M8x30mm hex bolt in the same bracket and loosely tighten.

**Step 6:** Start all remaining M8x30mm hex bolts in each bracket and leave loose.



PART NUMBER: EXT05CC-TX , EXT05QC-TX  
PRODUCT: EPYX HOOP STEP  
APPLICATION: 05-18 TOYOTA TACOMA CC / QC

**Step 7:** Next, adjust the step assembly up/down and front/back to level out the step rail with body panel and then tighten step to brackets at 30 ft. /lbs.



**Step 8:** After final positioning, start at the rear of the vehicle and tighten the lower portion of the bracket to 15-20 ft/lbs of torque. Continue this until all of the lower have been tighten then move to the top bolt and repeat the process.

**Step 9:** Repeat steps 2-8 for driver side.