

## FACTORY MODULAR FRONT BUMPER BULL BAR

2021+ BRONCO

LBBR-04



### TOOLS REQUIRED

- Ratchet
- T40 Torx Bit
- Zip Ties

### SKILL LEVEL

- Novice/Intermediate
- 1 person

Little skill level required, you can easily install it by yourself however, additional help will be useful

### TIME REQUIRED

- 1 Hour

Time to install this should only take about an hour

## WARNINGS/CAUTIONS BEFORE STARTING INSTALLATION

Before you install this kit – Read and understand all instructions, warnings, cautions, and notes contained in this installation instruction guide. Consult your vehicle owner’s manual for proper disconnection of electrical and lifting of vehicle if required for installation of this product.

This install may require some technical skills and knowledge of basic mechanical work. If you do not feel that you are capable of performing this install please take this product to a trained professional.

After reading this guide please contact us with any questions or concerns before installing product.  
Customer Service: 855-680-9595

*DV8 Offroad is not responsible for any bodily injury or harm to you or your vehicle as a result of an improper install.*

Proper installation of this kit required knowledge of the factory recommended procedures for removal and installation of original equipment components. We recommend that the factory shop manual and any special tools needed to service your vehicle be on hand during the installation. Installation of this kit without proper knowledge of the factory recommended procedures may affect the performance of these components and the safety of the vehicle

- Always wear eye protection when operating power tools

*Inspect all contents of this package to make sure product is not damaged and all installation hardware has been included. If parts are missing from kit, please be prepared to provide the following information*

1. Name of purchase location
2. Bar Code on side of box
3. Date above bar code
4. Date inside box cover



# INSTALLATION MANUAL

## STEP 1

Begin by unpacking all items and inspecting for missing pieces or damage. If you have any concerns, please contact the company the product was purchased from.



## STEP 2

Begin by applying the EVA foam to the bull bar where it will contact the bumper.



## STEP 3

Loosely install light bar using the hardware provided with the lightbar.

*NOTE: This bull bar is designed to work with our 13" elite series light.*

*Part number is BE13EW45W. Scroll down to the last page for the dimensions if you are not planning on using our 13" elite series light.*



# INSTALLATION MANUAL

## STEP 4

Align light bar as desired and secure.



## STEP 5

Secure wiring to the tabs using zip ties.



## STEP 6

Use a T40 to remove the six factory bolts where the bull bar will be mounted.

*Tip: Place the bull bar up to the bull bar to determine which bolts to remove.*




# INSTALLATION MANUAL

## STEP 7

Install the bull bar using a T40 and factory hardware, then secure.

*NOTE: It is usually easiest to loosely install the top bolt first.*

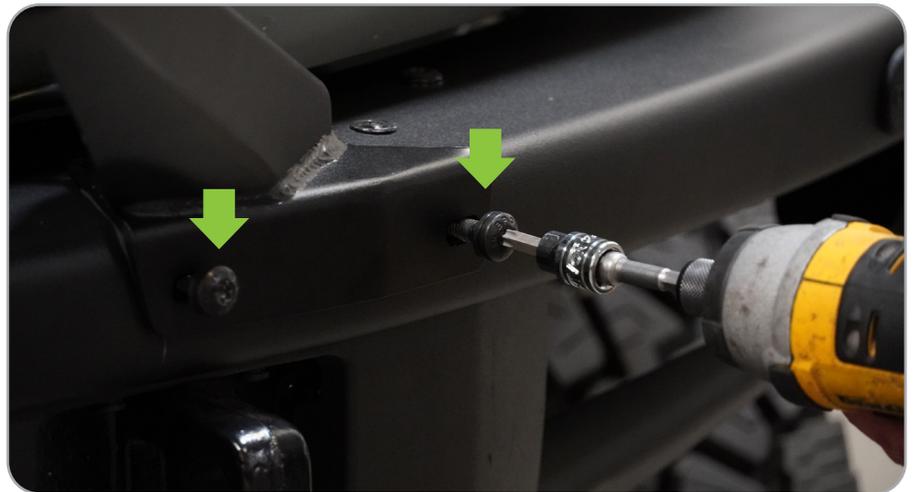

## STEP 8

Wire lights as desired.

Double check fitment and all hardware is secure.



Exact measurements shown in millimeters.

