

Factory Steel Bumper Dual Light Moun

2021+ BRONCO

LBBR-05



TOOLS REQUIRED

- #3 Allen Head
- 10mm Socket/Wrench
- T40 Torx Bit

SKILL LEVEL

- Novice/Intermediate
- 1 persons

Little skill level required, you can easily install it by yourself.

TIME REQUIRED

- 1 Hour

Time to install this should approximately take 1 hour.

WARNINGS/CAUTIONS BEFORE STARTING INSTALLATION

Before you install this kit – Read and understand all instructions, warnings, cautions, and notes contained in this installation instruction guide. Consult your vehicle owner’s manual for proper disconnection of electrical and lifting of vehicle if required for installation of this product.

This install may require some technical skills and knowledge of basic mechanical work. If you do not feel that you are capable of performing this install please take this product to a trained professional.

After reading this guide please contact us with any questions or concerns before installing product.
Customer Service: 855-680-9595

DV8 Offroad is not responsible for any bodily injury or harm to you or your vehicle as a result of an improper install.

Proper installation of this kit required knowledge of the factory recommended procedures for removal and installation of original equipment components. We recommend that the factory shop manual and any special tools needed to service your vehicle be on hand during the installation. Installation of this kit without proper knowledge of the factory recommended procedures may affect the performance of these components and the safety of the vehicle

- Always wear eye protection when operating power tools

Inspect all contents of this package to make sure product is not damaged and all installation hardware has been included. If parts are missing from kit, please be prepared to provide the following information

1. Name of purchase location
2. Bar Code on side of box
3. Date above bar code
4. Date inside box cover




INSTALLATION MANUAL

STEP 1

Begin by unpacking all items and inspecting for missing pieces or damage. If you have any concerns, please contact the company the product was purchased from. **For this install, it is not necessary to remove the bumper. We removed the bumper for better clarity for these instructions.**

Hardware Included:


- (4) M6X25mm Bolts
- (8) M6 Flat Washers
- (4) M6 Locking Nuts

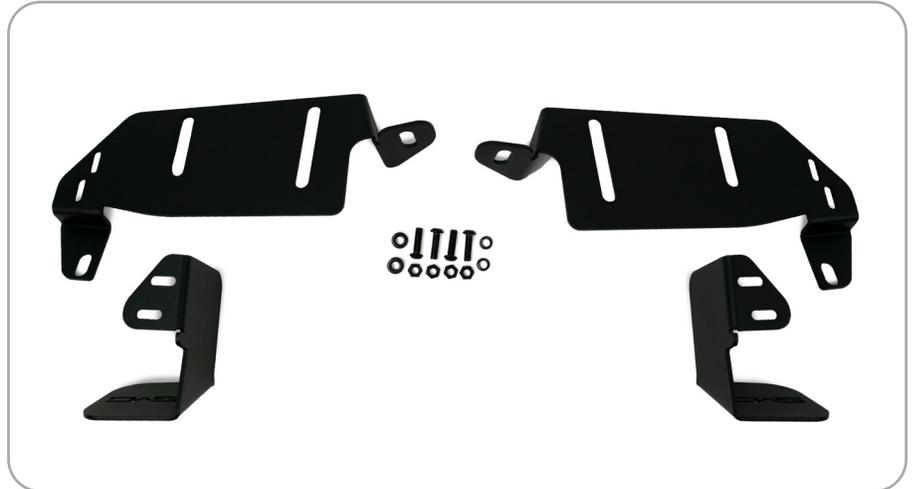

STEP 2

Begin by installing your lights onto the mounts using the hardware provided with the lights. Please note the direction we are facing the lights.

Note: For this install, we are using two 3" elite pod lights.

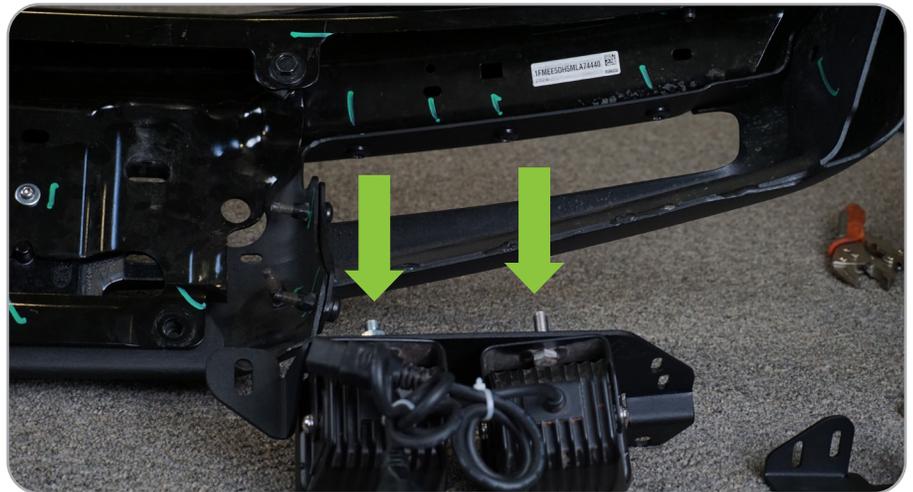

INSTALLATION MANUAL

STEP 3



Using a T40 torx bit, remove the bolt, on the bottom of the pocket towards the outside of the vehicle.



INSTALLATION MANUAL


STEP 4

If looking at the bumper opening from the backside, remove the 15mm bolt using a socket/wrench that is on the top inner side of the opening.

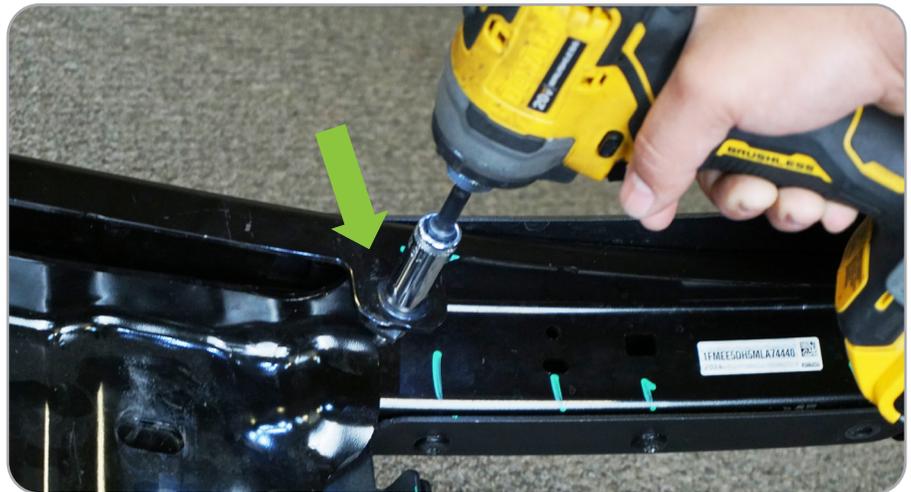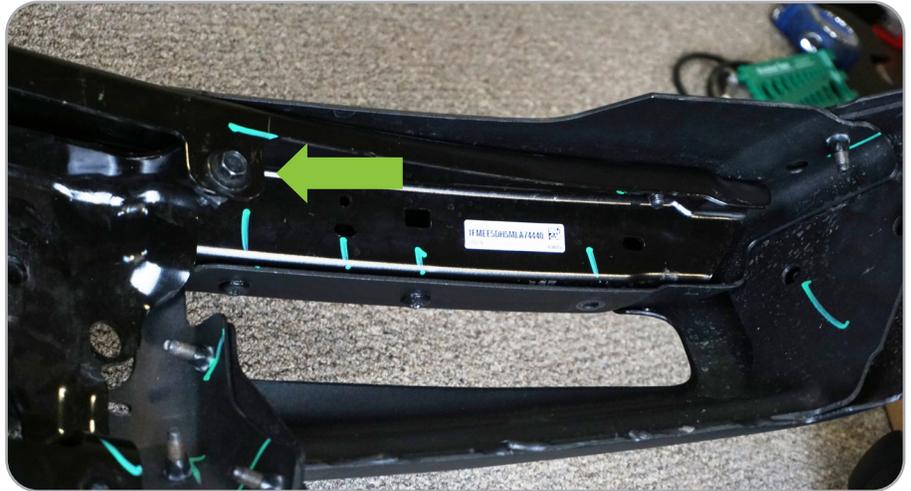

STEP 5


Using factory hardware. T40 torx, and 15mm socket/wrench, loosely install the brackets and the light as shown.

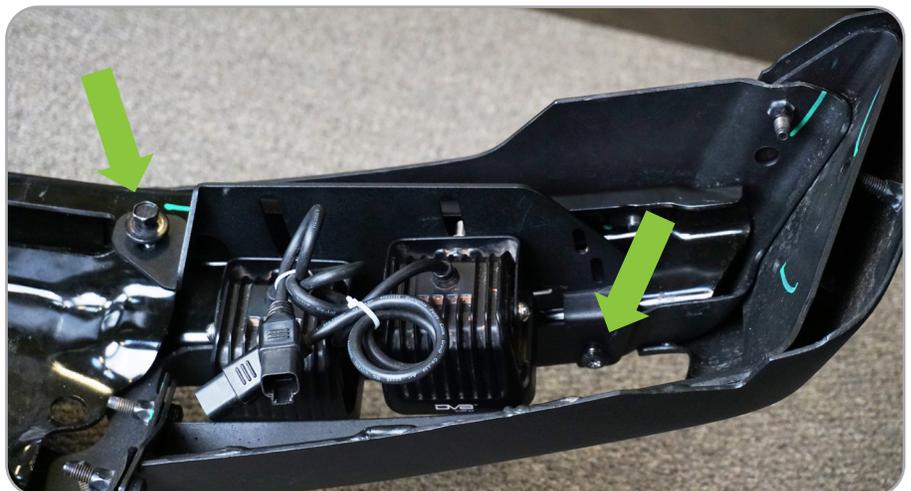

INSTALLATION MANUAL

STEP 6

Once the bracket is in place, install the DV8 logo plate using your #3 allen head, 10mm wrench and provided hardware as shown. This is easiest to install from front to back.

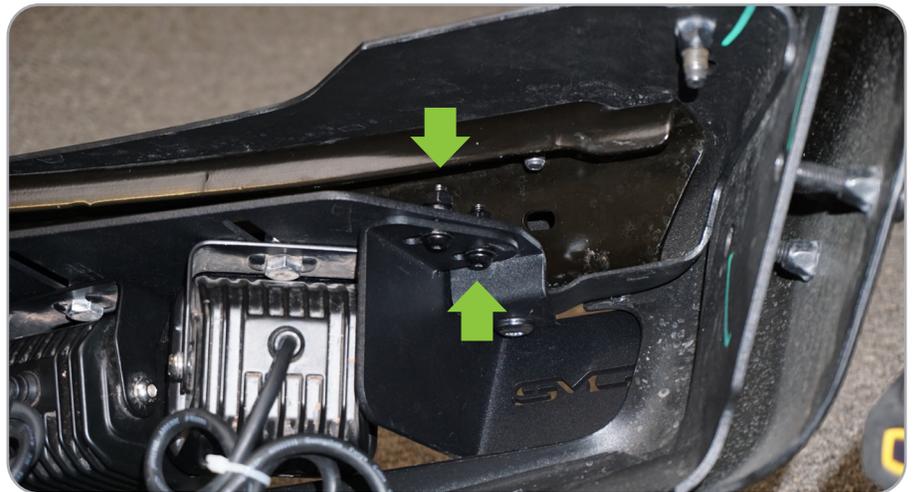

STEP 7

Align front DV8 plate and tighten all hardware until secure. Continue to wire lights to your preferred location.



INSTALLATION MANUAL

STEP 8

Check to ensure all hardware is secure and install any lights at this time.

