

Factory Steel Bumper

Bull Bar

2021+ BRONCO

LBBR-06



TOOLS REQUIRED

- #4mm Allen Head
- T40 Torx Bit

SKILL LEVEL

- Novice/Intermediate
- 1 persons

Little skill level required, you can easily install it by yourself.

TIME REQUIRED

- .5 Hour

Time to install this should approximately take .5 hour.

WARNINGS/CAUTIONS BEFORE STARTING INSTALLATION

Before you install this kit – Read and understand all instructions, warnings, cautions, and notes contained in this installation instruction guide. Consult your vehicle owner’s manual for proper disconnection of electrical and lifting of vehicle if required for installation of this product.

This install may require some technical skills and knowledge of basic mechanical work. If you do not feel that you are capable of performing this install please take this product to a trained professional.

After reading this guide please contact us with any questions or concerns before installing product.
Customer Service: 855-680-9595

DV8 Offroad is not responsible for any bodily injury or harm to you or your vehicle as a result of an improper install.

Proper installation of this kit required knowledge of the factory recommended procedures for removal and installation of original equipment components. We recommend that the factory shop manual and any special tools needed to service your vehicle be on hand during the installation. Installation of this kit without proper knowledge of the factory recommended procedures may affect the performance of these components and the safety of the vehicle

- Always wear eye protection when operating power tools

Inspect all contents of this package to make sure product is not damaged and all installation hardware has been included. If parts are missing from kit, please be prepared to provide the following information

1. Name of purchase location
2. Bar Code on side of box
3. Date above bar code
4. Date inside box cover



INSTALLATION MANUAL

STEP 1

Begin by unpacking all items and inspecting for missing pieces or damage. If you have any concerns, please contact the company the product was purchased from.

Hardware Included:

- (2) Light tabs
- (2) M6x15mm Bolts
- (2) M6 Flat Washers
- (2) M6 Split Washers



STEP 2

Prior to mounting the bar, mount the adjustable tabs to the bull bar using a #4 Allen head. If you plan on mounting a light(s) to the top, mount the tabs flat side up, and if you want to hang a light, mount the flat side down. If you do not want to mount a light, install screws to prevent moisture entering the tube.




INSTALLATION MANUAL

STEP 3

Install the provided foam onto the bottom side of the bracket.


Note: This is optional, however it is recommended to prevent any damage to your factory bumper.

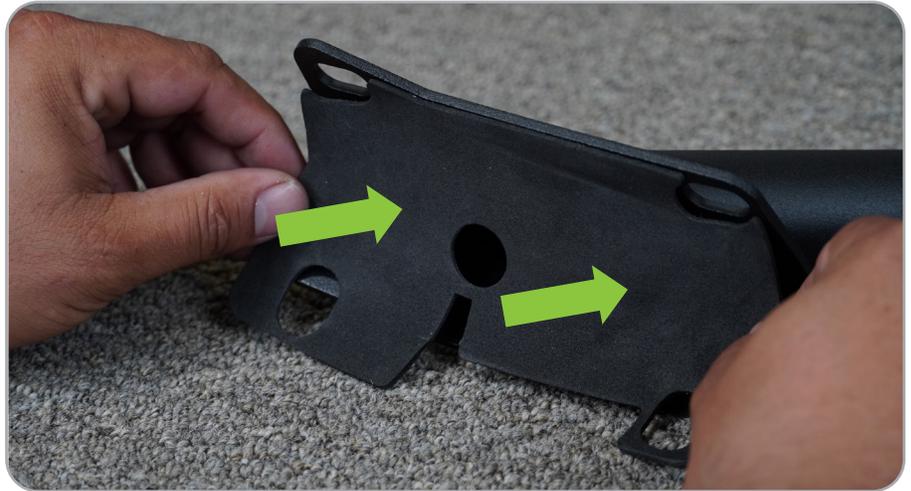

INSTALLATION MANUAL

STEP 4

Using T40 torx bit, remove the four allen head bolts on the front of the bumper.

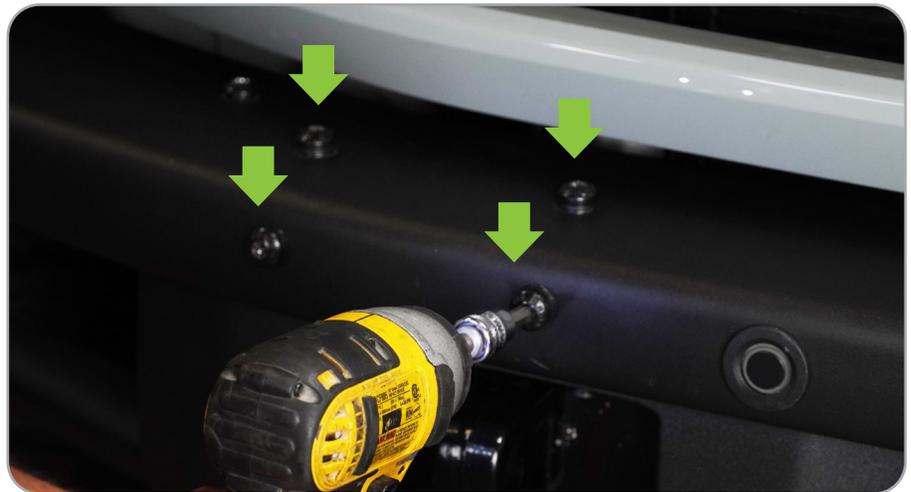

INSTALLATION MANUAL

STEP 5

Hold up the bull bar to the bumper, and using factory hardware and the T40 torx bit, reinstall the hardware to secure the bull bar.

Note: Install all hardware loosely first, and once all bolts are started, then tighten down the hardware.



STEP 6

Align front DV8 plate and tighten all hardware until secure. Continue to wire lights to your preferred location.

