



6400 SYCAMORE CANYON BLVD.
RIVERSIDE, CALIFORNIA 92507
855-680-9595
WWW.DV8OFFROAD.COM

PRODUCT

INSTALLATION MANUAL

BRIDGE HARDWARE KIT

MPBR-HP



TOOLS REQUIRED

-3mm Allen Bit

SKILL LEVEL

- Novice
- 1 Person (You)

Little skill level required, you can easily install it by yourself

TIME REQUIRED

- .5 Hour

Time to install this should only take about half an hour

WARNINGS/CAUTIONS BEFORE STARTING INSTALLATION

Before you install this kit – Read and understand all instructions, warnings, cautions, and notes contained in this installation instruction guide. Consult your vehicle owner’s manual for proper disconnection of electrical and lifting of vehicle if required for installation of this product.

This install may require some technical skills and knowledge of basic mechanical work. If you do not feel that you are capable of performing this install please take this product to a trained professional.

After reading this guide please contact us with any questions or concerns before installing product.
Customer Service: 855-680-9595

DV8 Offroad is not responsible for any bodily injury or harm to you or your vehicle as a result of an improper install.

Proper installation of this kit required knowledge of the factory recommended procedures for removal and installation of original equipment components. We recommend that the factory shop manual and any special tools needed to service your vehicle be on hand during the installation. Installation of this kit without proper knowledge of the factory recommended procedures may affect the performance of these components and the safety of the vehicle

• Always wear eye protection when operating power tools

Inspect all contents of this package to make sure product is not damaged and all installation hardware has been included. If parts are missing from kit, please be prepared to provide the following information

1. Name of purchase location
2. Bar Code on side of box
3. Date above bar code
4. Date inside box cover



NEED HELP?



855-680-9595

INSTALLATION MANUAL


Begin by unpacking all items and inspecting for missing pieces or damage. If you have any concerns, please contact the company the product was purchased from.

HARDWARE INCLUDED

- (8) M5x16 Allen Head
- (8) M5x12 Allen Head
- (2) M5 Pem Nuts



STEP 1 | To install pem nuts, place the provided M5 hardware through the top of the bridge and thread the pem nut by hand.

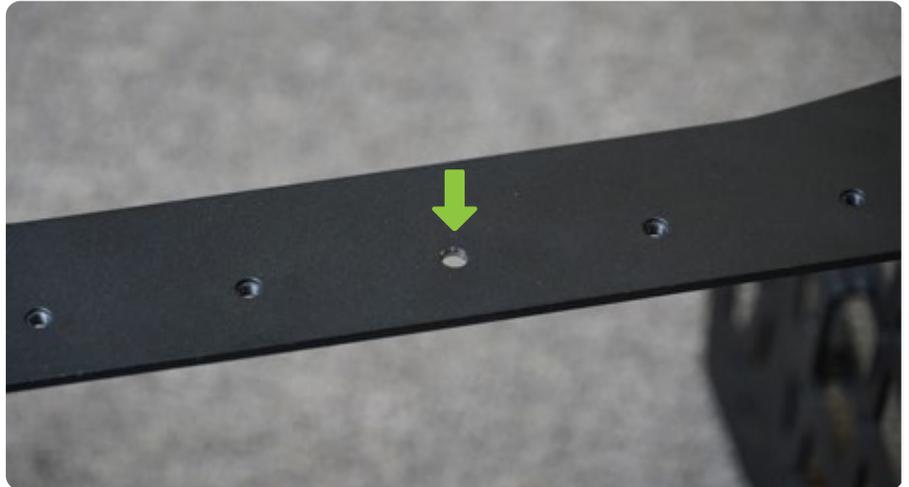

STEP 2 | Use a 3mm allen head to tighten the bolt while holding the pem nut until it “catches” in the bridge and is secure.

Take caution not to over tighten or the bolt head may strip.



INSTALLATION MANUAL

STEP 3 | We provide different length hardware for different size mounts.

Use your best judgement when determining which hardware to use.

(Shown) The Diamond Base Ram Mount accepts the M5x12(shorter) hardware easily.

