


PART NUMBER: PRT0784CC-TX, PRT0777QC-TX  
 PRODUCT: Aluminum Hoop Step  
 APPLICATION: 07-18 CREW MAX/DOUBLE CAB

# PREDATOR PRO



HARDWARE DESCRIPTION	QTY.
# T07-GLOSS KIT	1
M8-1.25X25 HX C/S 8.8 ZP DIN933	12
5/16" SPLIT LOCKWASHER ZINC	12
5/16" USS FLATWASHER ZNC	12

**Step 1** Identify the Driver and Passenger side Step Rail.

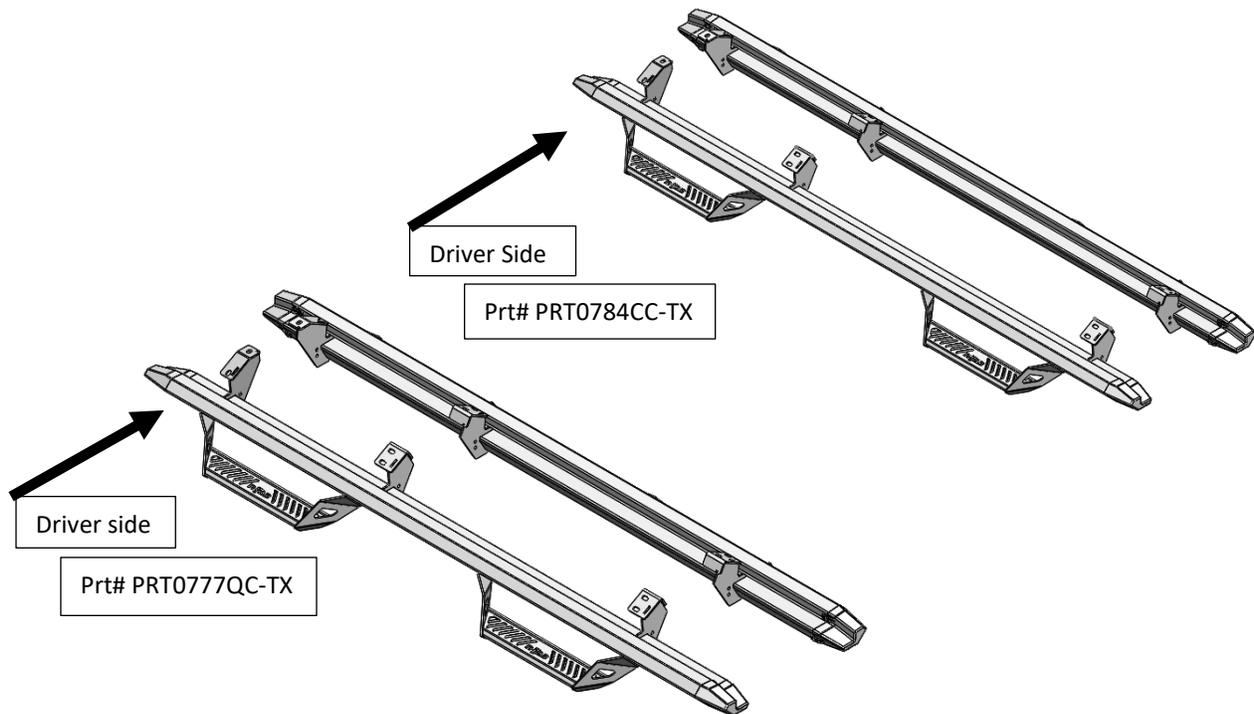

**Step 1** Remove any factory hardware and discard.

**Step 2** Beginning with the driver side, carefully raise the step rail up and match the brackets with the factory mounting locations. Next, starting with the center bracket and using the supplied M8x25mm hex bolts, 5/16" flat washer and lock washer start and leave loose.

**Step 3** Start the remaining hardware with the front and rear bracket and leave loose.



**Step 4** After final adjustment, torque each bolt to 17 ft/lb – 20 ft/lb.

**Step 5** Repeat steps 1-4 with passenger side step. This concludes the installation.