



PART NUMBER: **T074RKRC**
PRODUCT: **RKR RAILS**
APPLICATION: **07-16 TUNDRA**

Bolt Kit
<ul style="list-style-type: none">• 16 8mmx 25mm hex bolts• 16 5/16 Flat Washers• 16 Lock Washers
NOTE: Some models only require 12 each
Tools Needed:
<ul style="list-style-type: none">• 13mm wrench or socket• 12mm wrench or socket
(used to remove factory bolts)



INSTALLATION:

1. Remove any factory hardware and discard. Position the nerf-step on the side of the vehicle. See Figure 1a. **NOTE:** The larger bracket will go towards the front of the vehicle.



2. Starting with one of the center brackets, start the 8mm hex bolt, 8mm lock washer and 8mm flat washer into the factory bolt locations and hand tighten. See figure 3b. Start all of the remaining 8mm hex bolts, 8mm lock washers and 8mm flat washers. Torque each bolt location to 15ft/lbs.

3. Repeat installation procedures on the passenger side.
This concludes the installation.

Detachable step Installation:


1. Attach the step to the step mounts using the supplied ½” bolts and lock nuts.

NOTE: The step will mount to the left side of the mounts. **(Fig. 2a.)**

2. Torque hardware to 40 ft/lbs .



2a.

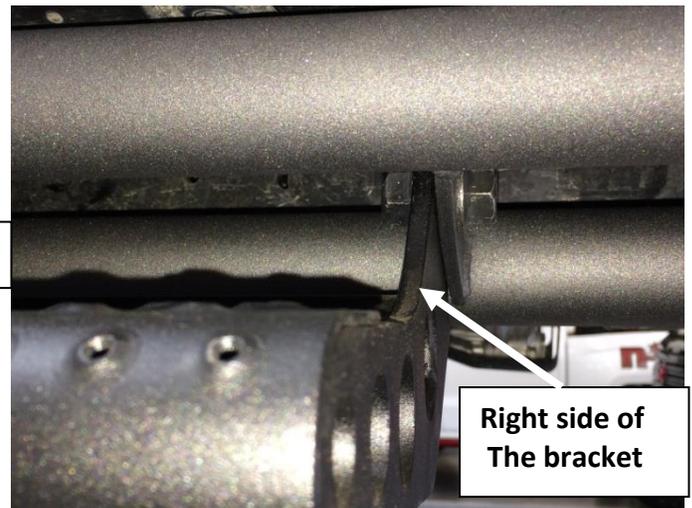

Right side of
The bracket