

APPLICATION

Dodge Ram Quad Cab 1500
Dodge Ram Quad Cab 2500/3500
Dodge Ram Mega Cab

MODEL YR

2002 - 2008
2003 - 2009
2006 - 2009

AMP PART

75101-01A
75101-01A
75118-01A

INSTALLATION GUIDE

INSTALLATION TIME

3-5 Hours

Professional installation recommended

SKILL LEVEL




4= Experienced

TOOLS REQUIRED

- ☐ Safety goggles
- ☐ Measuring tape
- ☐ Flat blade screwdriver
- ☐ Phillips head screwdriver
- ☐ Right angle drill
- ☐ 1/8" drill bit
- ☐ 13 mm socket
- ☐ Ratchet wrench and extension
- ☐ Soldering iron
- ☐ Wire crimpers
- ☐ Wire stripper / cutter
- ☐ Corrosion inhibitor
- ☐ 3/16" hex key wrench (allen wrench)
- ☐ 1/8" hex key wrench (allen wrench)
- ☐ 4 mm hex key wrench (allen wrench)
- ☐ Pop rivet tool
- ☐ Electrical tape

WARRANTY

5-Year Limited Warranty

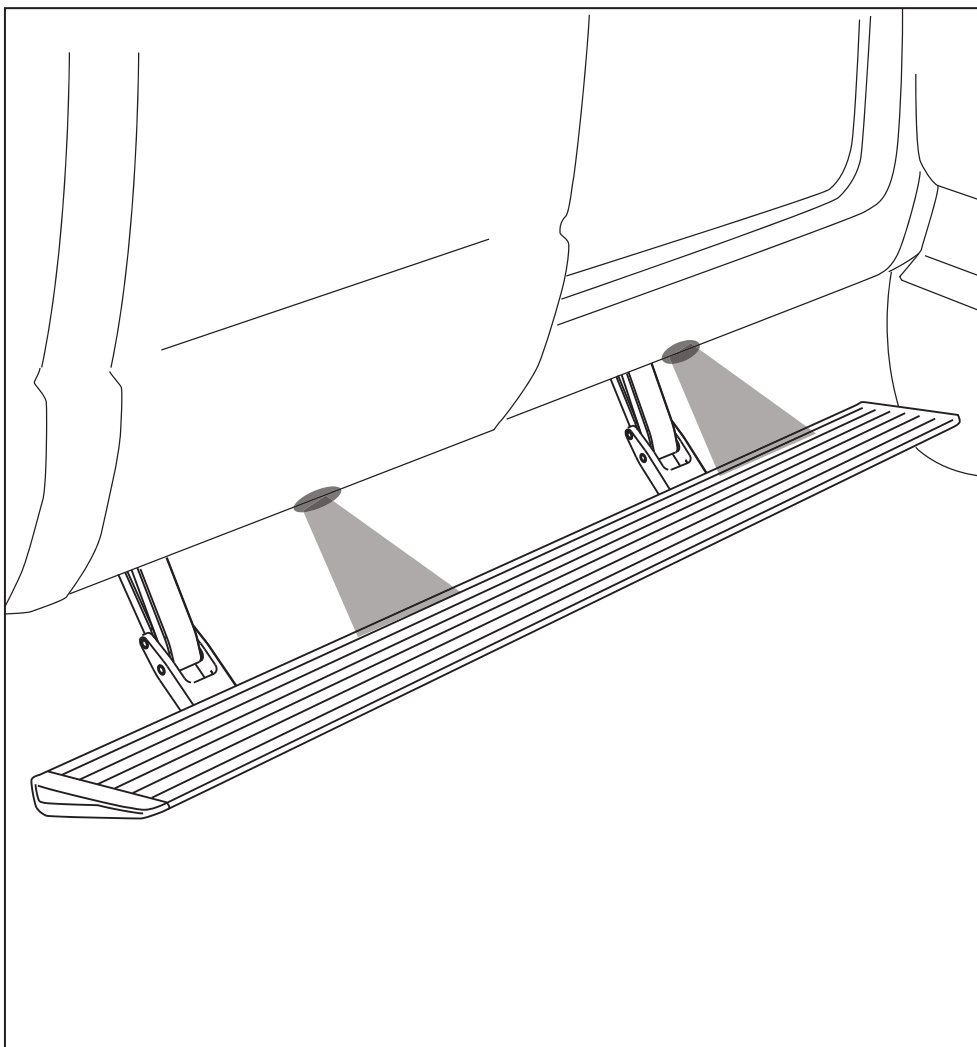


REALTRUCK TECH SUPPORT 1-888-983-2204 (Press 2) Monday - Friday, 8:00 AM - 5:00 PM EST

Designed and manufactured by AMP Research® • Made in Mexico
Patent Protected. Please see our product site for applicable patents. www.realtruck.com/b/amp-research/
© 2024 AMP Research • Three-year limited warranty. • Professional installation is recommended.

INSTALLATION GUIDE

Attaching motor to linkage assembly

The motors need to be installed before continuing with the rest of the Power Step install.

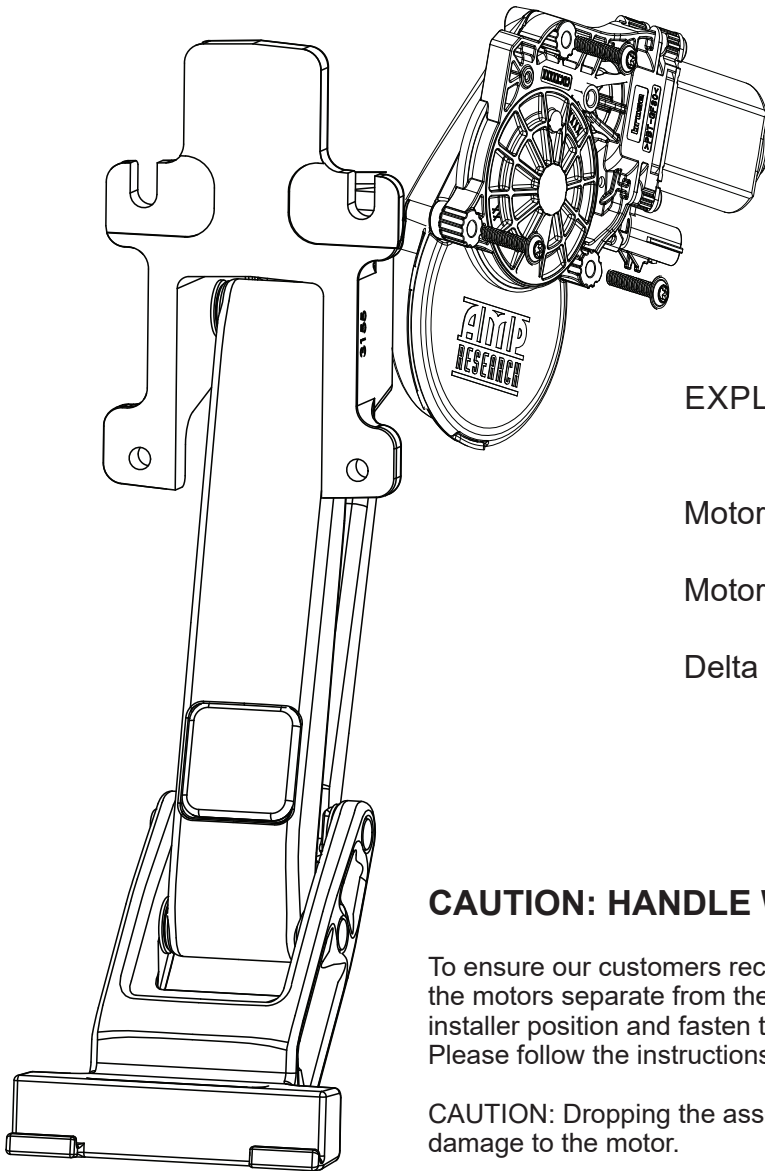

EXPLODED VIEW

Motor Linkage

Motor Kit

Delta PT screws

CAUTION: HANDLE WITH CARE.

To ensure our customers receive all components with full integrity, we pack the motors separate from their linkage assemblies. This requires that the installer position and fasten the motor before continuing with the install. Please follow the instructions below and handle the assembly carefully.

CAUTION: Dropping the assembly or any excessive impact MAY cause damage to the motor.


Instructions:

1. Position the gear cover in place as shown if not already in place.
2. Seat motor into position on the three mounting bosses. This may require an adjustment of the gear by moving the swing arms.
3. After seating into place, fasten the motor with the three motor mount screws with 4mm Hex Head. Tighten screws to 36 in-lbs (4N-m). **Do not over torque.**

PARTS LIST AND HARDWARE IDENTIFICATION


① x2

Running Board assembly

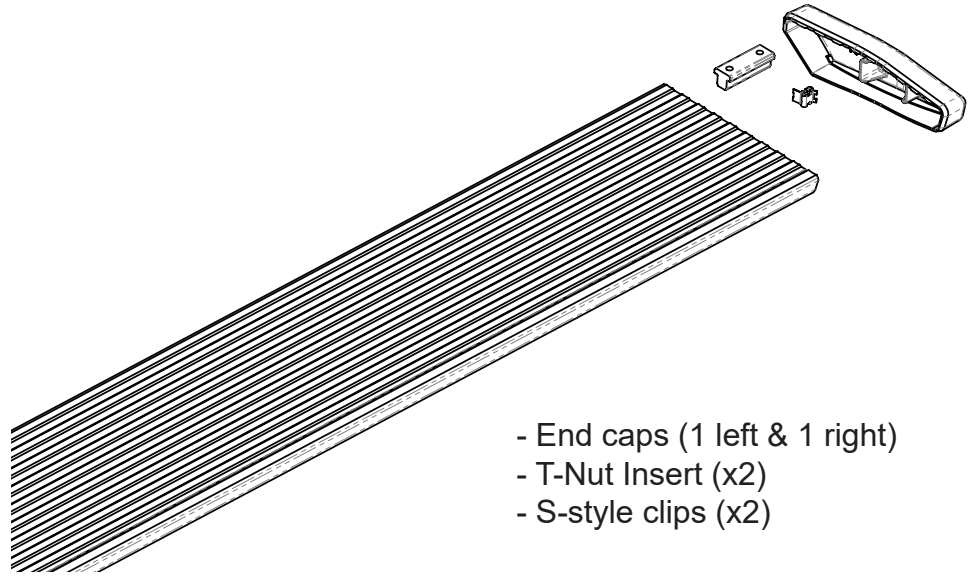


② x2

Front Bracket

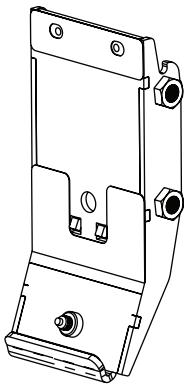

③


Driver Rear Bracket

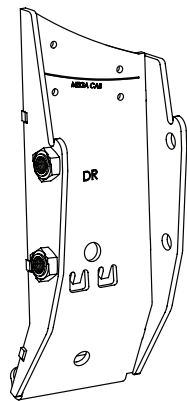

DRIVER REAR BRACKET

④


Passenger Rear Bracket

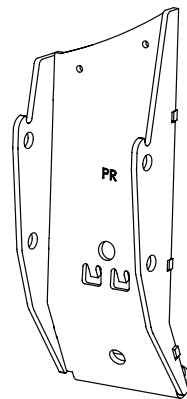

PASSENGER REAR BRACKET


⑤ x2

Idler Linkage

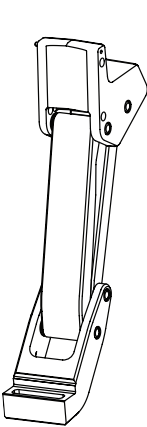


⑥ x2

Motor Linkage

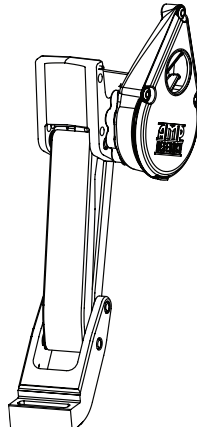


⑦

Wire Harness

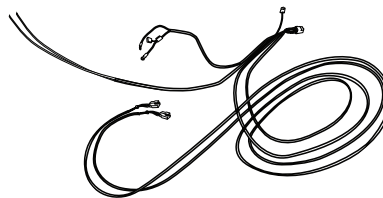


⑧


Controller STA

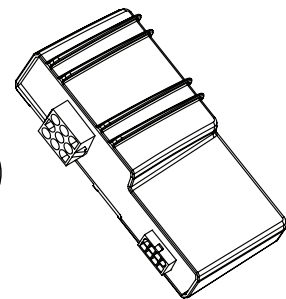


PARTS LIST AND HARDWARE IDENTIFICATION

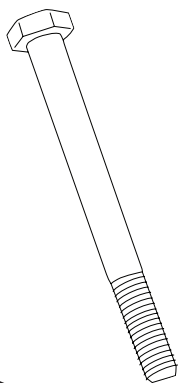

9 x8
Hex Bolt

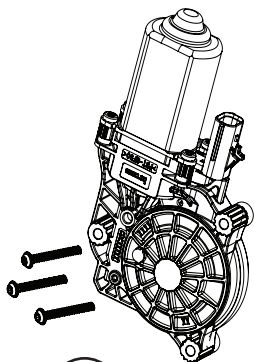


10 x2
Motor kit




11 x8
Socket Cap Screw




12 x8
Blind Rivet

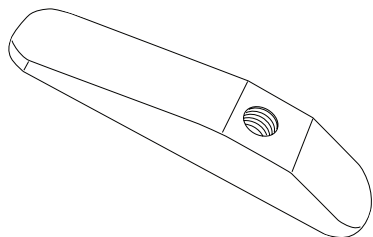

13 x4
Mounting Insert

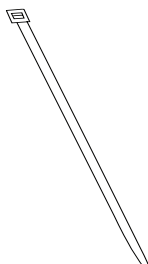

14 x20
Cable tie (7")

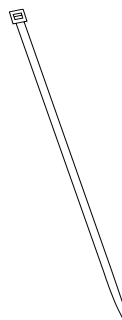


15 x2
Cable tie (11")




16 x4
Posi-Taps™ (Red/Grey)


17
Damper Bracket Kit
(Only needed for 1500 Quad Cab)

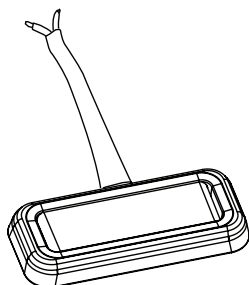

18 x4
LED Lamp

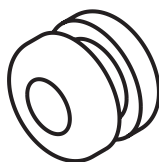


19 x4
Grommet

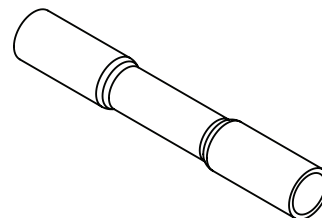

20 x8
Butt Connector

Note: Steps 1-8 shown on driver side.
Repeat these steps on passenger side.

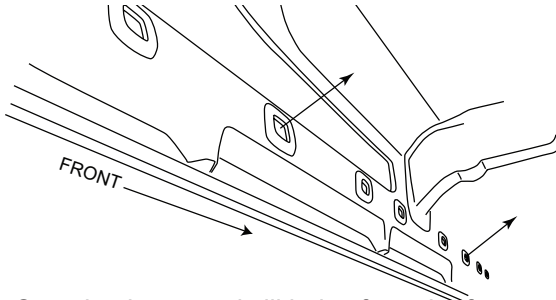

Counting large oval sill holes from the front, remove covering (plug or tape) from the below indicated mounting points.

QUAD CAB: 3rd and 7th from the front.


MEGA CAB: 3rd and 8th from the front.

QUAD CAB: 3rd and 7th from the front.

MEGA CAB: 3rd and 7th from the front.

1


Prepare brackets for install

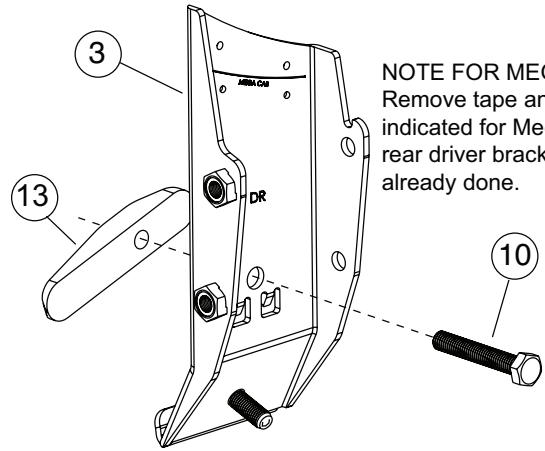

DRIVER REAR BRACKET SHOWN


2

Install rear mounting bracket

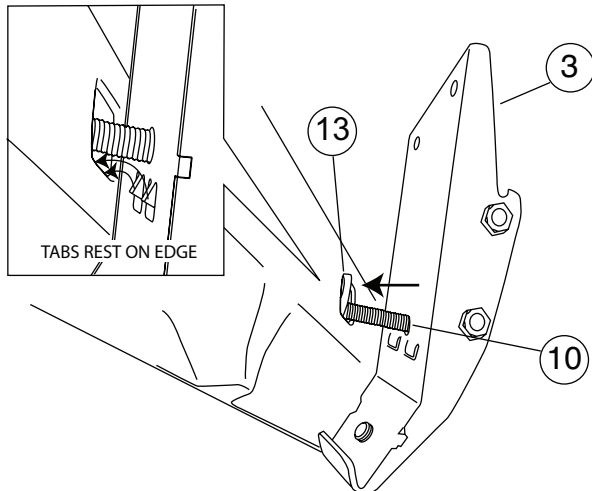


3

Fasten down rear mounting bracket

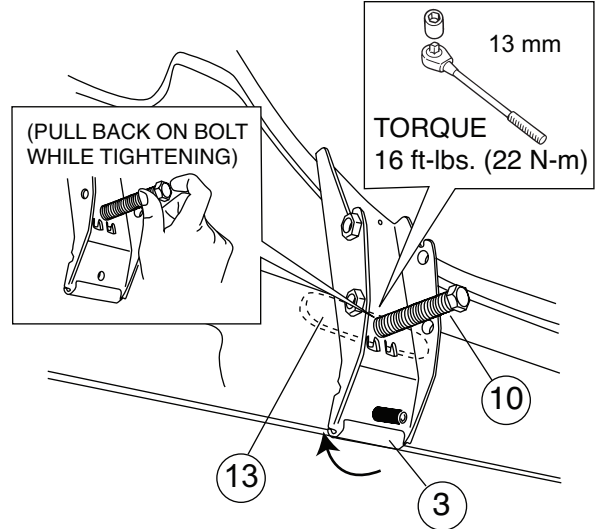


4

After drilling apply paint to prevent rusting.

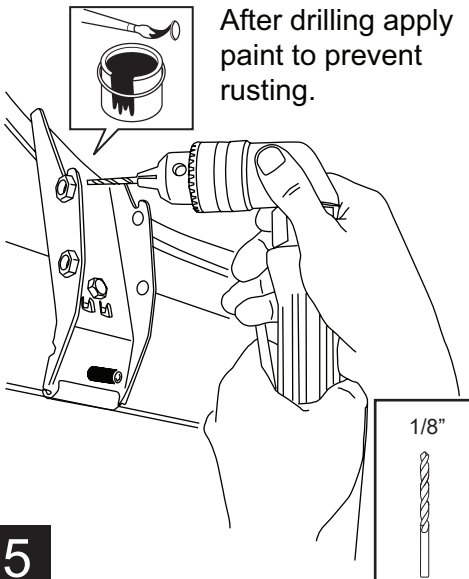


5

Bracket must be flush with the sidewall before riveting.

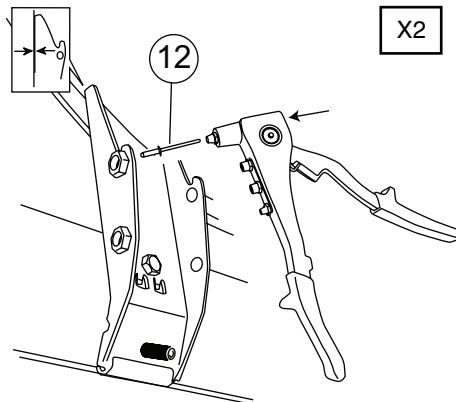


6

TORQUE
1.5 ft-lbs. (2 N-m)

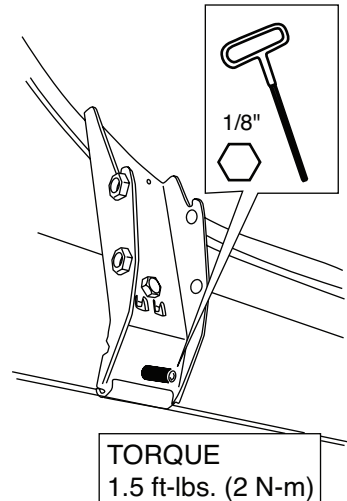

7


Repeat steps 2 thru 6 for front mounting bracket.

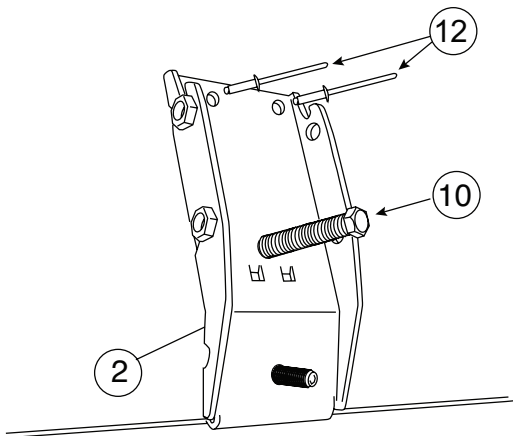

8

DRIVER SIDE

TORQUE
16 ft-lbs. (22 N-m)

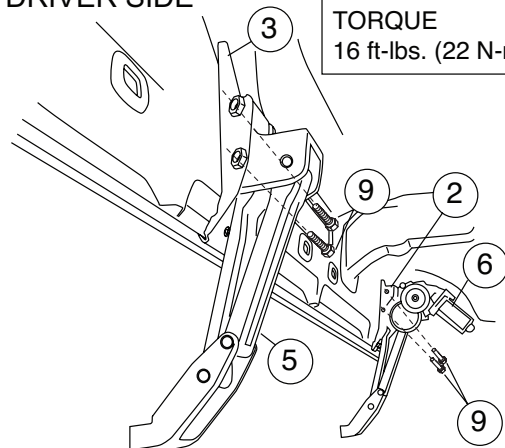


CAUTION: Swing in idler arm can cause pinch point.

9

PASSENGER SIDE

Install rear mounting bracket


TORQUE
16 ft-lbs. (22 N-m)

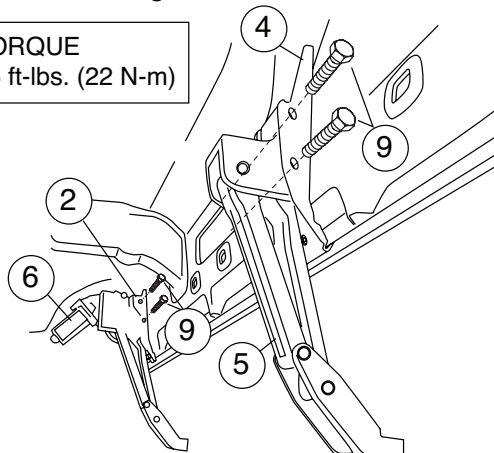

CAUTION: SWING IN IDLER ARM
CAN CAUSE PINCH POINT

10


Mount step extrusion to linkage assemblies.
Fasten loosely to allow for adjustments.

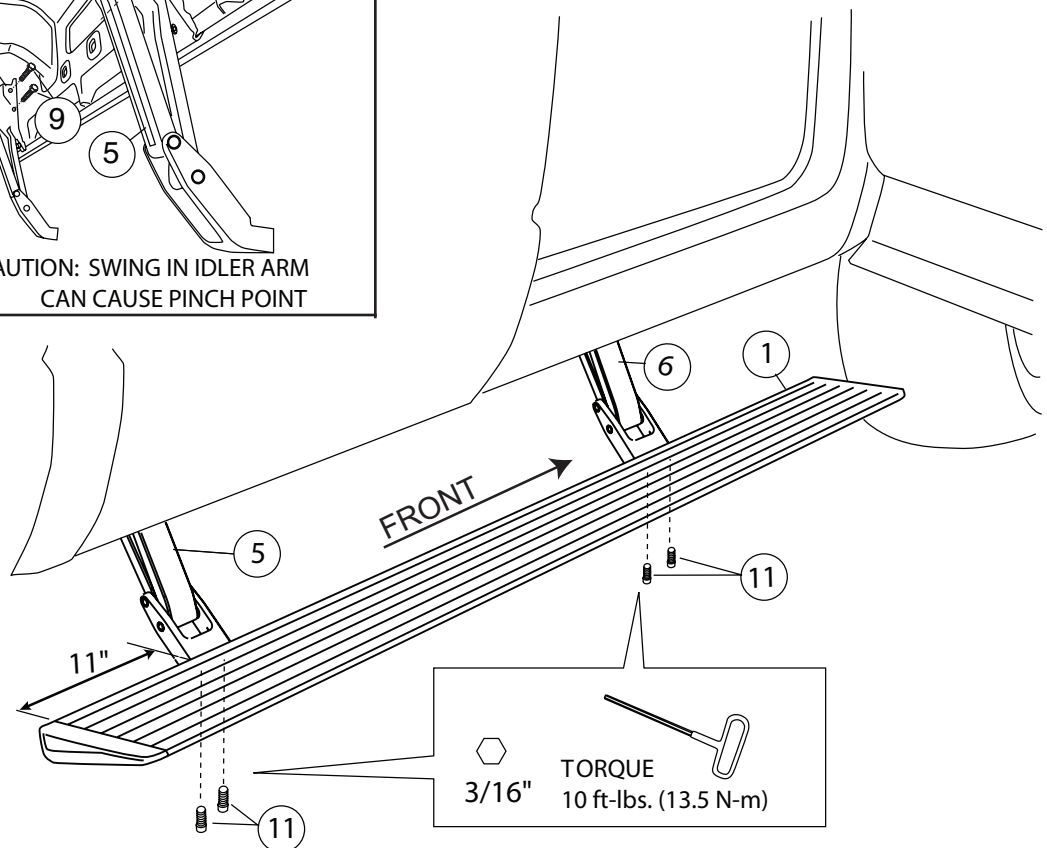


3/16" TORQUE
10 ft-lbs. (13.5 N-m)

11

Attach 11" cable ties loosely around harness.

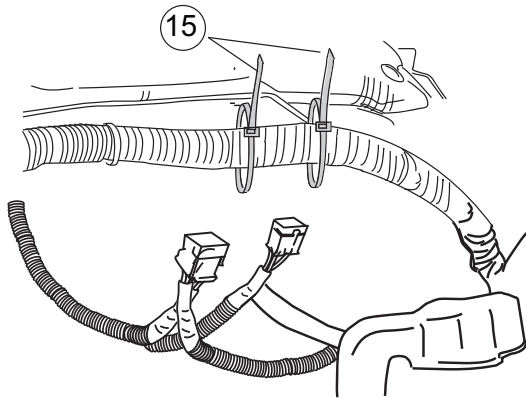


Attach wire harness to the control box. Slide controller through cable ties. Line up cable ties with grooves in controller and tighten.

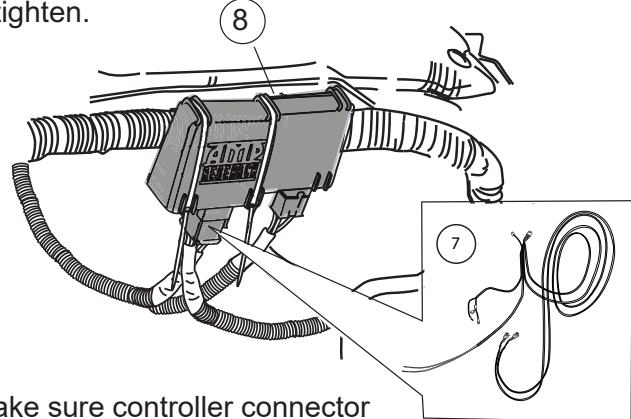


Note: Make sure controller connector locking tabs fully engage.

12

Remove fuse from Power Step wire harness.

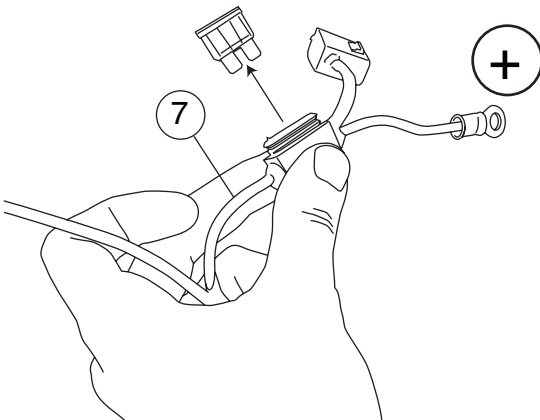


Attach power leads, red lead to positive battery terminal and the black lead to body ground as shown.

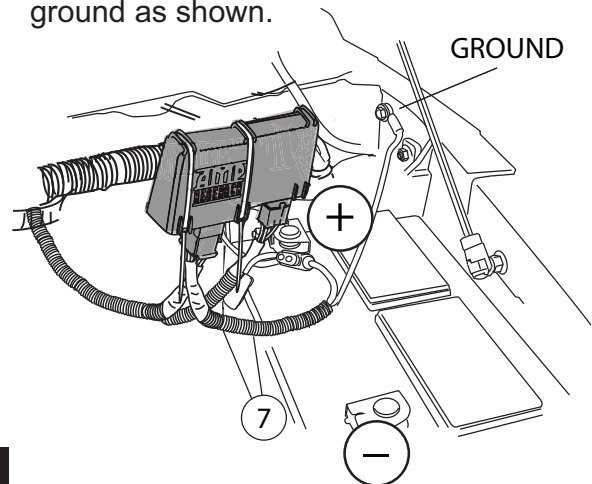


13

14


Route long leg of wire harness to passenger side across fire wall. Secure with tie wraps.

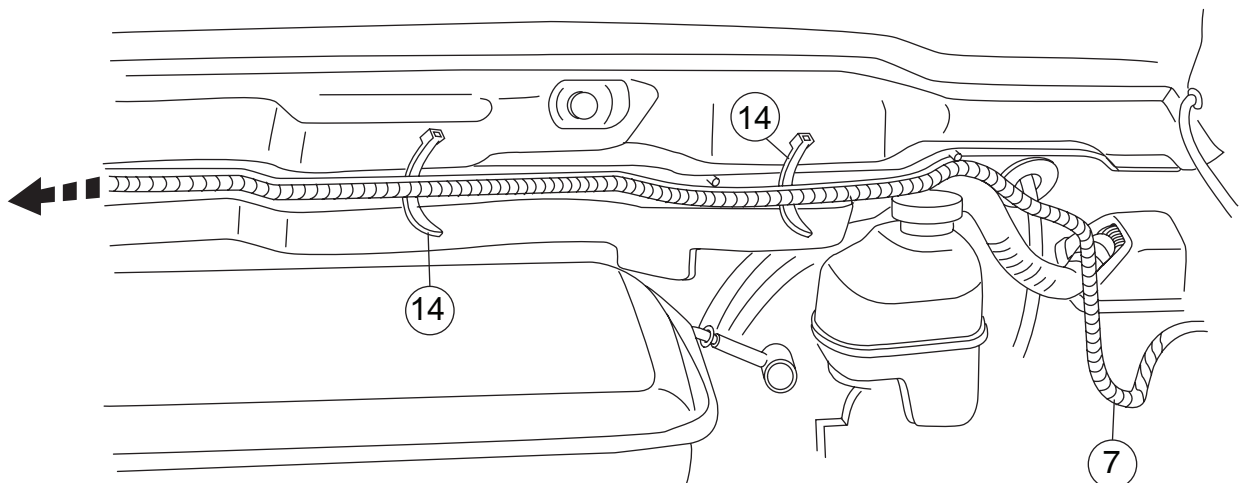


15

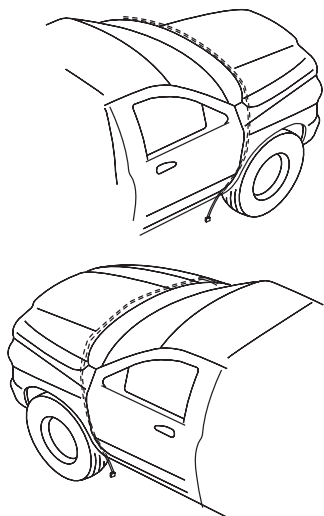


16

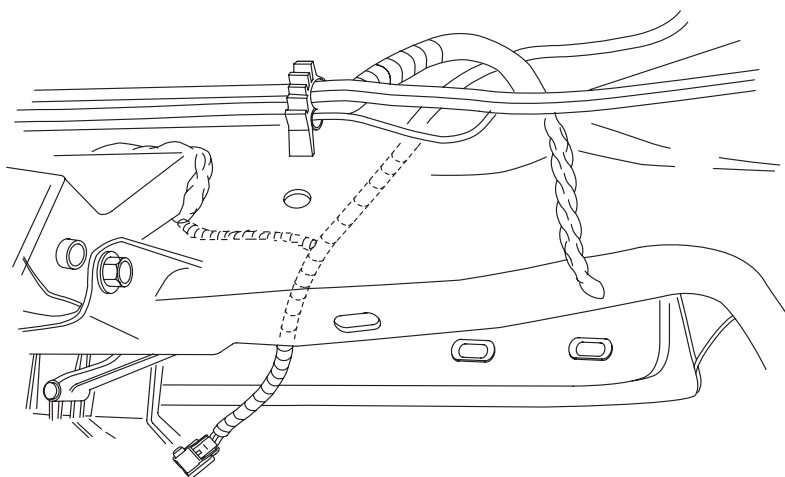

17

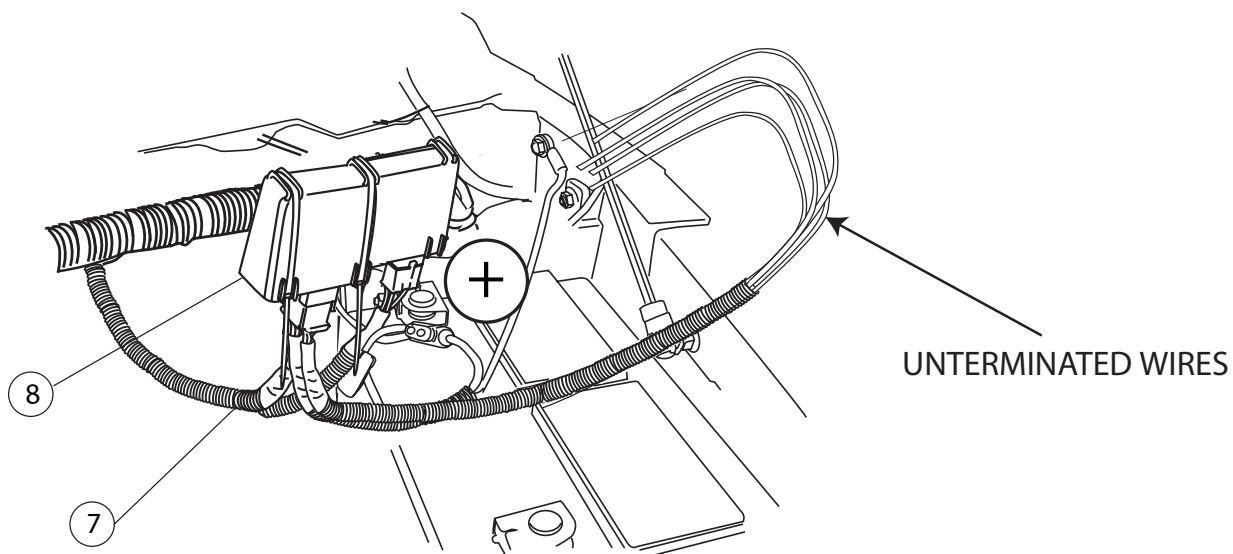


18

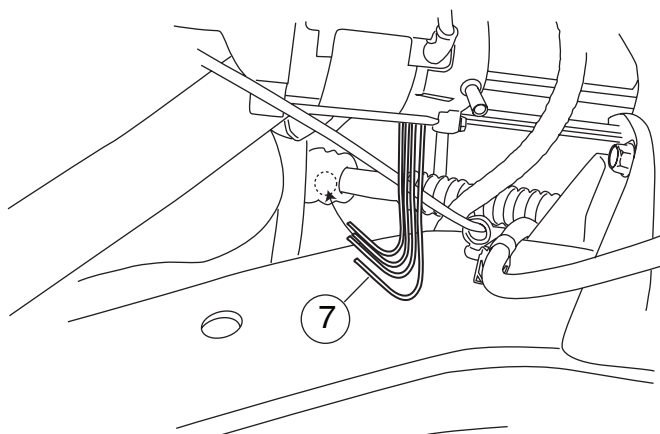


UNDER SIDE OF VEHICLE

19

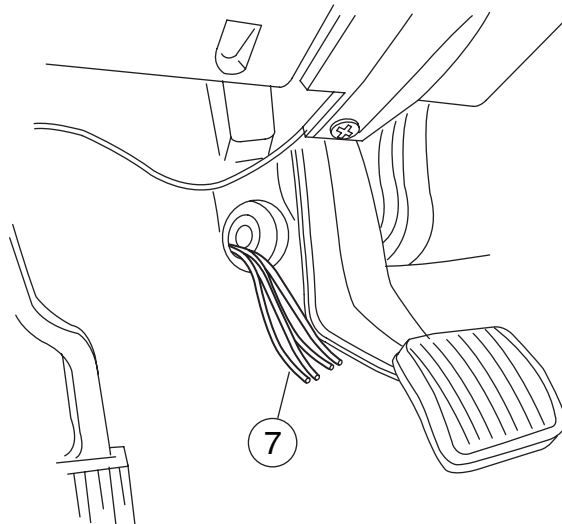


20

Remove plastic panel beneath steering column.

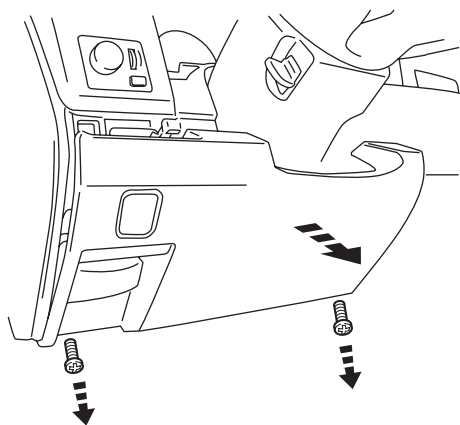

21

Remove metal panel revealed by step 21. Model years 2002-2005 will not have this panel to remove.

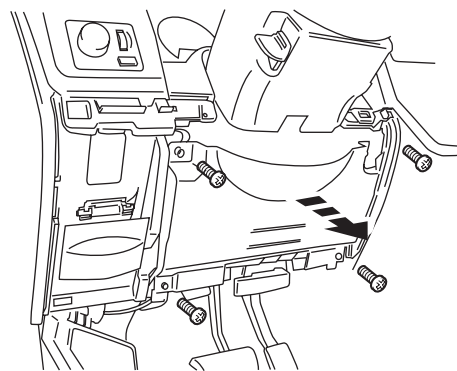


22

For 2006-2009 Models:


Locate bundle of wires high and to the left of diecast steering column mount.

Note: Bundle of wires leads toward back of fuel gauge and is located directly above bundle of wires grounded to left panel.

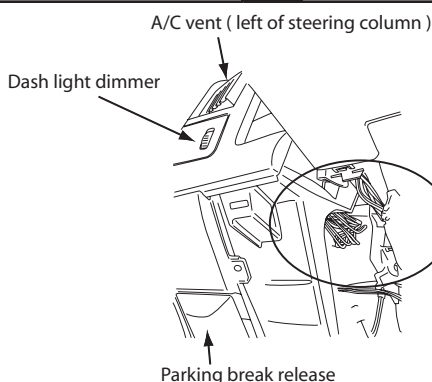





23

Pull wires through and run them up to the wires found in the previous step.

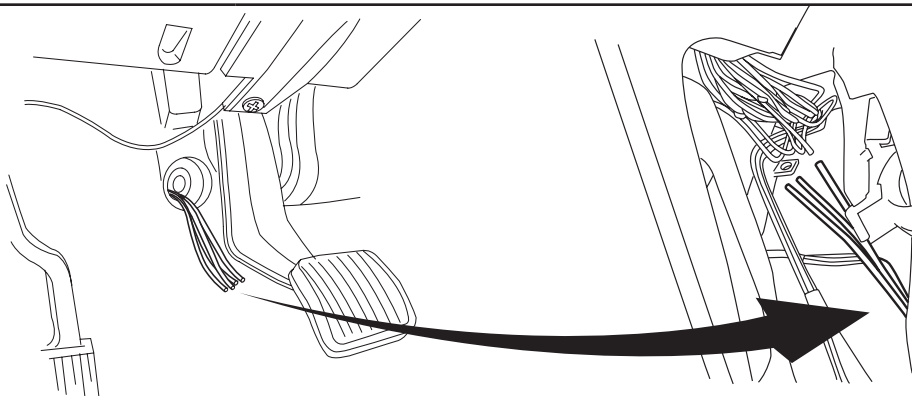

24


For 2002-2005 Models: Remove the cluster and instrument panel to access the grey plug.

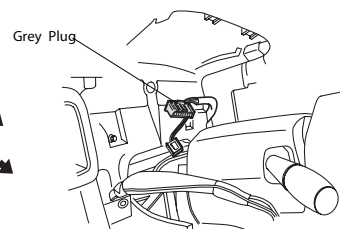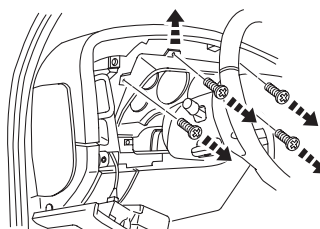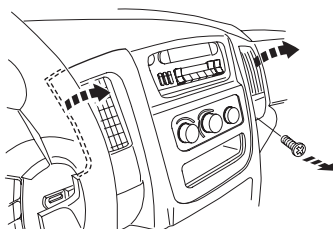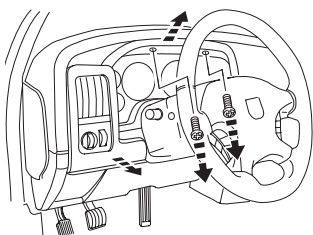

25

Model Years 2004- 2009



Note: You may find two VL/YL wires in bundle. Only one works correctly.

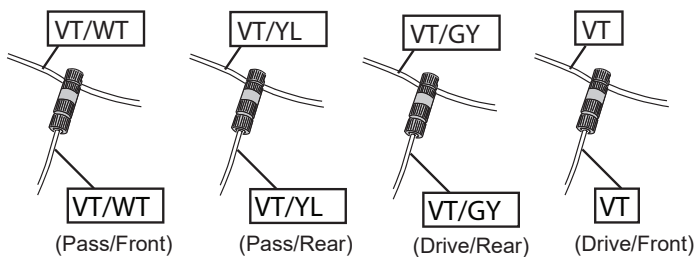


Using supplied Posi-Taps™ splice the Power Step trigger wires into their corresponding door ajar wire. See steps 26 and 27 for wire colors.

26

Model Years 2002- 2003

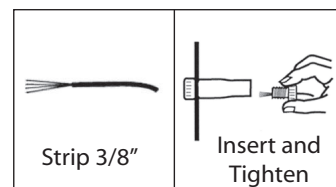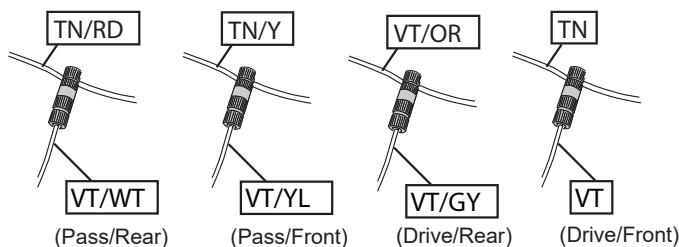


27

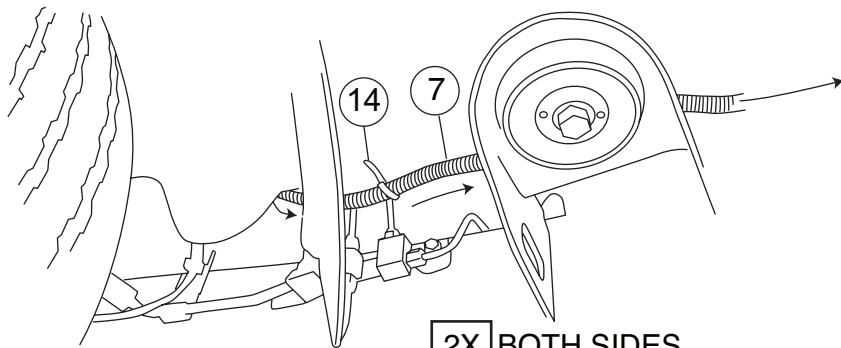


28

REINSTALL FUSE

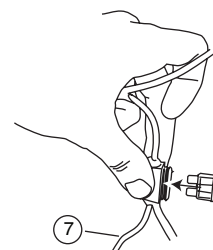


29

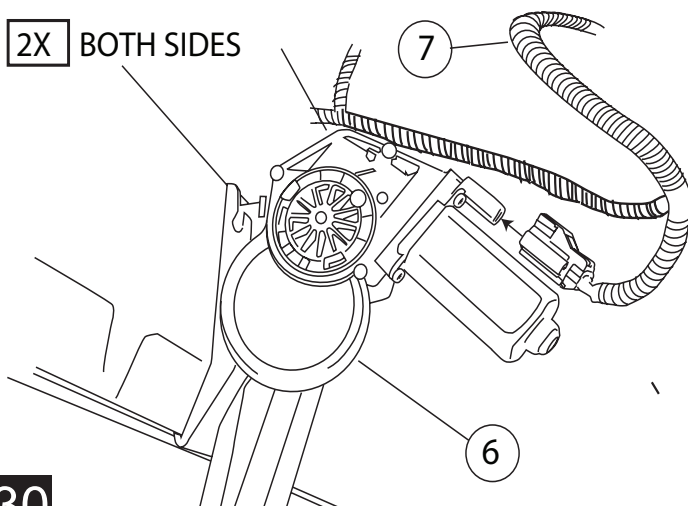


30

On each side of the vehicle measure from the front edge of door line on the pinch weld to the specified lengths below. Measure at 26" for the front LED Light and 58" for the rear LED Light.

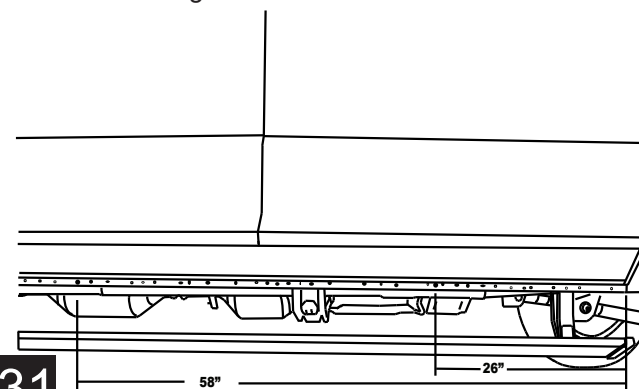


31


Drill a 9/32" hole through the pinch weld at marked locations. Deburr all holes.

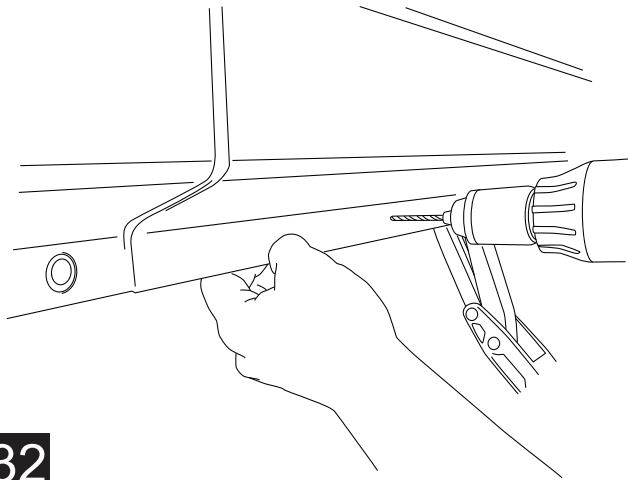


Insert grommet into drilled holes. Insert lamp wires through the grommets.

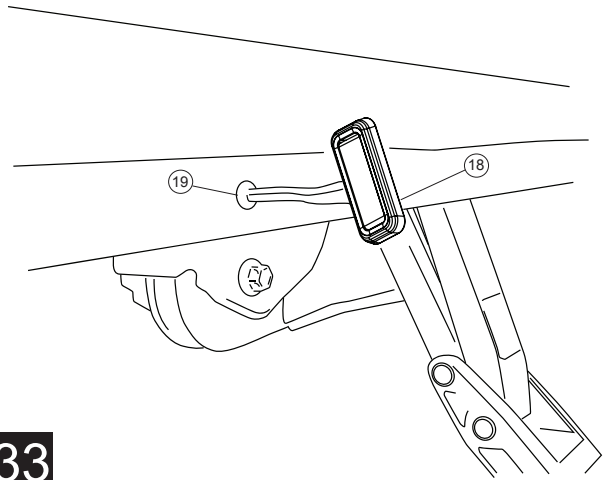


Affix lamp to rocker panel surface. Make sure lamp is affixed to a flat, clean surface.

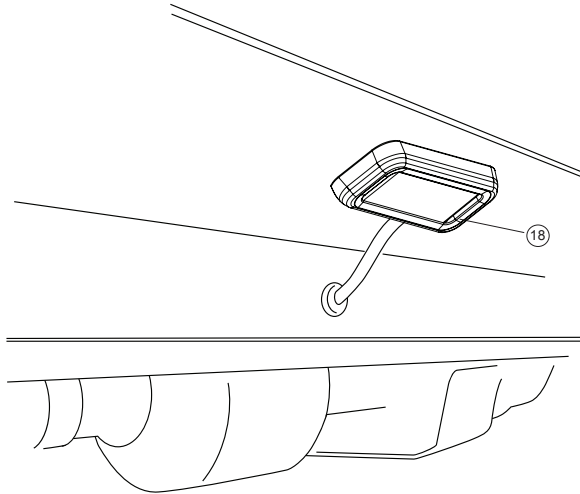


Using supplied butt connectors, connect the lamp wires. Red to Red, Black to Black. Once Crimped use heat gun to shrink tube.

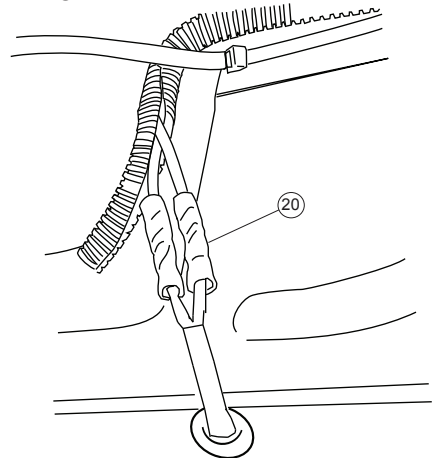


Close and wrap with conduit and electrical tape. Secure all loose wires with cable ties, with lamp wires pulled upward to avoid any wire snagging.

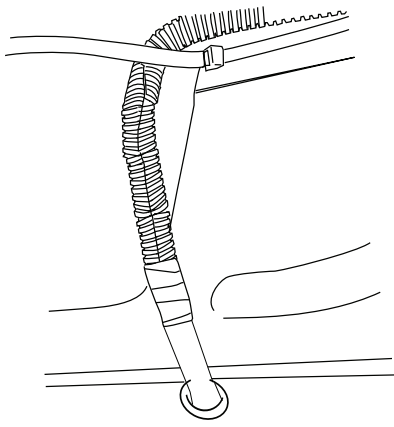

Reinstall fuse.

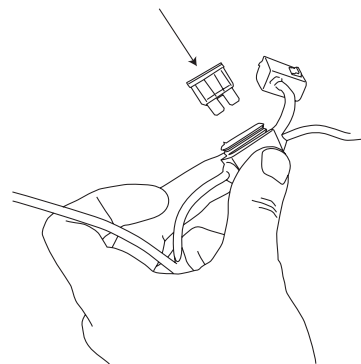

Check that all doors activate the Power Step and the LED Lights work when doors open and close. Reinstall any remaining trim panels.

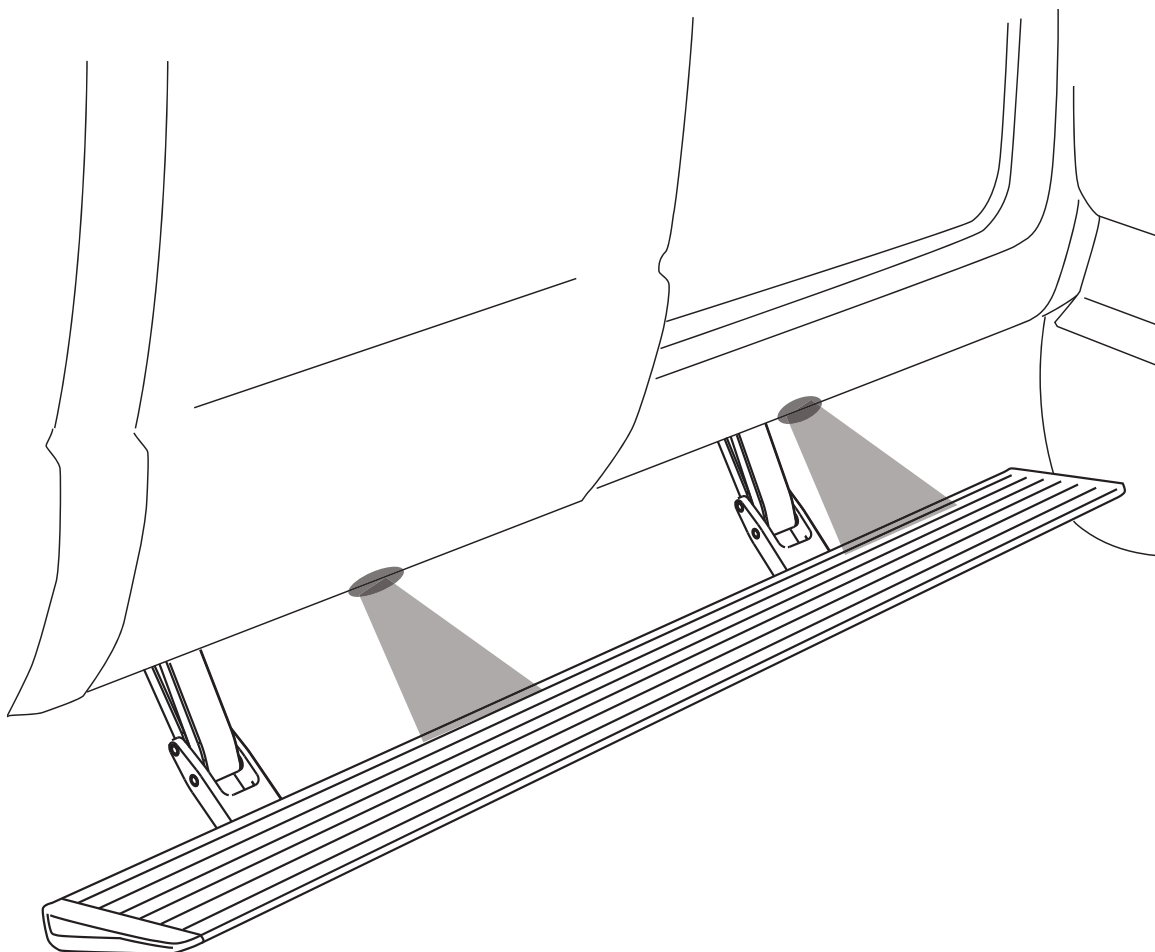

FINAL SYSTEM CHECK

Check that all doors activate the PowerStep and the LED lights work when doors open and close.

NORMAL OPERATION: When the doors open, PowerStep automatically deploys from under the vehicle. When the doors are closed, PowerStep will automatically return to the stowed/retracted position. ***Note that there is a 2-second delay before the PowerStep returns to the stowed/retracted position.***

CORRECT OPERATION OF LIGHTS: All four lamps will illuminate upon opening any door of vehicle. Lamps will stay on until restowing of both Power Steps or until 5 minutes has expired with the doors open. When the lights timeout after 5 minutes, they can be reilluminated by closing and opening any door of vehicle.

Thank you for your recent Realtruck Purchase.

REGISTER YOUR PRODUCT TODAY FOR FASTER SERVICE & PRODUCT UPDATES

Please visit:

<https://realtruck.com/warranty-registration/>
or scan the QR Code



Product Registration Benefits:

- Ensure we have your purchase receipt and product info in our system which is required for warranty.
- Faster and easier access to customer service and tech support in the unlikely event you need warranty or product support.
- Registration helps us keep you up to date on product information and offers.


To view other Realtruck products that may be offered for your vehicle.

Please visit: www.realtruck.com

Congratulations on your purchase of the genuine AMP Research PowerStep!

Here's what you should know...

POWER-DEPLOYABLE RUNNING BOARDS OPERATION: AMP Research PowerStep running boards automatically move when the doors are opened to assist entering and exiting the vehicle.

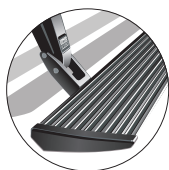

Automatic power deploy:

The running boards will extend down and out when the doors are opened.

Automatic power stow:

The running boards will return to the stowed position when the doors are closed. There will be a 2-second delay before the running boards move to the stowed position.


Automatic stop:

If an object is in the way of the moving running board, the running board will automatically stop. To reset, clear any obstruction, then simply open and close the door to resume normal operation.



Manually set in the deployed (OUT) position for access to the roof:

The running boards can be manually set in the deployed position by firmly holding the step down with your foot while at the same time closing the door. To resume normal operation, open and close the door.

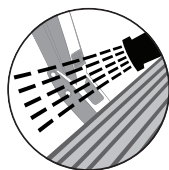

Maintenance: In adverse conditions, debris such as mud, dirt, and salt may become trapped in the running board mechanism, possibly leading to unwanted noise. If this occurs, manually set the running boards to the deployed position and flush the front and rear hinge arms with a high-pressure car wash wand.

Avoid spraying the motors directly. After washing, apply silicone spray lubricant to the hinge pivot pins. Do not apply silicone, wax or protectants like Armor All® to the running board stepping surface.

Caution! Keep hands away when the running board is in motion.

5-YEAR LIMITED WARRANTY

AMP RESEARCH warrants this product to be free from defects in material and workmanship for FIVE (5) YEARS FROM DATE OF PURCHASE, provided there has been normal use and proper maintenance. This warranty applies to the original purchaser only. All remedies under this warranty are limited to the repair replacement of the product itself, or the repair or replacement of any component part thereof, found by the factory to be defective within the time period specified. The decision to repair or replace is wholly within the discretion of the manufacturer.

This warranty specifically excludes labor. If you have a warranty claim, first you must call our factory at the number below for instructions. You must retain proof of purchase and submit a copy with any items returned for warranty work. Upon completion of warranty work, if any, we will return the repaired or replaced item or items to you freight prepaid. Damage to our products caused by accidents, fire, vandalism, negligence, misinstallation, misuse, acts of nature or by defective parts not manufactured by us, is not covered under this warranty.

ANY IMPLIED WARRANTIES OF MERCHANTABILITY AND/OR FITNESS FOR A PARTICULAR PURPOSE CREATED HEREBY ARE LIMITED IN DURATION TO THE SAME DURATION AND SCOPE AS THE EXPRESS WRITTEN WARRANTY. OUR COMPANY SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGE.

Some states do not allow limitations on how long an implied warranty lasts, or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights that vary from state to state.

FOR WARRANTY ISSUES WITH THIS PRODUCT PLEASE CALL REALTRUCK TECH SUPPORT 1-888-983-2204

WARNING

Be sure to read and precisely follow the provided instructions when installing this product. Failure to do so could place the vehicle occupants in a potentially dangerous situation. After installing or reinstalling, re-check to insure that the product is properly installed.